

[Manuals.plus](#) /

> [Briloner](#) /

> Briloner LED Dimmable Ceiling Light with Starry Decor, Model 3367-216 Instruction Manual

Briloner 3367-216

Briloner LED Dimmable Ceiling Light with Starry Decor

Model: 3367-216

1. INTRODUCTION

Thank you for choosing the Briloner LED Dimmable Ceiling Light, Model 3367-216. This modern ceiling light features an elegant starry decor, adjustable light intensity, and customizable color temperature ranging from warm white (3000K) to cool white (6500K). It is designed for indoor use and comes with a remote control for convenient operation. Please read this manual carefully before installation and use to ensure safe and optimal performance.

2. SAFETY INSTRUCTIONS

- Always disconnect the power supply at the main circuit breaker before installation, maintenance, or cleaning.
- Installation should be performed by a qualified electrician if you are unsure.
- This product is designed for indoor use only (IP20 protection class). Do not expose to moisture or extreme temperatures.
- Do not look directly into the LED light source when illuminated.
- Ensure all electrical connections are secure and comply with local regulations.
- Keep the remote control and its batteries out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Briloner LED Dimmable Ceiling Light (Model 3367-216)
- 1 x Remote Control
- Mounting Hardware (screws, wall plugs)
- Instruction Manual

4. INSTALLATION

1. **Prepare for Installation:** Turn off the main power supply to the area where the light will be installed.
2. **Mark Drilling Points:** Hold the mounting bracket of the ceiling light against the ceiling at the desired position. Mark

the drilling points for the screws.

3. **Drill Holes:** Drill holes at the marked points and insert the appropriate wall plugs.
4. **Connect Wiring:** Connect the household electrical wires to the terminal block on the ceiling light. Ensure correct polarity (Live, Neutral, Earth).
5. **Mount the Light:** Secure the ceiling light to the ceiling using the provided screws. Ensure it is firmly attached.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.



Image: Briloner LED Ceiling Light with a diagram showing its dimensions (375mm diameter, 70mm height).

5. OPERATING INSTRUCTIONS

The Briloner LED Ceiling Light is operated using the included remote control.



Image: The Briloner LED Ceiling Light illuminated, with its remote control showing various function buttons.

5.1. Remote Control Functions

- **ON/OFF Buttons:** Press the 'ON' button to turn the light on, and 'OFF' to turn it off.
- **Dimming (Brightness Adjustment):** Use the brightness control buttons (often marked with sun icons or '+' and '-') to increase or decrease the light intensity.
- **Color Temperature Adjustment:** Adjust the light color from warm white (3000K) to cool white (6500K) using the dedicated color temperature buttons (often marked with sun/snowflake icons or 'K+' and 'K-').
- **Nightlight Function:** Activate a low-intensity, warm light setting suitable for night use by pressing the nightlight button (often marked with a moon icon).



Image: The Briloner LED Ceiling Light with graphical indicators for stepless dimming and color temperature adjustment from warm white to cool white.

5.2. Initial Setup and Pairing (if applicable)

Upon first use, the remote control should automatically pair with the light. If the light does not respond to the remote, ensure the remote has fresh AAA batteries installed. If issues persist, try turning the light off at the main switch for 10 seconds, then turn it back on and immediately press and hold the 'ON' button on the remote for 5 seconds until the light blinks, indicating successful pairing.

6. MAINTENANCE

To maintain the appearance and functionality of your Briloner LED Ceiling Light:

- Ensure the power is disconnected before cleaning.
- Wipe the light fixture with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.

- The LED light source is integrated and not user-replaceable.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Remote control batteries are dead. Light not paired with remote.	Check circuit breaker and wall switch. Replace remote control batteries (2x AAA). Refer to Section 5.2 for pairing instructions.
Remote control not responding.	Batteries are dead or incorrectly inserted. Obstruction between remote and light. Light not paired with remote.	Replace batteries and ensure correct polarity. Ensure clear line of sight. Reposition if necessary. Refer to Section 5.2 for pairing instructions.
Light changes color/setting after turning off with wall switch.	The light may not retain the last setting when powered off via a standard wall switch, resetting to a default mode.	Use the remote control to turn the light ON/OFF and adjust settings to ensure the last setting is retained. If using a wall switch, readjust settings with the remote after turning on.

8. SPECIFICATIONS

Feature	Detail
Model Number	3367-216
Brand	Briloner
Dimensions (D x H)	37.5 x 7 cm (14.76 x 2.76 inches)
Weight	662.24 grams (1.46 pounds)
Power Consumption	22 W
Luminous Flux	2200 Lumens
Color Temperature	3000K (Warm White) - 6500K (Cool White)
Voltage	230 Volts
Material	Plastic, Metal
Color	White
Control Method	Remote Control (Infrared)
Protection Class	IP20 (Indoor Use Only)
Energy Efficiency Class	F
Remote Control Batteries	2 x AAA (not included)
Expected Lifespan	Up to 25,000 hours

9. WARRANTY AND SUPPORT

Briloner Leuchten is committed to customer satisfaction. This product typically comes with a 5-year warranty from the date of purchase, as indicated on the product packaging. For any questions, remarks, or issues regarding your Briloner LED Ceiling Light, please contact Briloner customer support. Keep your proof of purchase for warranty claims.

10. PRODUCT OVERVIEW



The Briloner LED Ceiling Light seamlessly integrated into a modern living room setting.



The Briloner LED Ceiling Light providing ambient lighting in a bedroom.



A detailed view of the starry decor effect on the Briloner LED Ceiling Light when illuminated.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07KX1J3W4>

More documents and user manuals: <https://manuals.plus/>