

[Manuals.plus](#) /

› [Haktoys](#) /

› Haktoys HAK125 Remote Control Passenger Bus Model Car Toy Instruction Manual

Haktoys HAK125

Haktoys HAK125 Remote Control Passenger Bus Model Car Toy Instruction Manual

Model: HAK125 | Brand: Haktoys

INTRODUCTION

This manual provides essential instructions for the safe and proper use of your Haktoys HAK125 Remote Control Passenger Bus Model Car Toy. Please read this manual thoroughly before operating the toy and retain it for future reference.

The Haktoys HAK125 is a detailed replica remote control bus designed for entertainment. It features a sturdy structure, realistic design, and functional lights.



Image: The Hakoys HAK125 Remote Control Passenger Bus and its accompanying remote control, shown with product packaging.

SAFETY INFORMATION

Always prioritize safety when operating this remote control toy. Failure to follow these guidelines may result in injury or damage to the product.

- **Age Recommendation:** This product is recommended for ages 3 and above.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Remove batteries if the toy will not be used for an extended period.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - The battery slot is secured with a safety screw. Ensure it is properly fastened after battery installation.

- **Operating Environment:** Operate the bus in open, clear areas, away from obstacles, people, and pets. Avoid operating near water or in wet conditions.
- **Antenna Safety:** The remote control features a flexible antenna designed for safety. Avoid bending or forcing the antenna excessively.

Flexible Antenna for Safety

**Others:
Fragile and poses
safety hazard**



Image: The remote control for the Hakoys HAK125, highlighting its flexible antenna for enhanced safety.

SETUP

The Hakoys HAK125 requires no assembly and is ready to use after battery installation.

1. Battery Installation (Bus)

1. Locate the battery compartment on the underside of the bus.
2. Using a small screwdriver, loosen the safety screw and open the battery compartment cover.
3. Insert 3 x AA batteries (not included) into the compartment, ensuring correct polarity (+ and -).
4. Replace the cover and tighten the safety screw.

2. Battery Installation (Remote Control)

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert 2 x AA batteries (not included) into the compartment, ensuring correct polarity (+ and -).
4. Replace the cover.

OPERATING INSTRUCTIONS

1. Power On/Off

- Turn on the power switch located on the underside of the bus.
- Turn on the power switch on the remote control. The indicator light on the remote should illuminate.
- To turn off, switch off both the remote control and the bus.

2. Driving the Bus

The remote control operates on a 40 Mhz frequency and provides 4-channel control for various movements.

- **Forward/Backward:** Use the left joystick (or designated button) to move the bus forward or backward.
- **Left/Right:** Use the right joystick (or designated button) to steer the bus left or right.
- The bus features RWD (Rear-Wheel Drive) for realistic movement.
- **Lights:** The bus is equipped with functional headlights and reverse lights that activate during operation.

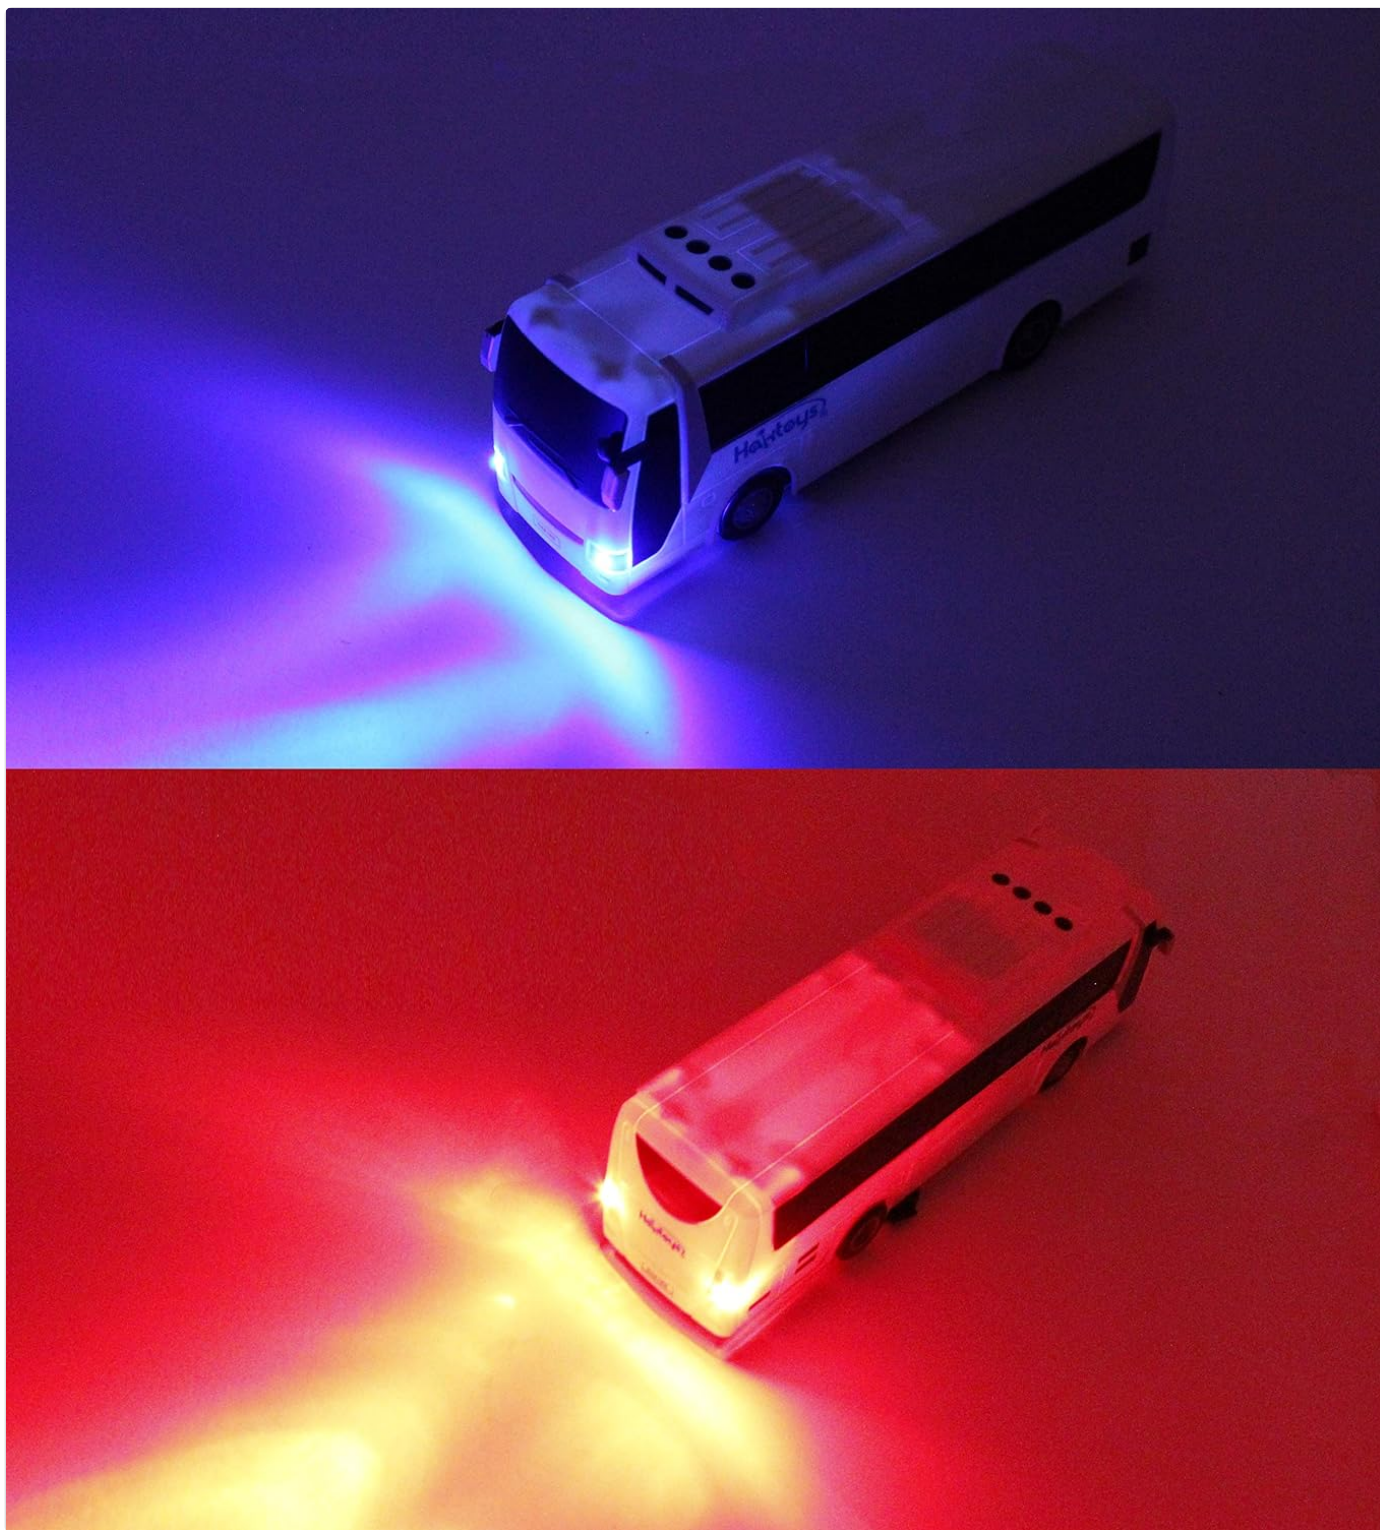 


Image: The Hakoys HAK125 bus demonstrating its illuminated blue headlights and red tail lights in a dark setting.

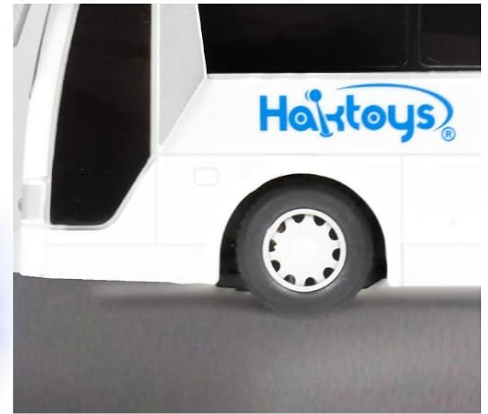 


Image: Detailed views of the Hakoys HAK125 bus, showing its rear lights, front lights, and rubber tires.

3. Adjusting Front Tire Alignment

If the bus does not drive straight, you can adjust the front tire alignment using the trim control on the underside of the bus or on the remote control (if available). Refer to the remote control for specific trim adjustment features.

MAINTENANCE

- **Cleaning:** Wipe the bus and remote control with a soft, dry cloth. Do not use water or chemical cleaners, as this may damage electronic components.
- **Battery Removal:** Always remove batteries from both the bus and the remote control when the toy is not in use for extended periods to prevent leakage and damage.
- **Storage:** Store the toy in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bus does not respond to remote control.	Low or dead batteries in bus or remote. Bus or remote not powered on. Out of range. Interference.	Replace batteries in both bus and remote. Ensure both devices are switched ON. Bring the bus closer to the remote control. Move to an area with less radio interference.
Bus does not drive straight.	Front wheel alignment issue.	Adjust the front tire alignment trim control on the bus or remote control.
Lights are not working.	Low batteries. Bus not powered on.	Replace batteries. Ensure the bus is switched ON.

SPECIFICATIONS

- **Model:** HAK125
- **Brand:** Haktoys
- **Toy Vehicle Form:** Bus
- **Color:** White
- **Dimensions (Bus):** Approximately 22.9 x 7.6 x 8.9 cm (9.0 x 3.0 x 3.5 inches)
- **Weight (Bus):** 408 Grams
- **Age Range:** 3+ years
- **Control Frequency:** 40 Mhz
- **Channels:** 4-Channel
- **Power Source:** Battery Powered
- **Batteries Required (Bus):** 3 x AA (not included)
- **Batteries Required (Remote):** 2 x AA (not included)
- **Drive Type:** Rear-Wheel Drive (RWD)
- **Features:** Headlights, Reverse Light, Rubber Grip Tires, Adjustable Front Tire Alignment
- **Included Components:** 1 x HAK125 Passenger Bus, 1 x 40 Mhz RC Transmitter

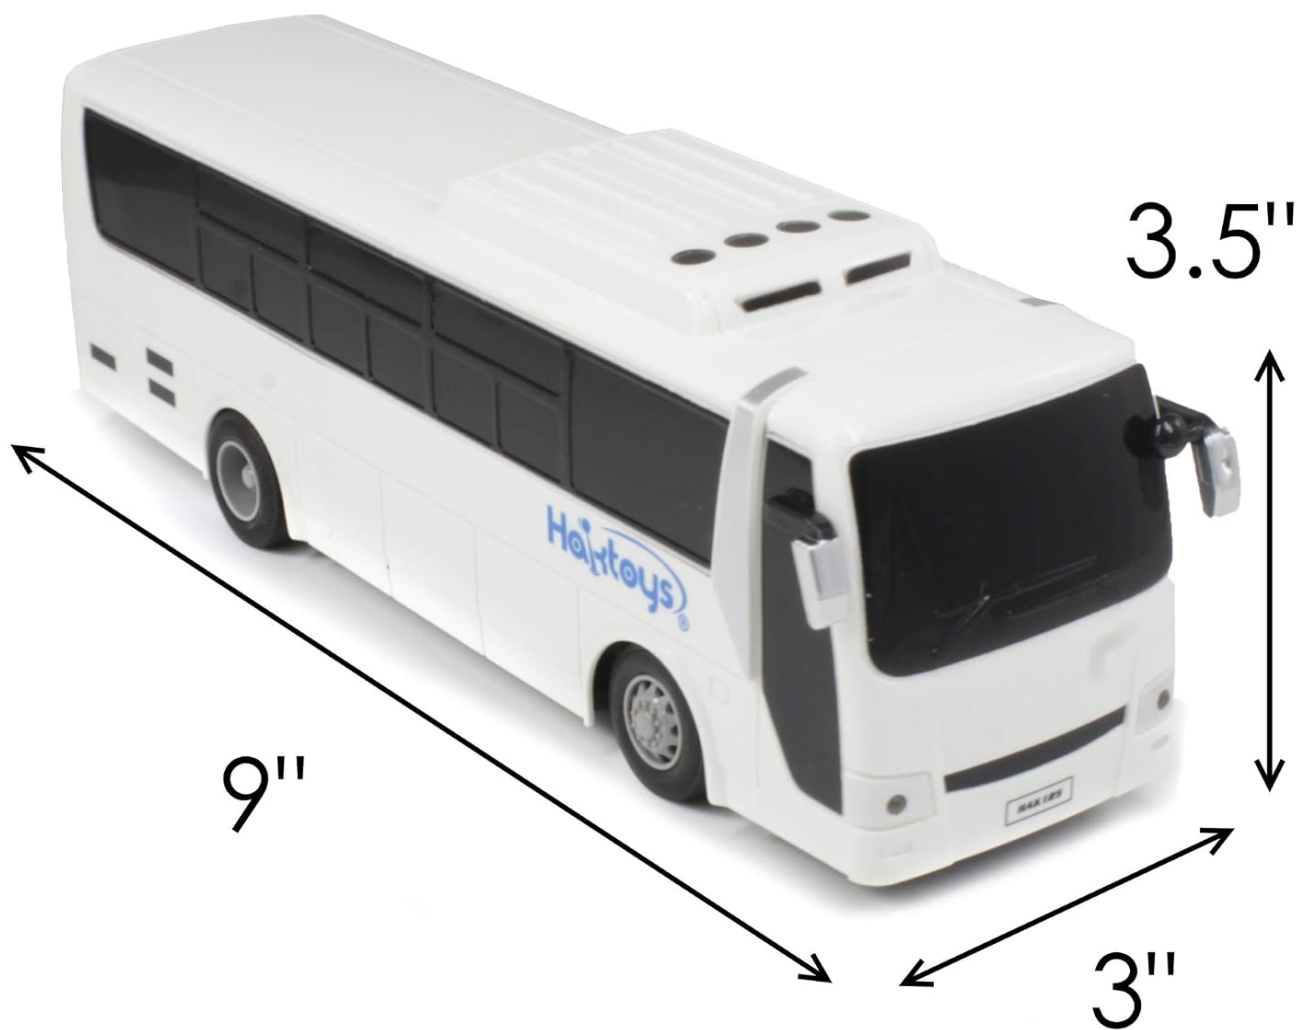 


Image: The Hakoys HAK125 bus with its approximate dimensions (9 inches length, 3 inches width, 3.5 inches height) indicated.

WARRANTY AND SUPPORT

Hakoys is committed to product quality. If you encounter any issues or have questions regarding your HAK125 Remote Control Passenger Bus, please contact Hakoys customer support. While specific warranty details are not provided in this manual, Hakoys aims to ensure customer satisfaction.

For further assistance, please refer to the contact information provided on the product packaging or the official Hakoys website.

© 2024 Hakoys. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question