

[Manuals.plus](#) /

› [Disney Princess](#) /

› Disney Princess Vanity Style Collection Instruction Manual - Model 210401

Disney Princess 210401

Disney Princess Vanity Style Collection Instruction Manual

Model: 210401 | Brand: Disney Princess

INTRODUCTION

The Disney Princess Style Collection Light Up & Style Vanity is designed for imaginative play, allowing children to engage in hairstyling activities. This portable vanity set features a hatbox-style design that opens to reveal a mirror, storage compartments, and realistic play styling tools. The included play flat iron, play curling iron, and play blow dryer offer interactive light and sound features to enhance the play experience. The vanity is designed for portability with a lift-up handle and folding legs, making it suitable for play at home or on the go.

SAFETY INFORMATION

- **WARNING: CHOKING HAZARD - Small Parts.** Not for children under 3 years.
- Suggested for ages 3+.
- Requires 3 x AAA Batteries (not included). Ensure batteries are inserted with correct polarity (+ and -). Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove exhausted batteries from the product.
- Adult supervision is recommended during play.
- Keep hair and loose clothing away from moving parts of the play hair dryer.

WHAT'S IN THE BOX

The Disney Princess Style Collection Light Up and Style Vanity includes the following components:

- 1 x Vanity
- 1 x Play Flat Iron
- 1 x Play Curling Iron
- 1 x Play Hair Dryer
- 1 x Curling Brush
- 1 x Hair Comb
- 1 x Pair of Play Scissors
- 2 x Hair Clips



Image: The vanity is shown open, displaying the full set of play styling tools neatly arranged within its compartments and on the pull-out trays.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the vanity.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert 3 x AAA batteries (not included), ensuring correct polarity.
4. Replace the battery compartment cover and secure it with the screw.

2. Unfolding the Vanity Legs

1. Place the vanity upside down on a flat, stable surface.
2. Gently pull out each of the four folding legs until they click securely into place.
3. Flip the vanity upright. Ensure all legs are stable before use.

Your browser does not support the video tag.

Video: An official product video showcasing the Disney Princess Style Collection Light Up and Style Vanity, demonstrating its features and play patterns.

OPERATING INSTRUCTIONS

1. Opening the Vanity

1. Press the release button located on the front of the vanity to unlock the lid.
2. Gently lift the lid to reveal the mirror and internal compartments.
3. Pull out the two side trays to access additional storage and tool-holding slots.



Image: A vibrant pink vanity set, open to reveal a large oval mirror and two side trays for accessories. The vanity stands on golden-colored folding legs.

2. Using the Play Styling Tools

The play flat iron, play curling iron, and play blow dryer can be plugged into the vanity to activate their realistic light and sound features.

1. Locate the white cord attached to the vanity's base.
2. Plug the end of the cord into the designated port on the desired play styling tool (flat iron, curling iron, or blow dryer).
3. Press the button on the styling tool to activate its light (flat iron, curling iron) or sound (blow dryer) feature.
4. Unplug the tool and plug it into another to switch between accessories.



Image: A young girl is happily styling her hair with the play flat iron, which emits a soft glow, simulating real styling tools.



Image: The play curling iron is connected to the vanity's power port, illuminating its barrel to indicate it's 'on' for play.



Image: The play hair dryer is securely plugged into the vanity, highlighting its readiness for imaginative play with realistic sounds.

MAINTENANCE

- Clean the vanity and accessories with a soft, damp cloth. Do not immerse in water.
- Avoid using harsh chemicals or abrasive cleaners.
- Regularly check for any loose or damaged parts. Discontinue use if damage is found.

STORAGE

The vanity is designed for compact storage and portability:

1. Ensure all accessories are placed back into their designated compartments within the vanity.
2. Fold in the side trays.
3. Close the vanity lid securely until it clicks.
4. To fold the legs, gently push the release mechanism on each leg and fold them inwards until they are flush with the base.
5. Use the integrated handle for easy carrying.



Image: The product box displays the vanity in its compact, closed form, emphasizing its portability and key features like light-up styling tools.

TROUBLESHOOTING

Problem	Solution
Styling tools do not light up or make sound.	Check battery installation in the vanity. Ensure batteries are fresh and correctly inserted. Verify the tool is properly plugged into the vanity's cord.

Problem	Solution
Vanity legs do not stay extended.	Ensure each leg is fully extended and has clicked into its locked position. Apply gentle pressure until secure.
Vanity lid does not close properly.	Check that all accessories are correctly stored within the compartments and side trays are folded in. Ensure no items are obstructing the lid's closure.

SPECIFICATIONS

- **Brand:** Disney Princess
- **Model Number:** 210401
- **UPC:** 192995210400
- **Age Range:** 3 - 7 Years
- **Item Dimensions:** 12.5 x 5.25 x 13.5 inches
- **Item Weight:** 1 Grams
- **Color:** Pink
- **Material Type:** Iron (Note: Product is primarily plastic, 'Iron' may refer to internal components or a general category)
- **Batteries:** 3 x AAA Batteries (not included)

WARRANTY & SUPPORT

For warranty information or product support, please refer to the manufacturer's contact details provided on the product packaging or visit the official Disney Princess website. Keep your purchase receipt for any warranty claims.