

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Remote Control Instruction Manual for Hannspree TVs

Easytry123 Easytry4756

Easytry123 Remote Control Instruction Manual

For Hannspree LCD LED HDTV TV Models: HSG1241, HSG1248, ST19SMAB, ST251MMB, ST286MMG, ST28FMAR, REMCON091

INTRODUCTION

This instruction manual provides essential information for the setup, operation, and maintenance of your Easytry123 replacement remote control. This remote is designed to be compatible with various Hannspree LCD LED HDTV TV models. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your viewing experience.

PRODUCT OVERVIEW

The Easytry123 remote control is a replacement unit for specific Hannspree television models. It features an ergonomic design for comfortable handling and utilizes infrared (IR) technology for communication with your TV. This remote provides standard button controls for common television functions.

Compatible Models:

- Hannspree HSG1241
- Hannspree HSG1248
- Hannspree ST19SMAB
- Hannspree ST251MMB
- Hannspree ST286MMG
- Hannspree ST28FMAR
- Hannspree REMCON091

Note: As a replacement remote, some advanced or unique functions specific to your original TV remote may not be fully supported. The primary functions for channel, volume, power, and input selection are generally compatible.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 1: Rear view of the remote control with the battery cover detached, revealing the battery compartment designed for two AAA batteries.



Image 2: Angled perspective of the remote control's back, showing the open battery compartment ready for two AAA batteries.

After installing the batteries, the remote control is ready for use. No programming or pairing is typically required for this infrared replacement remote.

OPERATING INSTRUCTIONS

To operate your Hannspree TV with this remote control, ensure there is a clear line of sight between the remote's infrared emitter (located at the front of the remote) and the TV's IR receiver. Point the remote directly at the television.

The buttons on the remote control correspond to standard television functions such as:

- **Power:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the audio level.
- **Channel Up/Down:** Changes TV channels.
- **Number Pad:** Direct channel entry.
- **Input/Source:** Selects different video input sources (HDMI, AV, etc.).
- **Menu:** Accesses the TV's on-screen menu.
- **Navigation Buttons (Up/Down/Left/Right/OK):** For navigating menus.

Refer to your Hannspree TV's original user manual for specific functions and menu navigation details, as this replacement remote mimics the original's basic commands.

MAINTENANCE

Battery Replacement

Replace the batteries when the remote control's performance degrades or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's IR receiver.
 - Make sure you are pointing the remote directly at the TV.
- **Limited functionality:**
 - This replacement remote is designed for basic TV functions. Some advanced features or smart TV functions of your original remote may not be supported.
 - Verify that your TV model is listed as compatible in the "Product Overview" section.

SPECIFICATIONS

Model Number	Easytry4756
Brand	Easytry123

Compatible Devices	Hannsree LCD LED HDTV Televisions
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic
Batteries Required	2 x AAA (not included)

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Easytry123 remote control, please contact the seller directly through your purchase platform. Keep your purchase receipt or order details handy for faster assistance.