

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VOUNOT](#) /

> [VOUNOT 6-Wheel Foldable Shopping Cart with Seat and 40L Thermal Bag Instruction Manual](#)

VOUNOT 2920551186532

VOUNOT 6-Wheel Foldable Shopping Cart with Seat and 40L Thermal Bag

Model: 2920551186532

INTRODUCTION

Thank you for choosing the VOUNOT 6-Wheel Foldable Shopping Cart. This versatile cart is designed to simplify your shopping experience, offering features like easy stair climbing, a comfortable foldable seat, and a spacious thermal bag. Please read this manual carefully to ensure proper assembly, operation, and maintenance of your new shopping cart.



Overview of the VOUNOT 6-Wheel Foldable Shopping Cart, highlighting its key features such as the comfortable handle, thermal bag, detachable backpack, and stair-climbing wheels.

PRODUCT FEATURES

- **Stair Climbing Design:** Equipped with a unique six-wheel system (three wheels on each side) for effortless navigation up and down stairs.

- **Foldable Seat:** An integrated, foldable seat provides a convenient resting spot, supporting up to 80 kg.
- **40L Thermal Bag:** A spacious, waterproof bag with an insulated lining to keep your groceries at desired temperatures.
- **Durable Construction:** High-quality metal frame supports up to 30 kg of cargo. Wheels are designed for durability and quiet operation.
- **Detachable Backpack:** The shopping bag can be easily detached and used as a standalone backpack, ideal for picnics or other outings.



This image illustrates the multiple uses of the VOUNOT shopping cart, including its function as a thermal bag, a stair-climbing cart, a folding seat, and a detachable backpack.

SETUP INSTRUCTIONS

1. **Unfold the Frame:** Carefully pull the handle upwards and extend the base of the cart until the frame locks into place. Ensure all joints are securely engaged.
2. **Attach the Shopping Bag:** Slide the thermal shopping bag onto the cart frame. Secure it using any integrated straps or fasteners provided.
3. **Deploy the Seat (Optional):** If your model includes a seat, unfold it from its stored position until it clicks into place. Ensure it is stable before use.



Visual representation of the cart's advantages, including the thermal bag, waterproof fabric, pivot wheels, and folding frame, which aids in setup and storage.

OPERATING INSTRUCTIONS

Using the Stair-Climbing Wheels

To ascend or descend stairs, tilt the cart slightly backward to engage the three-wheel cluster. The wheels will rotate to smoothly roll over each step. Maintain a firm grip on the handle and proceed slowly and carefully.



This image shows the cart being pulled up stairs, illustrating how the six-wheel design facilitates easy stair climbing.

Using the Foldable Seat

To use the seat, ensure the cart is on a flat, stable surface. Unfold the seat until it locks securely. Sit gently and ensure your weight does not exceed 80 kg. To fold, release the locking mechanism and collapse the seat back into its stored position.



A user demonstrating the foldable seat feature, highlighting its convenience for resting during shopping trips.

Using the Thermal Bag and Backpack Function

Place temperature-sensitive items inside the insulated bag. The 40L capacity allows for ample storage. To use as a backpack, detach the bag from the frame and utilize the shoulder straps. The bag also features side and front pockets for additional storage.



This image displays the 40L thermal bag's capacity and its functionality as a practical backpack, complete with side and front pockets.

MAINTENANCE

- **Cleaning the Bag:** The waterproof fabric of the bag can be wiped clean with a damp cloth and mild soap. Do not machine wash or tumble dry.
- **Frame and Wheels:** Periodically check the metal frame for any signs of damage or loose connections. Clean the wheels to remove dirt and debris that may affect their smooth operation. A small amount of lubricant can be applied to the wheel axles if they become stiff or noisy.
- **Storage:** When not in use, fold the cart for compact storage. Store in a dry place away from direct sunlight to prolong its lifespan.

TROUBLESHOOTING

- **Cart is difficult to push when loaded:** Ensure the cart is not overloaded beyond its 30 kg capacity. For heavy loads, it may be easier to tilt the cart and pull it rather than push.
- **Wheels are noisy:** This can be caused by dirt or lack of lubrication. Clean the wheels and apply a small amount of silicone-based lubricant to the axles.
- **Seat feels unstable:** Ensure the seat is fully unfolded and locked into position before sitting. Do not exceed the 80 kg weight limit.

SPECIFICATIONS

Model Number	2920551186532
Dimensions (Unfolded)	104 cm (Height) x 43 cm (Width) x 59 cm (Depth)
Dimensions (Folded)	104 cm (Height) x 43 cm (Width) x 25 cm (Depth)
Weight	3.49 kg
Frame Material	Metal
Bag Capacity	40 Liters
Cart Load Capacity	30 kg
Seat Load Capacity	80 kg
Special Features	Foldable, 6-wheel stair climbing, Thermal bag, Detachable backpack, Integrated seat



Detailed dimensions of the shopping cart, showing its size when unfolded and compactly folded for storage.

WARRANTY AND SUPPORT

VOUNOT products are manufactured to high-quality standards. For any questions regarding your product, or if you require technical assistance, please contact VOUNOT customer support through your retailer or the official VOUNOT website. Please retain your proof of purchase for warranty claims.