Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Lenco /
- > Lenco KCR-11 PLL FM Kitchen Radio User Manual

Lenco KCR-11

Lenco KCR-11 PLL FM Kitchen Radio User Manual

1. Introduction

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your Lenco KCR-11 PLL FM Kitchen Radio. Please read this manual thoroughly before using the device to ensure proper function and safety. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure the power cord is not pinched or walked on.
- Do not open the casing. Refer all servicing to qualified service personnel.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- · Clean only with a dry cloth.
- · Unplug this apparatus during lightning storms or when unused for long periods of time.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Lenco KCR-11 PLL FM Kitchen Radio
- Mounting Kit (screws, spacers, wall plugs for under-cabinet installation)
- AC Power Cable
- User Manual (this document)

4. PRODUCT OVERVIEW

The Lenco KCR-11 features a clear LED display and intuitive controls for easy operation.



Figure 4.1: Front view of the Lenco KCR-11 Kitchen Radio.

4.1 Front Panel Controls and Display



Figure 4.2: Left side controls including Power, Light Switch, and Memory Presets 1-3.

- Power Button (): Turns the radio on or off.
- Light Switch (OFF/ON): Controls the integrated LED lighting.
- Memory Preset Buttons (1-5): Store and recall your favorite FM radio stations.



Figure 4.3: Right side controls including Volume, Scan, Time/Memory functions.

- Volume Buttons (+/-): Adjust the audio output level.
- SCAN (ST/MONO): Automatically scans for FM stations. Press and hold for stereo/mono toggle.
- MIN / SEC: Used for setting the clock and timer functions.
- **MEM**: Used to store radio stations into memory presets.
- TIMER: Activates or deactivates the timer function.
- CLOCK SET: Initiates the clock setting mode.

4.2 Rear Panel



Figure 4.4: Rear view showing power input and integrated antenna.

- Power Input: Connect the supplied AC power cable here.
- Integrated FM Antenna: A wire antenna for FM reception. Extend it fully for best reception.

5. SETUP

5.1 Mounting the Radio

The Lenco KCR-11 is designed for under-cabinet mounting. Use the provided mounting kit for installation.

- 1. Choose a suitable location under a cabinet, ensuring sufficient space for the radio and access to a power outlet.
- 2. Use the mounting template (if provided, otherwise measure carefully) to mark the screw positions on the underside of the cabinet.
- 3. Drill pilot holes at the marked positions.
- 4. Insert the plastic spacers (if applicable) and then secure the radio to the cabinet using the supplied screws. Ensure the radio is firmly attached.

5.2 Power Connection

- 1. Connect the AC power cable to the power input on the rear of the radio.
- 2. Plug the other end of the power cable into a standard wall outlet.
- 3. Extend the integrated FM antenna wire for optimal radio reception.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **Power** button () to turn the radio on or off.

6.2 Setting the Clock

- 1. With the radio powered on, press and hold the CLOCK SET button until the time display flashes.
- 2. Use the MIN and SEC buttons to adjust the hours and minutes respectively.
- 3. Press CLOCK SET again to confirm and exit the clock setting mode.

6.3 Tuning FM Radio

Automatic Scan:

Press the **SCAN** button. The radio will automatically scan for available FM stations and stop at the next strong signal.

Manual Tuning:

Use the MIN and SEC buttons to fine-tune the frequency step by step.

Stereo/Mono Mode:

Press and hold the **SCAN (ST/MONO)** button to toggle between stereo and mono reception. Mono reception can improve clarity for weak signals.

6.4 Saving and Recalling Presets

To Save a Station:

- 1. Tune to the desired FM station.
- 2. Press the **MEM** button. The display will show a flashing preset number (e.g., P1).
- 3. Press one of the Memory Preset Buttons (1-5) to save the station to that preset number.

To Recall a Station:

Simply press the corresponding **Memory Preset Button (1-5)** to instantly tune to the saved station.

6.5 Using the Timer Function

- 1. Press the **TIMER** button. The timer display will flash.
- 2. Use the MIN and SEC buttons to set the desired countdown time.
- 3. Press **TIMER** again to start the countdown. The radio will turn off automatically when the timer reaches zero.
- 4. To cancel the timer, press **TIMER** during the countdown.

6.6 Adjusting Volume

Press the Volume + button to increase the volume or the Volume - button to decrease it.

6.7 LED Light

Slide the Light Switch (OFF/ON) to turn the integrated LED lighting on or off.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the radio from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

7.2 General Care

- Keep the unit away from direct sunlight, extreme temperatures, and high humidity.
- Ensure proper ventilation around the unit.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------|--|--|
| No power | Power cable not connected or outlet not working. | Check power cable connection. Try a different power outlet. |
| Poor FM reception | Antenna not extended or local interference. | Fully extend the FM antenna wire. Try repositioning the antenna or the radio. Switch to mono mode if signal is weak. |
| Clock not setting | Incorrect button sequence. | Refer to section 6.2 for correct clock setting procedure. Ensure CLOCK SET is pressed and held. |
| Buttons unresponsive | Temporary software glitch. | Unplug the radio from the power outlet for a few minutes, then plug it back in. |

9. SPECIFICATIONS

• Model: KCR-11

• Display: 0.9" White LED

• Radio Type: PLL FM

• Memory Presets: 5

• Output Power: 2 x 1W RMS

• Special Features: LED lighting, Clock, Timer

• Connectivity: Auxiliary (Aux-in)

• Dimensions (L x W x H): 24 cm x 22.5 cm x 6.2 cm

Power Source: AC AdapterSupported Radio Bands: FM


10. WARRANTY AND SUPPORT

Lenco products are manufactured to high quality standards. In the unlikely event of a defect, your product is covered by the manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Lenco website for detailed warranty terms and conditions.

For technical support or service inquiries, please contact Lenco customer service through their official website or the contact information provided in your product documentation.

© 2023 Lenco. All rights reserved.

Related Documents - KCR-11

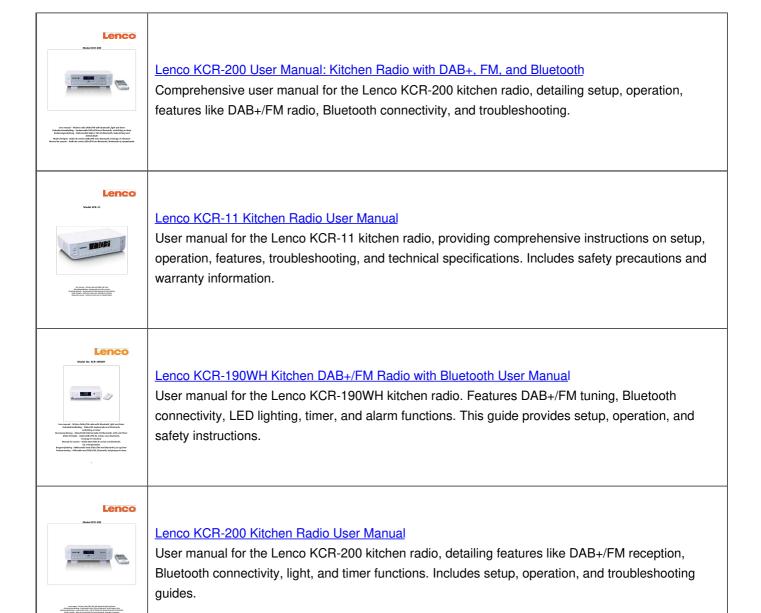



Lenco CR-18 PLL FM Alarm Clock Radio User Manual

User manual for the Lenco CR-18 PLL FM Alarm Clock Radio. Learn how to set the time, alarms, operate the FM radio, use the sleep timer, and adjust brightness. Features a 1.8-inch LED display and a white finish.



Lenco L-3808 Direct Drive Turntable with USB Recording User Manual

Comprehensive user manual for the Lenco L-3808 direct drive turntable. Learn about setup, operation, features like USB recording, safety precautions, and maintenance for your Lenco turntable.