

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Sonic The Hedgehog](#) /
- › Sonic The Hedgehog Tornado Biplane Play Set Instruction Manual

Sonic The Hedgehog 423284-1

Sonic The Hedgehog Tornado Biplane Play Set Instruction Manual

Model: 423284-1

PRODUCT OVERVIEW

Travel to the exciting world of Sonic with the Tornado Biplane Play Set! This interactive toy brings the classic video game experience to life. Activate iconic Sonic video game music with the push of a button. Experience dynamic motion with a motorized rotating fan and a light-up flame, each accompanied by authentic sound effects. The biplane also features realistic flying sounds as it sways left and right, and free-moving wheels for ground play. With a total of 6 distinct sound effects, this set offers immersive play. The Tornado Biplane includes a 6cm Sonic figure, and its wings are designed with pegs to attach additional characters, allowing for endless creative play scenarios.



Image: The Sonic The Hedgehog Tornado Biplane Play Set, featuring the red biplane with grey wings and a clear propeller, alongside a 6cm Sonic figure.

SAFETY INFORMATION

- **Small Parts:** This product contains small parts and poses a choking hazard. Not suitable for children under 3 years.
- **Packaging:** Remove and dispose of all packaging materials properly before giving the toy to a child.
- **Variations:** Colors and decorations of the product may vary from those shown.
- **Batteries:** Batteries are required for operation. Ensure correct battery installation.
- **Adult Supervision:** Adult supervision is required during play to ensure safety.

SETUP

Battery Installation

The Sonic The Hedgehog Tornado Biplane Play Set requires 3 AAA batteries for its electronic features. These batteries are included with the product.

1. Locate the battery compartment on the underside of the biplane.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Assembly

No assembly is required for the main biplane unit. The Sonic figure is separate and can be placed in the cockpit or on the wing pegs.



Image: The Sonic figure positioned in the biplane's cockpit, ready for flight.

OPERATING INSTRUCTIONS

The Tornado Biplane Play Set offers several interactive features for dynamic play:

- **Activate Music and Sounds:** Press the button located on the biplane to activate classic Sonic video game music and various sound effects.
- **Motorized Propeller and Light-Up Flame:** The biplane features a motorized rotating fan and a light-up flame at the rear. These activate with accompanying sound effects, enhancing the play experience.
- **Dynamic Flying Sounds:** Tilt the biplane left and right during play to trigger realistic flying sounds, simulating aerial maneuvers.
- **Free-Moving Wheels:** The biplane is equipped with free-moving wheels, allowing for ground-based play and easy movement across surfaces.
- **Sonic Figure Interaction:** Place the included 6cm Sonic figure in the cockpit or attach other compatible Sonic figures to the pegs on the wings for expanded play scenarios.



Image: Sonic figure demonstrating placement on the biplane's top wing.

MAINTENANCE

- **Cleaning:** Wipe the toy with a damp cloth to clean. Do not immerse in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **No Sound/Lights/Motion:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure the power switch (if any) is in the "ON" position.
- **Propeller Not Spinning:**
 - Ensure there are no obstructions around the propeller.
 - Check battery power as described above.

SPECIFICATIONS

Model Number	423284-1
Brand	Sonic The Hedgehog (Jakks Pacific)
Product Dimensions	35.05 x 13.34 x 38.1 cm
Weight	1.27 kg
Material	Plastic

Color	Red
Batteries Required	Yes, 3 x AAA (Included)
Assembly Required	No
Recommended Age	7 years and up
ASIN	B07KXR16M3

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Details are typically provided on the product packaging or the manufacturer's official online resources.

Manufacturer: Jakks Pacific

Please retain your purchase receipt as proof of purchase for any warranty claims.

© 2025 Sonic The Hedgehog. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.