

PIX-LINK LV-WR07

PIX-LINK LV-WR07 Wireless Router User Manual

Model: LV-WR07

1. INTRODUCTION

Thank you for choosing the PIX-LINK LV-WR07 Wireless Router. This device is designed to provide a high-speed wireless network connection for your home or small office. With 300Mbps wireless speed and two external antennas, it ensures stable and wide-ranging Wi-Fi coverage. This manual will guide you through the setup, operation, and maintenance of your new router.



Image 1.1: The PIX-LINK LV-WR07 Wireless Router, showcasing its compact design and two external antennas.

2. PRODUCT FEATURES

- **High-Speed Wireless:** Up to 300Mbps data transmission rate, ideal for smooth HD streaming, online gaming, and fast web browsing.
- **Enhanced Coverage:** Equipped with two external antennas to ensure a strong and stable Wi-Fi signal across your space.
- **Multiple Ports:** Features 5 LAN ports for reliable wired connections to devices like desktop computers, smart TVs, and gaming consoles.
- **WPS Functionality:** Supports Wi-Fi Protected Setup (WPS) for easy and secure wireless connection setup.
- **Broad Compatibility:** Connects seamlessly with various devices including gaming consoles, tablets, and smart televisions.

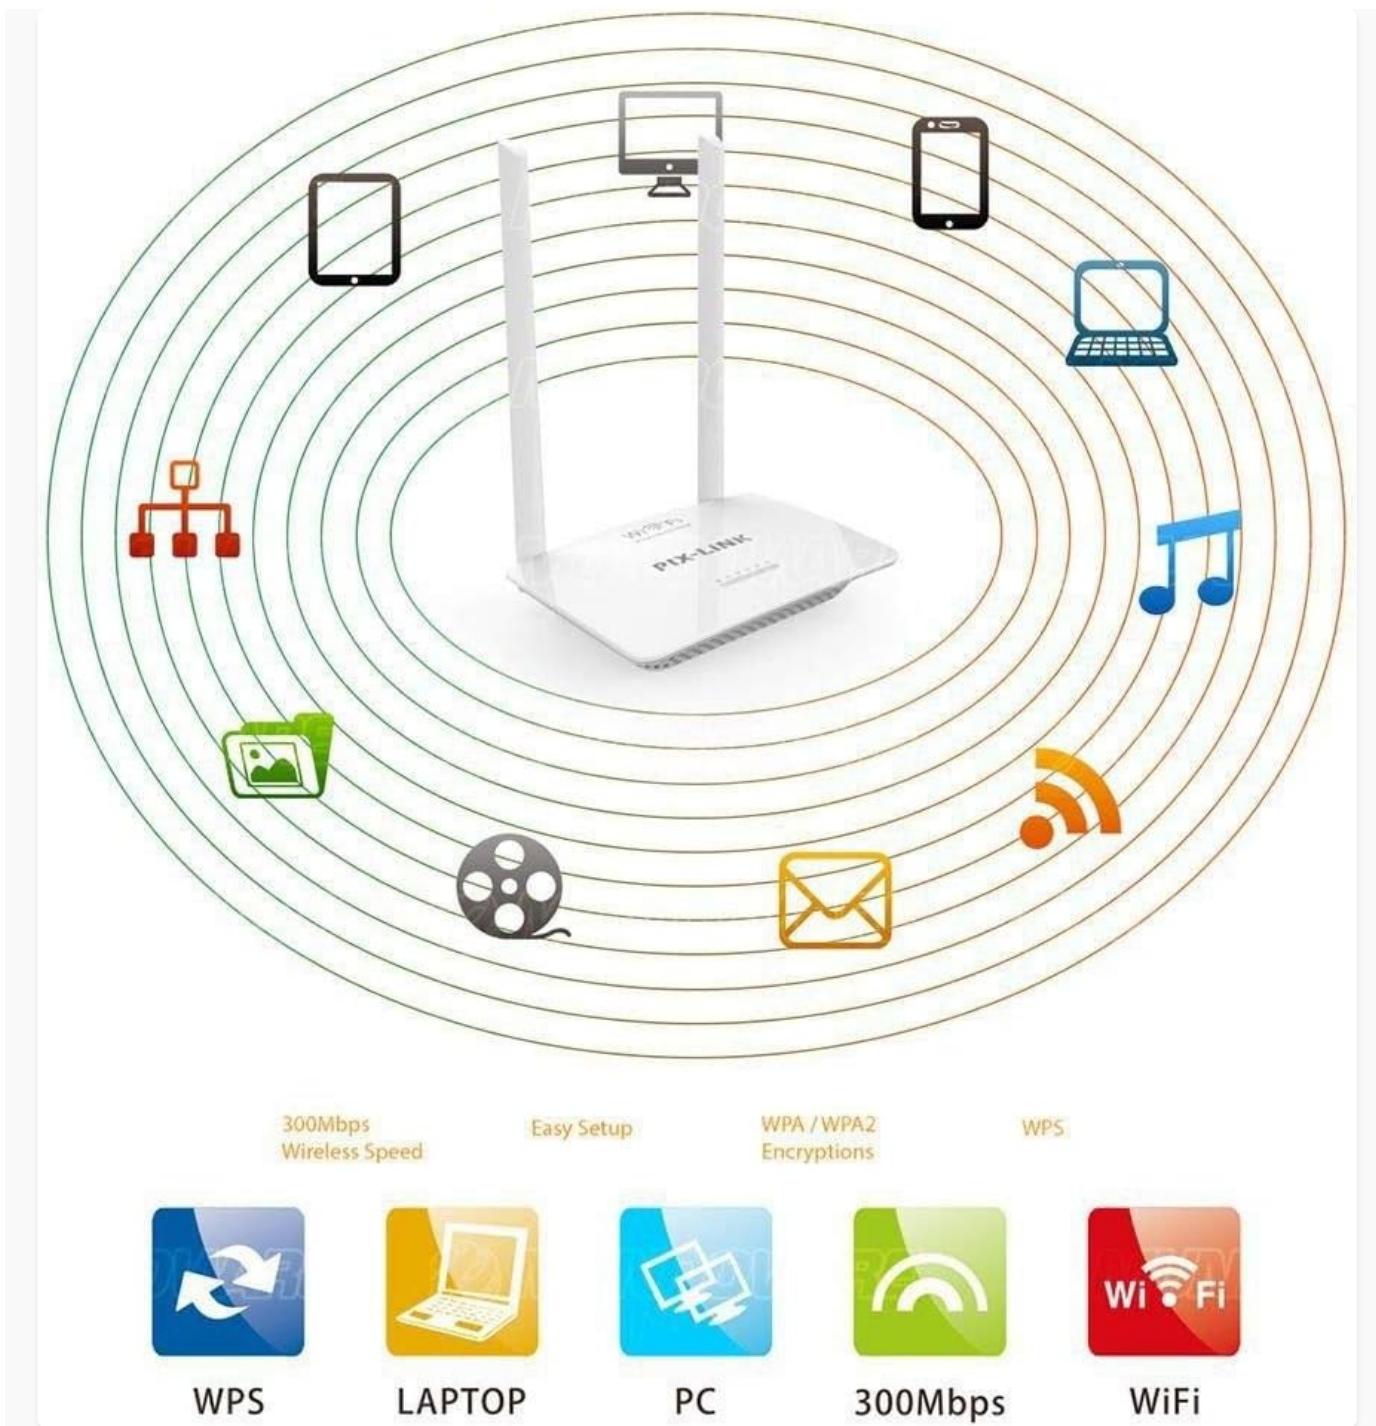


Image 2.1: Illustration of the router's network coverage and compatibility with various devices, including laptops, smartphones, and PCs.

3. PACKAGE CONTENTS

Please verify that all items are present in your package:

- PIX-LINK LV-WR07 Wireless Router
- Power Adapter
- Ethernet Cable
- Quick Installation Guide (this manual)



Image 3.1: The PIX-LINK LV-WR07 Wireless Router shown with its retail packaging, indicating the product as it appears in the box.



Image 3.2: The essential accessories included with the router: the power adapter for electrical connection and an Ethernet cable for wired network setup.

4. SETUP GUIDE

4.1 Hardware Connection

- Power On:** Connect the power adapter to the router's power port and then plug the adapter into a standard electrical outlet. The power indicator light on the router should illuminate.
- Connect to Internet Source:** Connect one end of the provided Ethernet cable to your modem's LAN port or your internet service provider's (ISP) Ethernet wall jack. Connect the other end of the Ethernet cable to the WAN port (usually labeled differently or colored) on your PIX-LINK LV-WR07 router.
- Connect Your Device:**
 - Wired Connection:** For initial setup or stable connection, connect your computer to one of the router's LAN ports (usually yellow) using another Ethernet cable.

- **Wireless Connection:** Locate the default Wi-Fi network name (SSID) and password printed on a label on the bottom or back of your router. Connect your wireless device (laptop, smartphone, tablet) to this network.

4.2 Initial Configuration (Web Interface)

After connecting the hardware, you can configure your router via a web browser.

1. **Access Router Settings:** Open a web browser (e.g., Chrome, Firefox, Edge) on a device connected to the router. In the address bar, type the default IP address (e.g., 192.168.1.1 or 192.168.0.1) and press Enter. This IP address is usually found on the router's label.
2. **Login:** A login window will appear. Enter the default username and password (commonly admin for both, or as specified on the router's label).
3. **Run Setup Wizard:** Most routers have a Quick Setup Wizard. Follow the on-screen instructions to configure your internet connection type (e.g., DHCP, Static IP, PPPoE) and set up your new Wi-Fi network name (SSID) and a strong password.
4. **Save Settings:** After configuring, save your settings and restart the router if prompted.

5. OPERATING YOUR ROUTER

5.1 Connecting Devices to Wi-Fi

To connect a device to your Wi-Fi network:

1. On your device, go to Wi-Fi settings.
2. Select your Wi-Fi network name (SSID) from the list.
3. Enter the Wi-Fi password you set during configuration.
4. Your device should now be connected to the internet.

5.2 Using WPS (Wi-Fi Protected Setup)

WPS allows you to connect devices to your Wi-Fi network without entering the password manually.

1. Press the WPS button on your router (usually located on the back or side, labeled 'WPS'). The WPS LED indicator will start blinking.
2. Within two minutes, activate WPS on your client device (e.g., a wireless adapter, smartphone, or printer). Refer to your device's manual for specific instructions on activating WPS.
3. The device will automatically connect to your Wi-Fi network.

5.3 Wired Connections (LAN Ports)

The router provides multiple LAN ports for wired connections, offering stable and fast connectivity for devices like desktop computers, gaming consoles, and smart TVs.

- Simply connect an Ethernet cable from the device's Ethernet port to any available LAN port on the router.
- The corresponding LAN indicator light on the router should illuminate, indicating a successful connection.

6. MAINTENANCE

- **Optimal Placement:** Place the router in a central location, away from obstructions (thick walls, metal objects) and interference sources (microwaves, cordless phones) to maximize Wi-Fi coverage.

- **Keep Clean:** Regularly clean the router's exterior with a soft, dry cloth. Ensure ventilation holes are not blocked to prevent overheating.
- **Firmware Updates:** Periodically check the PIX-LINK official website for firmware updates. Updating firmware can improve performance, add new features, and fix bugs. Follow the instructions provided on the website carefully.
- **Restart Periodically:** Restarting your router every few weeks can help clear its memory and resolve minor network issues, improving overall performance.

7. TROUBLESHOOTING

7.1 No Internet Connection

- Check if the power adapter is securely connected and the router is powered on.
- Ensure the Ethernet cable from your modem/ISP is securely connected to the router's WAN port.
- Restart your modem and then your router. Wait a few minutes for them to fully boot up.
- Verify your internet connection type settings in the router's web interface (e.g., DHCP, Static IP, PPPoE).
- Contact your Internet Service Provider (ISP) to confirm there are no service outages in your area.

7.2 Slow Wi-Fi Speed or Intermittent Connection

- Relocate the router to a more central position, away from obstacles and interference.
- Ensure your router's firmware is up to date.
- Reduce the number of devices connected to the network, especially those performing high-bandwidth activities.
- Try changing the Wi-Fi channel in the router's settings to avoid interference from neighboring networks.

7.3 Cannot Access Router's Web Interface

- Ensure your device is connected to the router (either via Ethernet cable or Wi-Fi).
- Verify that you are typing the correct IP address (e.g., 192.168.1.1) in the browser's address bar.
- Clear your browser's cache and cookies, or try a different web browser.
- If you forgot the login credentials, you may need to perform a factory reset (see section 7.4).

7.4 How to Perform a Factory Reset

A factory reset will restore the router to its default settings, including the default Wi-Fi name and password, and login credentials.

1. With the router powered on, locate the Reset button (often a small pinhole) on the back or bottom of the router.
2. Use a paperclip or a thin object to press and hold the Reset button for about 5-10 seconds until the router's lights flash or change behavior.
3. Release the button and wait for the router to restart. You will then need to reconfigure it using the initial setup steps.

8. TECHNICAL SPECIFICATIONS

Feature	Description
---------	-------------

Brand	PIX-LINK
Model	LV-WR07
Wireless Speed	300 Megabits Per Second (Mbps)
Antennas	2 External Antennas
Number of Ports	5 (1 WAN, 4 LAN)
Connectivity Technology	Wi-Fi, LAN
Special Features	WPS (Wi-Fi Protected Setup)
Compatible Devices	Gaming Consoles, Tablets, Smart Televisions

9. WARRANTY INFORMATION

PIX-LINK products are designed for reliability and performance. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official PIX-LINK website. Keep your purchase receipt as proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you encounter any issues that are not covered in this manual or require further assistance, please contact PIX-LINK customer support. You can usually find contact information (phone number, email, or support portal) on the official PIX-LINK website or on the product packaging.

Before contacting support, please have the following information ready:

- Product Model: LV-WR07
- Serial Number (found on the product label)
- A detailed description of the issue you are experiencing
- Steps you have already taken to troubleshoot

© 2023 PIX-LINK. All rights reserved.

Information in this manual is subject to change without notice.