

Sun Joe SPX4600

Sun Joe SPX4600 High Performance Induction Pressure Washer User Manual

Model: SPX4600

Brand: Sun Joe

[Introduction](#)[Safety Information](#)[Product Components](#)[Setup](#)[Operation](#)[Maintenance](#)[Warranty &](#)[Support](#)[Troubleshooting](#)[Specifications](#)

1. INTRODUCTION

This manual provides detailed instructions for the safe operation, assembly, maintenance, and troubleshooting of your Sun Joe SPX4600 High Performance Induction Pressure Washer. This electric pressure washer is designed for various home, outdoor, and auto cleaning tasks, effectively removing dirt, debris, stains, and grime.

2. IMPORTANT SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the pressure washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury. Keep this manual for future reference.

- **Electrical Safety:** The unit is equipped with a 35-foot power cord with GFCI protection. Always plug the unit into a grounded outlet. Do not use extension cords unless absolutely necessary, and if used, ensure they are rated for outdoor use and are of appropriate gauge (14 gauge or thicker) and length (maximum 25 feet) to prevent voltage drop and overheating.
- **Water Connection:** Ensure all water connections are secure to prevent leaks. Do not operate the pressure washer without a water supply.
- **Personal Protective Equipment:** Always wear appropriate eye protection (safety glasses or goggles) and hearing protection when operating the pressure washer.
- **Operating Environment:** Do not operate the pressure washer in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Children and Bystanders:** Keep children and bystanders away from the operating area.

- **Total Stop System (TSS):** The pressure washer features a Total Stop System which automatically shuts off the pump when the trigger is not engaged. This saves energy and prolongs pump life.

For comprehensive safety guidelines, refer to the full safety manual provided with your product.

3. PRODUCT COMPONENTS

Familiarize yourself with the main components of your Sun Joe SPX4600 pressure washer:



Figure 3.1: Main view of the Sun Joe SPX4600 High Performance Induction Pressure Washer, showcasing its compact design and integrated features.



Figure 3.2: Illustration of the Total Stop System (TSS) technology, which automatically shuts off the pump when the trigger is not engaged, conserving energy and extending pump life.



Figure 3.3: Close-up of the 5 Quick-Connect nozzles (0°, 15°, 25°, 40°, and soap), designed for various cleaning tasks from heavy-duty to delicate surfaces.



Figure 3.4: View of the integrated 1-gallon detergent tank, allowing for convenient storage and application of cleaning solutions.



Figure 3.5: Detail of the 14.5-Amp / 2,000 W induction motor, known for its durability, quieter operation, and cooler running compared to traditional universal motors.



Figure 3.6: The heavy-duty metal roll cage with easy-glide wheels, providing robust protection and portability for the unit. Also visible are the onboard hose holder and power cord hook for neat storage.

- **High-Pressure Hose:** 20-foot, steel-reinforced hose for extended reach.
- **Power Cord:** 35-foot power cord with GFCI protection.
- **Spray Wand:** Connects to the high-pressure hose and accepts quick-connect nozzles.

4. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in the manual are present and undamaged.

2. **Assembly:** The pressure washer requires minimal assembly. Follow the diagrams in your product manual for attaching the handle, hose reel, and any other accessories. No special tools are typically required for assembly.
3. **Water Connection:**
 - Connect a standard garden hose (minimum 1/2 inch diameter) to the water inlet on the pressure washer. Ensure the connection is tight.
 - Connect the high-pressure hose to the outlet on the pressure washer and to the spray wand.
 - Turn on the water supply completely before starting the pressure washer to purge air from the system.
4. **Electrical Connection:**
 - Plug the 35-foot power cord into a grounded 120V AC electrical outlet. The GFCI (Ground Fault Circuit Interrupter) plug should be tested before each use by pressing the "RESET" button, then the "TEST" button, and then "RESET" again.
 - Ensure the outlet is suitable for outdoor use and protected by a GFCI if not already integrated into the plug.
5. **Detergent Tank (Optional):** If using detergent, fill the 1-gallon onboard detergent tank with a pressure washer safe cleaning solution.

5. OPERATING INSTRUCTIONS

1. Starting the Pressure Washer:

- Ensure water supply is fully open and the unit is plugged in.
- Turn the ON/OFF switch to the "ON" position.
- Squeeze the trigger on the spray wand to begin water flow. The motor will start automatically due to the Total Stop System (TSS).

2. Selecting Nozzles:

- The SPX4600 includes 5 Quick-Connect nozzles:
 - **0° (Red):** For concentrated, high-pressure cleaning of tough, caked-on grime. Use with extreme caution.
 - **15° (Yellow):** For intense cleaning of hard surfaces with stubborn dirt.
 - **25° (Green):** For general cleaning of most surfaces.
 - **40° (White):** For gentle cleaning of delicate surfaces.
 - **Soap (Black):** For applying detergent.
- To change nozzles, ensure the pressure washer is off and the trigger is not engaged. Pull back the collar on the spray wand and insert the desired nozzle until it clicks into place.

3. Using Detergent:

- Fill the onboard detergent tank with a non-corrosive pressure washer detergent.
- Attach the black soap nozzle to the spray wand.
- The pressure washer will automatically draw detergent when operating with the soap nozzle.
- After applying detergent, switch to a high-pressure nozzle (e.g., 25° or 15°) to rinse the surface thoroughly.

4. Shutting Down:

- Turn the ON/OFF switch to the "OFF" position.
- Turn off the water supply.
- Squeeze the trigger on the spray wand to release any remaining pressure in the system.

- Disconnect the garden hose and power cord.



Figure 5.1: An individual using the Sun Joe SPX4600 pressure washer to clean a vehicle, demonstrating typical operation.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Nozzle Cleaning:** If a nozzle becomes clogged, use the included nozzle cleaning tool (or a small paper clip) to clear any obstructions. Rinse the nozzle with water.
- **Water Inlet Filter:** Periodically check and clean the water inlet filter to prevent debris from entering the pump.
- **Storage:**
 - Store the pressure washer in a dry, covered area where it is protected from freezing temperatures.
 - Drain all water from the pump, hose, and spray wand before storing to prevent damage from freezing.
 - For long-term storage, consider using a pump protector or non-toxic antifreeze solution.

- **Hose and Cord Management:** Utilize the onboard hose holder and power cord hook for neat and organized storage.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your pressure washer.

Problem	Possible Cause	Solution
Motor does not start.	Unit not plugged in. GFCI tripped. No water supply. Power switch off.	Ensure power cord is securely plugged into a working outlet. Press the "RESET" button on the GFCI plug. If it trips repeatedly, consult an electrician. Ensure water spigot is fully open. Turn the power switch to "ON".
Low pressure.	Clogged nozzle. Insufficient water supply. Air in the pump. Kinked garden hose.	Clean the nozzle with the cleaning tool. Ensure water supply is adequate and water inlet filter is clean. Turn off the unit, squeeze trigger to release air, then restart. Straighten the garden hose.
Detergent not dispensing.	Soap nozzle not attached. Detergent tank empty. Detergent too thick.	Ensure the black soap nozzle is securely attached. Refill the detergent tank. Dilute detergent with water as per detergent instructions.
Water leaks.	Loose connections. Damaged O-rings.	Tighten all hose and wand connections. Inspect O-rings for wear or damage and replace if necessary.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	SPX4600
Power Source	Corded Electric
Motor	14.5-Amp / 2,000 W Induction Motor
Hose Length	20 Feet (steel-reinforced)
Power Cord Length	35 Feet (with GFCI protection)
Detergent Tank Volume	1 Gallon
Maximum Flow Rate	1.3 Gallons Per Minute
Product Dimensions (L x W x H)	24.6" x 14.6" x 17.3"
Item Weight	36.5 pounds (16.6 Kilograms)
Certification	CSA

Feature	Detail
UPC	842470109254

9. WARRANTY & SUPPORT

The Sun Joe SPX4600 pressure washer comes backed by a complete 2-year warranty, ensuring continuous, reliable performance. For warranty claims, technical support, or replacement parts, please contact Sun Joe customer service. Refer to the contact information provided in your product packaging or visit the official Sun Joe website for assistance. For more information, you can visit the [Sun Joe Store on Amazon](#).

© 2025 Sun Joe. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question