

[Manuals.plus](#) /

› [Beyution](#) /

› NH312UP Remote Control User Manual

Beyution NH312UP

NH312UP Remote Control User Manual

Model: NH312UP

Brand: Beyution

PRODUCT OVERVIEW

The Beyution NH312UP is a replacement infrared remote control designed for various Sanyo LCD LED HDTV TV models. This remote provides essential functions for controlling your television, offering a straightforward and effective user experience.



Image: Front view of the NH312UP remote control. This image displays the full layout of the remote, including the power button, number pad, volume and channel controls, navigation buttons, and other function keys.

SETUP AND BATTERY INSTALLATION

The NH312UP remote control is designed for immediate use upon battery installation. No programming or pairing is required.

Battery Requirements:

- Two (2) AAA alkaline batteries are required.
- For optimal performance and to avoid issues, use **brand new alkaline batteries**. Rechargeable batteries are not recommended as they may not provide sufficient power for consistent operation.

Installation Steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to open it.



Image: Back view of the NH312UP remote control with the battery compartment open. This image shows the empty battery slots and the mechanism for opening the cover.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

OPERATING INSTRUCTIONS

The NH312UP remote control functions as a direct replacement for your original Sanyo TV remote. Most buttons will correspond to their standard functions.

Key Functions:

Button	Function
Power (Red)	Turns the television on or off.
Source	Cycles through available input sources (HDMI, AV, Component, etc.).
PIC/SOUND MODE	Adjusts picture or sound modes.
CC	Activates or deactivates Closed Captions.
SLEEP	Sets a sleep timer for the television.
PIX SHAPE	Adjusts the aspect ratio or picture size.
Number Pad (0-9)	Direct channel selection.
PREV.CH	Returns to the previously viewed channel.
VOL +/-	Increases or decreases the volume level.
CH +/-	Changes the channel up or down.
Mute	Mutes or unmutes the television sound.
SAP	Selects Secondary Audio Program (SAP) or audio language.
BACK	Returns to the previous menu or screen.
MENU	Opens the television's main menu.
INFO	Displays current program information.
Navigation (Up/Down/Left/Right)	Navigates through menus and options.
OK	Confirms selections in menus.

This remote is compatible with the following Sanyo TV models:

- FW32D08F, FW32D06F-B, FW50D36F-B
- FW32D06F, FW50D36F, FW50D48F
- FW55D25F, FW40D36F, FW43D25F
- FW43D47F, FW40D48F, FW40D36F-B

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or aerosol sprays, as they may damage the remote's internal components or finish.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases. Always replace both batteries at the same time with new alkaline batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place.
- **Avoid Exposure:** Do not expose the remote control to direct sunlight, excessive heat, moisture, or extreme cold.

TROUBLESHOOTING

Common Issues and Solutions:

Remote is not responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace with *brand new alkaline batteries*. Old or rechargeable batteries may not provide sufficient power.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor. The remote requires a clear line of sight to operate.
- **TV Sensor:** Verify that the TV's infrared sensor is not blocked or dirty.
- **Remote Test:** Point the remote at a digital camera (like a smartphone camera) and press any button. If you see a light flashing from the remote's emitter, it indicates the remote is sending a signal. If not, the remote may be faulty or batteries are dead.

Some buttons are not working:

- This remote is a replacement and may not support all advanced functions of your original TV remote if those functions are specific to a smart TV platform or unique features not present on standard infrared remotes.
- Ensure the TV model is listed as compatible. If your TV model is not listed, some functions may not be fully supported.

SPECIFICATIONS

Model Number	NH312UP (KCI-NH312UP)
Brand	Beyution

Compatible Devices	Sanyo LCD LED HDTV Televisions
Power Source	2 x AAA Batteries (Alkaline recommended)
Product Dimensions	7 x 2 x 0.7 inches
Item Weight	2.08 ounces
Color	Black
Special Feature	Ergonomic design

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller's policy at the time of purchase. Typically, replacement parts like this remote come with a limited warranty covering manufacturing defects.

Customer Support:

If you encounter issues not covered in this manual or require further assistance, please contact the seller directly through the platform where the purchase was made. When contacting support, please provide your order number and the specific model of your Sanyo TV.

Note: If your TV model number is not listed as compatible, please contact the seller before ordering to confirm compatibility.