

Easytry123 Easytry4879

Easytry123 Replacement Remote Control User Manual

For Netgear NeoTV Max Pro Streaming Players (NTV300SL, NTV200S, NTV200, NTV300 Series)

1. INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Easytry123 replacement remote control. This remote is designed as a direct infrared (IR) replacement for various Netgear NeoTV Max Pro Streaming Player models. Please ensure your original remote matches the appearance of this replacement unit for optimal compatibility.

Important Note: This is a replacement remote control. It may not offer all functions of the original remote, and its functionality is dependent on the specific Netgear NeoTV model it is used with. No programming or setup codes are required for operation.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control and must be purchased separately.

2.2 Initial Use

3. OPERATING INSTRUCTIONS

The Easytry123 replacement remote control features a dual-sided design: a primary control side and a QWERTY keyboard side for text input.

3.1 Primary Control Side

This side contains the main buttons for navigating your Netgear NeoTV device:

- **Power Button (U):** Turns the streaming player on or off.
- **Home Button (Home Icon):** Returns to the main menu or home screen.
- **Navigation Pad (Up, Down, Left, Right):** Moves the cursor or selection on screen.
- **OK Button:** Confirms a selection or action.
- **Return Button (Curved Arrow):** Goes back to the previous screen or menu.
- **Menu Button (Menu Icon):** Accesses context-sensitive menus.
- **Media Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Back):** Controls media playback.
- **Dedicated App Buttons (e.g., Netflix, YouTube):** Provides quick access to specific streaming applications.

3.2 QWERTY Keyboard Side

Flip the remote over to access the full QWERTY keyboard for easier text entry, such as searching for content or entering login details.

- **Typing:** Use the individual keys to input letters, numbers, and symbols.
- **Shift/Caps Lock:** Use the 'ALT' or 'CAPS' button to switch between character sets or enable caps lock.



Image 2: Back view of the remote control, featuring the QWERTY keyboard for text input.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, abrasive cleaners, or immerse the remote in water.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Ensure there is a clear line of sight between the remote control and the Netgear streaming player. Remove any obstructions.
 - Confirm you are pointing the remote directly at the IR receiver on your streaming player.
- **Some functions do not work:**
 - As a replacement remote, it may not support all advanced or unique functions of the original remote. This is normal for some replacement units.
 - Verify that your Netgear streaming player model is listed as compatible.
- **QWERTY keyboard not working:**
 - Ensure the remote is flipped to the keyboard side. Some devices automatically detect which side is facing up.
 - Check if the application you are using on the streaming player supports keyboard input.

6. SPECIFICATIONS

Feature	Description
Brand	Easytry123
Model Name	Easytry4879
Connectivity Technology	Infrared (IR)
Compatible Devices	Netgear NeoTV Max Pro Streaming Players (NTV300SL, NTV200S, NTV200, NTV300 Series)
Color	Black
Special Feature	Ergonomic, Dual-sided (Primary controls + QWERTY keyboard)
Button Quantity	15 (Primary side) + QWERTY keys
Battery Type	2 x AAA batteries (not included)

7. WARRANTY AND SUPPORT

Specific warranty information for this Easytry123 replacement remote control is not provided in the

product details. For any questions regarding warranty, returns, or technical support, please contact the seller directly through your purchase platform. Ensure you have your order details available when contacting support.

© 2024 Easytry123. All rights reserved. Netgear and NeoTV are registered trademarks of their respective owners.