



[Manuals.plus](#) /

› [BERGNER](#) /

› BERGNER 6L 1500W Digital Touch Display Air Fryer Instruction Manual

BERGNER BG-51023-BK

BERGNER 6L 1500W Digital Touch Display Air Fryer Instruction Manual

Model: BG-51023-BK | Brand: BERGNER

1. INTRODUCTION

Thank you for choosing the BERGNER 6L 1500W Digital Touch Display Air Fryer. This appliance is designed to cook your favorite foods with little to no oil, offering a healthier alternative to traditional frying. Please read this instruction manual carefully before using the appliance to ensure safe and optimal operation. Keep this manual for future reference.



Image: The BERGNER 6L 1500W Digital Touch Display Air Fryer, showcasing its sleek black design and digital control panel.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- This appliance is equipped with overheat protection. If the internal temperature exceeds the safe limit, it will automatically shut off.

3. PRODUCT OVERVIEW

The BERGNER Air Fryer consists of several key components designed for efficient and convenient cooking.

Components:

- **Main Unit:** The primary housing of the air fryer, containing the heating element and fan.
- **Digital Touch Display:** Intuitive interface for selecting programs, adjusting settings, and monitoring cooking progress.
- **Removable Basket:** The main cooking compartment where food is placed. It features a handle for easy insertion and removal.
- **Integrated Grill Plate:** A non-stick plate that sits inside the basket, allowing air to circulate around the food for even cooking and crisping.



Image: The BERGNER Air Fryer with its removable basket and integrated grill plate detached from the main unit, illustrating its components.

4. SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Remove the basket and grill plate from the main unit.

Cleaning Before First Use:

1. Wash the basket and grill plate with hot water, a mild dishwashing liquid, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are thoroughly dry before use.

Placement:

- Place the air fryer on a stable, horizontal, and heat-resistant surface.
- Ensure there is at least 10 cm of free space on the back and sides of the appliance, and 10 cm above it, to allow for proper ventilation.
- Do not place anything on top of the air fryer.

5. OPERATING INSTRUCTIONS

Powering On/Off:

- Plug the power cord into a grounded wall outlet. The display will light up briefly, then show the standby icon.
- Press the power icon to turn the appliance on. The default temperature and time will be displayed.
- To turn off, press and hold the power icon until the display turns off.

Preparing for Cooking:

1. Carefully pull the basket out of the air fryer.
2. Place the grill plate inside the basket.
3. Place the ingredients into the basket. Do not exceed the MAX fill line.
4. Slide the basket back into the air fryer. Ensure it clicks securely into place.



Image: A hand demonstrating the removal of the air fryer's cooking basket from the main unit.



Image: The air fryer's basket filled with various vegetables, ready for cooking.

Using the Digital Touch Display:

- The digital touch display allows for easy control of cooking settings.
- **Pre-set Programs:** The air fryer features 8 pre-set cooking programs for common dishes. Touch the corresponding icon on the display to select a program. The appliance will automatically set the optimal temperature and time.
- **Manual Adjustment:** To manually set the temperature and time, use the temperature (thermometer icon) and timer (clock icon) controls. Use the '+' and '-' buttons to increase or decrease the values.
- **Temperature Range:** Adjustable from 80°C to 200°C.
- **Timer Range:** Adjustable up to 60 minutes.
- Press the Play/Pause icon to start or pause the cooking process.



Image: A hand touching the digital display of the air fryer, showing temperature and program icons.

During Cooking:

- Some recipes may require shaking the ingredients halfway through the cooking time. To do this, pull the basket out of the appliance by the handle. The air fryer will automatically pause.
- Shake the basket gently.
- Slide the basket back into the air fryer. The cooking process will resume automatically.

6. COOKING TIPS

- **Preheating:** For best results, preheat the air fryer for 3-5 minutes before adding food.
- **Oil Usage:** While the air fryer cooks with little to no oil, a small amount of oil (1 tablespoon) can enhance crispiness for some foods.
- **Do Not Overcrowd:** Avoid overfilling the basket. Cook food in smaller batches if necessary to ensure even cooking and crispiness.
- **Shaking:** For foods like fries or chicken nuggets, shaking the basket halfway through cooking helps ensure even browning.
- **Cooking Times:** Cooking times may vary depending on the size, quantity, and freshness of the food. Adjust as needed.

7. MAINTENANCE AND CLEANING

Clean the appliance after every use.

Cleaning the Basket and Grill Plate:

1. Unplug the air fryer and allow it to cool down completely.
2. Remove the basket and grill plate.
3. Wash them in hot water with a mild dishwashing liquid and a non-abrasive sponge. The non-stick coating is durable, but avoid using metal utensils or abrasive cleaning materials.
4. Rinse thoroughly and dry completely before storing or next use.

Cleaning the Main Unit:

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners.
- Clean the interior of the appliance with a damp cloth.
- Never immerse the main unit in water or any other liquid.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overcrowded.	Cook in smaller batches. Shake the basket more frequently.
White smoke coming from the appliance.	Greasy residue from previous use.	Clean the basket and grill plate thoroughly after each use.
Food is not crispy.	Not enough oil (for certain foods) or temperature too low.	Lightly brush food with oil. Increase temperature or cooking time.

9. SPECIFICATIONS

- **Model:** BG-51023-BK
- **Brand:** BERGNER
- **Capacity:** 6 Liters
- **Wattage:** 1500W
- **Voltage:** 220-240V~, 50-60Hz

- **Temperature Range:** 80°C - 200°C
- **Timer:** Up to 60 minutes
- **Material:** Heat-resistant plastic body, non-stick coated basket and grill plate
- **Dimensions:** Approximately 32 x 34 x 34 cm
- **Weight:** Approximately 6.09 kg
- **Special Features:** Digital touch display, 8 pre-set cooking programs, overheat protection.

10. WARRANTY AND SUPPORT

This BERGNER appliance comes with a standard manufacturer's warranty. For detailed information regarding warranty terms, conditions, and customer support, please refer to the warranty card included with your product or visit the official BERGNER website. Keep your proof of purchase for any warranty claims.

For technical assistance or inquiries, please contact BERGNER customer service through their official channels.