

[manuals.plus](#) /

› [HUAYU](#) /

› [HUAYU RM-L1165 TV Remote Control for Sony TV User Manual](#)

HUAYU RM-L1165

HUAYU RM-L1165 TV Remote Control for Sony TV

User Manual

INTRODUCTION

This manual provides instructions for the HUAYU RM-L1165 replacement remote control, designed for use with Sony televisions. This remote offers the same functionality as your original Sony TV remote control, ensuring a seamless user experience. It is compatible with various Sony TV types, including LCD, LED, and Plasma models.



Image: Angled view of the HUAYU RM-L1165 remote control.

SETUP

The HUAYU RM-L1165 remote control requires no programming or complex setup. Simply insert the batteries, and it is ready for immediate use with your Sony TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not always included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is operational.



Image: HUAYU RM-L1165 remote control with its battery compartment.

OPERATING INSTRUCTIONS

The HUAYU RM-L1165 remote control functions identically to your original Sony TV remote. Point the remote directly at your television's infrared receiver for optimal performance.



Image: Front view of the HUAYU RM-L1165 remote control.

Key Functions Overview

- **Power Button (I/O):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Channel Up/Down (CH +/-):** Changes the TV channel sequentially.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.

- **Mute Button:** Silences the TV audio.
- **Navigation Pad (Up, Down, Left, Right, Enter/OK):** Navigates through menus and confirms selections.
- **Home Button:** Accesses the TV's main menu or smart TV interface.
- **Return/Back Button:** Returns to the previous screen or menu.
- **Input/Source Button:** Selects different input sources (HDMI, AV, etc.).
- **Colored Buttons (Red, Green, Yellow, Blue):** Perform specific functions within certain applications or menus, as indicated on the TV screen.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new ones of the same type (AAA). Do not mix old and new batteries or different battery types.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Make sure you are within the effective range of the TV's sensor.
- **Specific buttons not working:**
 - Clean around the button to ensure no debris is preventing it from pressing correctly.
 - If only a few buttons are unresponsive after checking batteries, the remote may be faulty and require replacement.

SPECIFICATIONS

Feature	Detail
Model	RM-L1165
Brand	HUAYU
Compatibility	Sony TVs (LCD, LED, Plasma)
Power Source	2 x AAA Batteries
Dimensions (approx.)	20.9 x 5.5 x 2.8 cm
Weight (approx.)	100 g (without batteries)

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the terms provided by your retailer at the time of purchase. If you encounter issues not covered in this manual or require further assistance, please contact the seller or manufacturer directly.

