

**Znewtech ZNT-ZT-X1C**

# Znewtech Home & Office Timer with Clock User Manual

Model: ZNT-ZT-X1C

## INTRODUCTION

Thank you for choosing the Znewtech Home & Office Timer with Clock. This innovative digital timer is designed to enhance your time management and productivity, whether for work, study, or daily tasks. Its intuitive design allows for quick and easy setup and operation, featuring preset countdown times and a clear LCD display.

Key features include:

- A stylish and innovative digital desk timer with clock functionality.
- Simple operation: turn the timer to its desired preset position to start a countdown.
- Clear LCD screen displaying the remaining countdown time.
- Adjustable volume control with three levels: High, Low, and Silent.
- Flashing backlit visual alert for discreet notifications.

## PACKAGE CONTENTS

Please ensure all items are present in your package:

- 1 x Znewtech Home & Office Timer (Cyan)
- 1 x User Manual

## SETUP

### Battery Installation

The Znewtech Timer requires 2 AAA batteries (not included). To install:

1. Locate the battery compartment on the back of the timer.
2. Gently slide open the battery cover.

3. Insert 2 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover securely.



Image: Rear view of the timer, highlighting the battery compartment and control buttons for setup.

## Setting the Clock

After installing batteries, the clock display will activate. To set the time:

1. Press the **SET** button on the back of the timer to enter time setting mode. The hour digits will flash.
2. Use the **UP** and **DOWN** buttons to adjust the hour.
3. Press **SET** again to move to minute setting. The minute digits will flash.
4. Use the **UP** and **DOWN** buttons to adjust the minutes.
5. Press **SET** one more time to confirm and exit time setting mode.
6. To switch between 12-hour and 24-hour format, press the **MODE** button while in clock display mode.

## OPERATING INSTRUCTIONS

### Using Preset Countdown Timers

The Znewtech Timer features five preset countdown durations: 5, 15, 30, 45, and 60 minutes. To activate a timer:

1. Ensure the timer is in clock display mode.
2. Simply rotate the timer so that the desired preset time (e.g., "5 min", "15 min") is facing upwards. The countdown will begin automatically.
3. The LCD screen will display the remaining time.
4. When the countdown reaches zero, the alarm will sound, and the backlight will flash (if enabled).
5. To stop the alarm, simply rotate the timer to a different side or press the "SNOOZE/LIGHT" button on top.

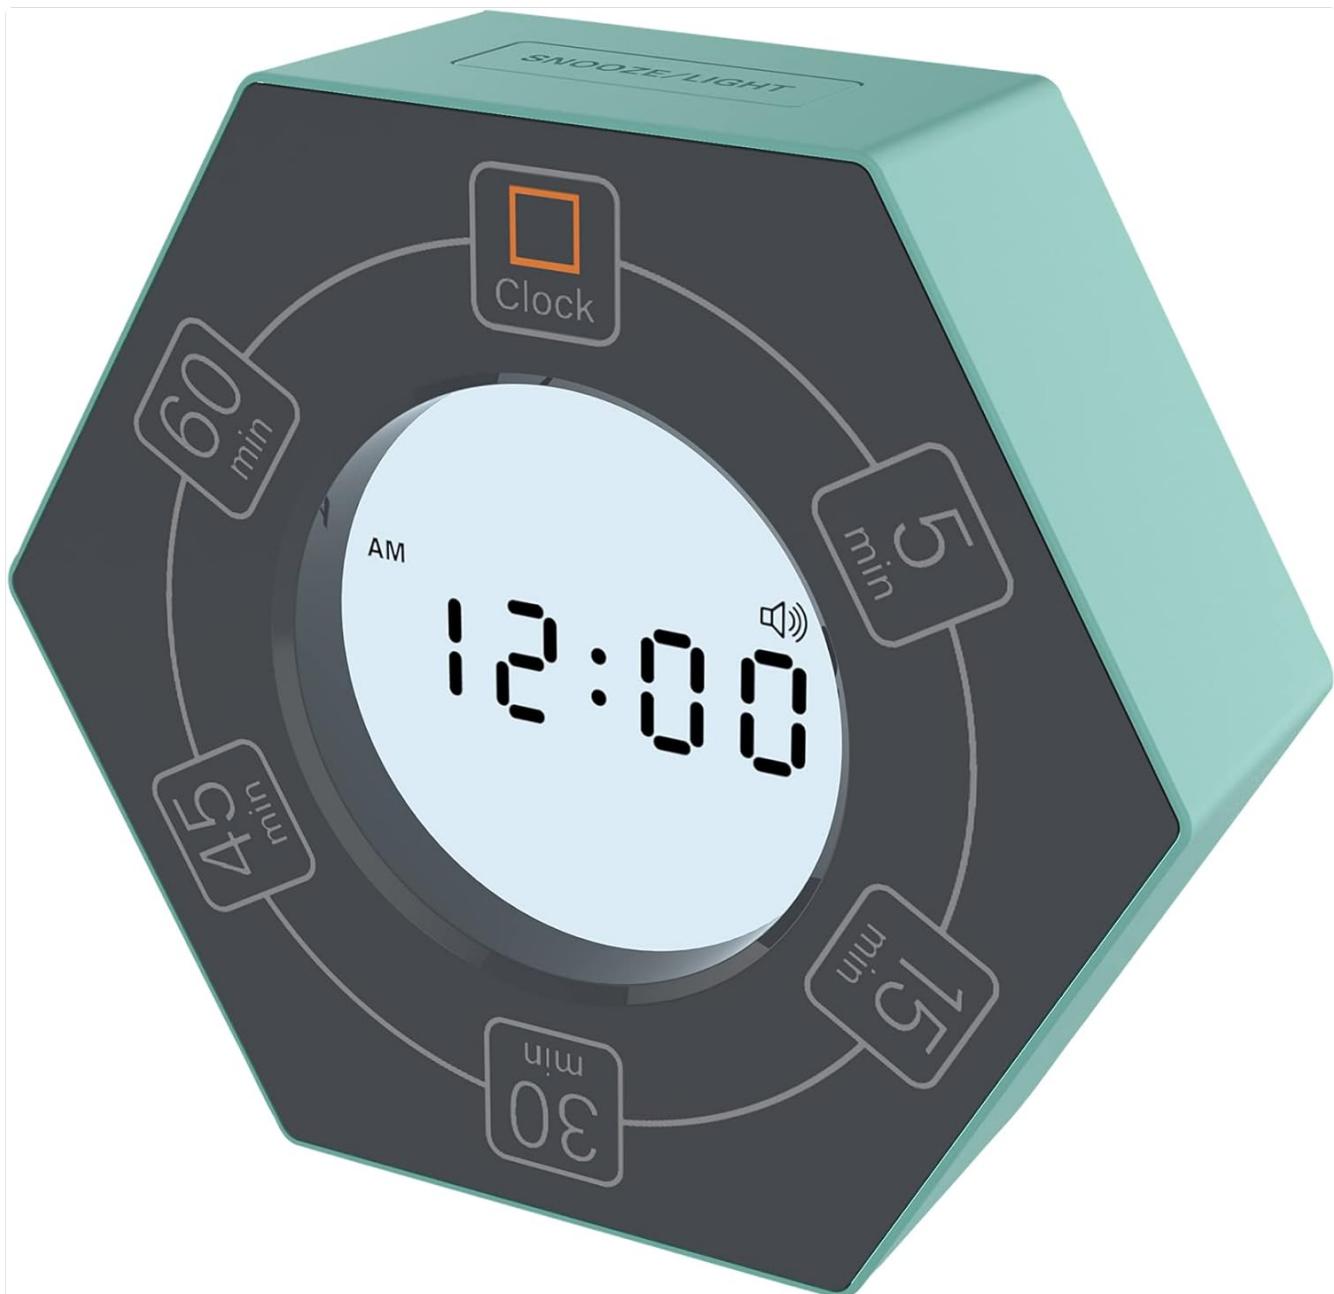


Image: Front view of the timer, illustrating the preset time markings on each side.



Image: The timer in use on a desk, demonstrating its practical application.

## Clock Mode

To return the timer to clock display mode, rotate it so the side marked "Clock" (indicated by a square icon) is facing upwards. The current time will be displayed.

## Adjusting Volume

The timer offers three volume settings: High, Low, and Silent. To adjust the volume:

1. Locate the volume control button/switch on the back of the timer (often labeled with a speaker icon).
2. Press or slide to cycle through the available volume levels.
3. In Silent mode, the timer will rely solely on the flashing backlit visual alert.

## Snooze/Light Function

Press the "SNOOZE/LIGHT" button located on the top of the timer to temporarily silence an active alarm or to illuminate the display backlight for a few seconds in low-light conditions.



Image: The timer's backlit display, visible in a dark environment.

## MAINTENANCE

To ensure the longevity and optimal performance of your Znewtech Timer:

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse it in water.
- **Battery Replacement:** Replace batteries promptly when the display becomes dim or the timer functions erratically. Always use fresh AAA batteries.
- **Storage:** Store the timer in a cool, dry place when not in use for extended periods.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer not starting/Display blank	Low or dead batteries; Incorrect battery installation.	Replace batteries with new AAA batteries. Ensure correct polarity.
Alarm not sounding	Volume set to Silent; Speaker obstructed.	Check volume setting and adjust to High or Low. Ensure speaker on back is clear.
LCD display appears dim or blurry when inverted (e.g., 30 min side up)	Viewing angle sensitivity of LCD.	Adjust your viewing angle or position the timer at eye level for optimal clarity.
Timer does not register rotation for 5-minute setting	Internal mechanism needs slight adjustment.	Gently shake the timer or rotate it slightly to ensure the internal mechanism engages.
Clock time resets unexpectedly	Batteries jostled or briefly disconnected.	Re-set the clock time. Ensure batteries are firmly seated in the compartment. Avoid strong impacts.

## SPECIFICATIONS

Model Number	ZNT-ZT-X1C
Brand	Znewtech
Color	Cyan
Material	Plastic
Product Dimensions (D x W x H)	1.5" x 4.75" x 4.25"
Item Weight	322 Grams (11.4 ounces)
Number of Preset Settings	5 (5, 15, 30, 45, 60 minutes)
Power Source	2 x AAA Batteries (not included)
UPC	742567526554
Country of Origin	China

## WARRANTY AND SUPPORT

The Znewtech Home & Office Timer comes with a **One Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Znewtech customer service through the retailer's platform or visit the official Znewtech store on Amazon: [Znewtech Store](#).

Please have your model number (ZNT-ZT-X1C) and proof of purchase ready when contacting support.

© 2025 Znewtech. All rights reserved.