

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY XXD3033 Replacement Remote Control User Manual for Pioneer Receivers

ALLIMITY XXD3033

ALLIMITY XXD3033 Replacement Remote Control User Manual

For Pioneer S-HTD and XV-HTD Series Receivers

INTRODUCTION

This manual provides instructions for the ALLIMITY XXD3033 replacement remote control. This remote is designed to operate various Pioneer DVD/CD receivers without requiring any programming. It offers direct functionality for the listed compatible models.

Compatible Models:

- S-HTD1, S-HTD5, S-HTD50, S-HTD510, S-HTD520
- XV-HTD1, XV-HTD50, XV-HTD510, XV-HTD5100V, XV-HTD510DV, XV-HTD510DVA, XV-HTD520



Figure 1: Comparison of the ALLIMITY XXD3033 replacement remote (left) and the original Pioneer remote (right).

SETUP

The ALLIMITY XXD3033 remote control requires no programming or setup. Simply insert batteries, and it is ready for use with your compatible Pioneer receiver.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.









Figure 2: Rear view of the remote control showing the battery compartment. Ensure correct battery polarity.

OPERATING INSTRUCTIONS

The ALLIMITY XXD3033 remote control provides full functionality for your compatible Pioneer receiver. Point the remote directly at the receiver's infrared sensor for optimal performance.



Replace

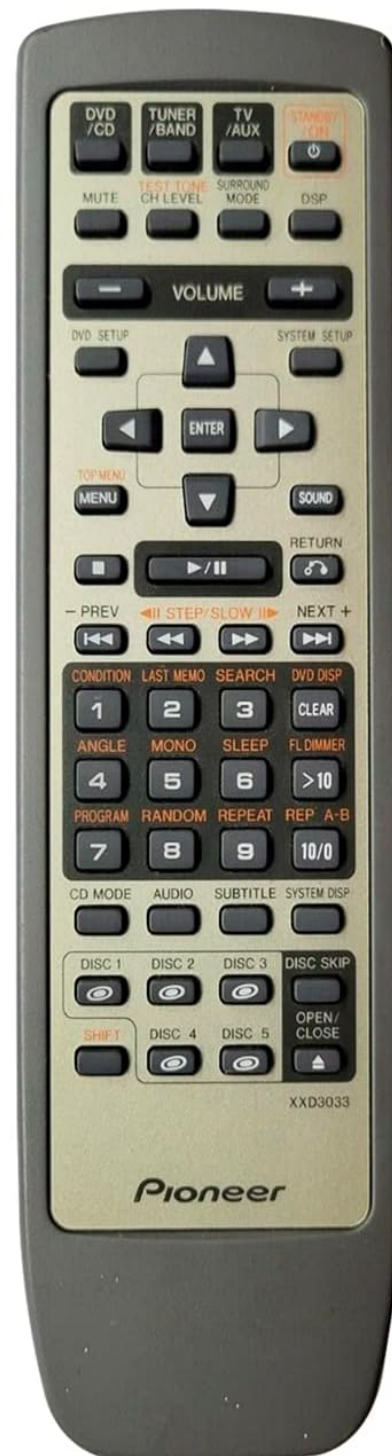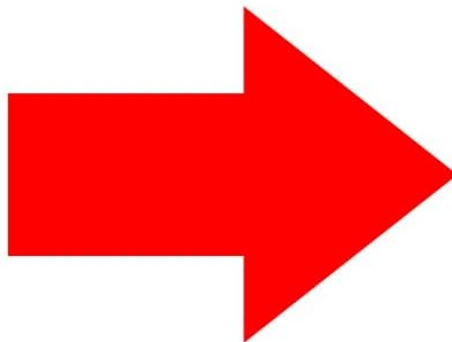

Original

Figure 3: Front view of the ALLIMITY XXD3033 remote control, displaying all buttons and their labels.

Key Functions Overview

- **STANDBY/ON:** Powers the receiver on or off.
- **DVD/CD, TUNER/BAND, TV/AUX:** Selects the input source.
- **MUTE:** Mutes or unmutes the audio output.
- **VOLUME (+/-):** Adjusts the master volume level.
- **DSP, SURROUND MODE:** Controls sound processing and surround sound modes.
- **MENU, TOP MENU, RETURN:** Navigates through on-screen menus.

- **Directional Arrows (Up, Down, Left, Right) and ENTER:** Used for menu navigation and selection.
- **Playback Controls (PREV, NEXT, PLAY/PAUSE, STOP, STEP/SLOW):** Controls media playback functions.
- **Numeric Keypad (0-9, 10/0, >10):** Direct input for track numbers, channels, or other numerical selections.
- **DISC 1-5, DISC SKIP:** For multi-disc changers, selects specific discs or skips between them.
- **CD MODE, AUDIO, SUBTITLE, SYSTEM SETUP, CLR:** Specific functions for CD playback, audio settings, subtitle selection, system configuration, and clearing inputs.

MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote.
- **Avoid Exposure:** Keep the remote away from direct sunlight, heat sources, moisture, and extreme temperatures.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the receiver's infrared sensor.
 - Confirm that the remote is pointed directly at the receiver.
- **Limited Range:**
 - Ensure batteries are fresh. Weak batteries can reduce the remote's effective range.
 - Check for strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the infrared signal.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be preventing contact.
 - If only specific buttons are not working after checking batteries and cleaning, the remote may be faulty.

SPECIFICATIONS

Feature	Detail
Model Number	XXD3033
Brand	ALLIMITY

Compatible Devices	Pioneer DVD/CD Receivers (S-HTD1, S-HTD5, S-HTD50, S-HTD510, S-HTD520, XV-HTD1, XV-HTD50, XV-HTD510, XV-HTD5100V, XV-HTD510DV, XV-HTD510DVA, XV-HTD520)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required
Batteries Required	2 x AAA (Alkaline recommended)
Product Dimensions	2 x 0.6 x 7 inches
Item Weight	1 ounce

WARRANTY AND SUPPORT

This ALLIMITY XXD3033 remote control comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For technical support or warranty claims, please contact your retailer or the ALLIMITY customer service department through the contact information provided at the point of purchase.

© 2023 ALLIMITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07L2TR5MS>

More documents and user manuals: <https://manuals.plus/>