

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Threeking](#) /

› [Threeking RC Stunt Car Instruction Manual](#)

Threeking B07L2XCG7Y

Threeking RC Stunt Car Instruction Manual

Model: B07L2XCG7Y

INTRODUCTION

The Threeking RC Stunt Car is a versatile remote-controlled vehicle designed for dynamic play. It features double-sided driving, 360-degree rotation capabilities, and durable construction to navigate various terrains. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance and longevity of your RC Stunt Car.

WHAT'S IN THE Box

- 1 x Threeking RC Stunt Car
- 1 x Remote Control
- 1 x Rechargeable Li-ion Battery (for car)
- 1 x USB Charging Cable
- (Note: AAA batteries for the remote control are not included.)



Image: The Threeking RC Stunt Car in blue, shown with its black remote control.

SETUP GUIDE

1. Car Battery Installation & Charging

1. Locate the battery compartment on the underside of the RC Stunt Car.
2. Carefully open the battery cover. You may need a small screwdriver (not included) to loosen the screws.
3. Connect the rechargeable Li-ion battery to the car's battery connector.
4. Place the battery inside the compartment and securely close the cover, tightening any screws.
5. To charge the car battery, remove it from the car. Connect the battery to the provided USB charging cable.
6. Plug the USB charging cable into a compatible USB power source (e.g., computer USB port, USB wall adapter).
7. Allow the battery to charge fully before first use. Charging time may vary.

2. Remote Control Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery cover.

3. Insert 2 x AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery cover securely.

OPERATING INSTRUCTIONS

1. Power On/Off

- Turn on the power switch on the RC Stunt Car.
- Turn on the power switch on the remote control. The indicator light on the remote will illuminate.
- The car and remote will automatically pair. If pairing fails, turn both off and on again.

2. Basic Controls

- **Forward/Backward:** Use the left joystick to move the car forward or backward.
- **Turn Left/Right:** Use the right joystick to steer the car left or right.

3. Special Features

- **360-Degree Rotation:** The car is designed to perform continuous 360-degree rotations. Experiment with joystick combinations to achieve this stunt.
- **Double-Sided Driving:** The unique design allows the car to drive on both sides. If it flips over, it can continue operating without interruption.
- **Obstacle Climbing:** The durable rubber tires and powerful motors enable the car to climb over small obstacles like rocks or uneven surfaces.
- **Light Control:** Press the "LIGHT" button on the remote control to toggle the car's flashing lights on or off.
- **Demo Mode:** Press the "DEMO" button on the remote control to activate an automatic demonstration of the car's various stunts and movements.



Image: Top-front view of the Threeking RC Stunt Car, highlighting its robust design.



Image: The Threeking RC Stunt Car balanced on two wheels, demonstrating its stunt capabilities.

MAINTENANCE

- **Cleaning:** Wipe the car and remote control with a soft, dry cloth. Avoid using water or harsh chemicals.
- **Battery Care:** Always remove batteries from the car and remote control when not in use for extended periods. Store batteries in a cool, dry place.
- **Storage:** Store the RC Stunt Car and remote control in a dry environment, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Car does not respond to remote.	Low battery in car or remote; Not paired.	Charge car battery; Replace remote batteries; Turn both off and on to re-pair.
Car moves slowly or inconsistently.	Low car battery.	Recharge car battery fully.
Lights are not flashing.	Light feature is off; Low battery.	Press the "LIGHT" button on the remote; Recharge car battery.

SPECIFICATIONS

- Product Dimensions:** 6.1 x 6.3 x 2.76 inches
- Item Weight:** 12.3 ounces
- Model Number:** B07L2XCG7Y
- Manufacturer Recommended Age:** 6 - 12 years
- Car Battery:** 1 x Lithium-Ion battery (included)
- Remote Battery:** 2 x AAA batteries (not included)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Threiking website. Keep your purchase receipt for warranty claims.

Documents - Threiking – B07L2XCG7Y

no relevant documents