

GreatPowerDirect GPD081203-19923

GreatPowerDirect USB Cable Instruction Manual

For Logitech Harmony Touch Remote Control Models 993-000695 and N-R0006

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your GreatPowerDirect USB cable. This cable is specifically designed to connect and power Logitech Harmony Touch remote control models 993-000695 and N-R0006.

2. PRODUCT OVERVIEW

The GreatPowerDirect USB cable is a durable and tangle-free solution for your Logitech Harmony Touch remote. It features a standard USB Type-A connector on one end and a Micro-USB connector on the other, facilitating connection to various power sources or computers.



Image 1: The GreatPowerDirect USB cable, featuring a USB-A connector on the left and a Micro-USB connector on the right, with the cable neatly coiled.

Key Features:

- **Connector Type:** USB Type A to Micro-USB

- **Cable Type:** USB
- **Special Feature:** Tangle-Free design
- **Color:** Black
- **Connector Gender:** Male-to-Male
- **Compatibility:** Logitech Harmony Touch Remote Control (Models 993-000695, N-R0006)



Image 2: A close-up view of the USB Type-A connector and the Micro-USB connector, highlighting their design and construction.

3. SETUP

Follow these steps to connect your USB cable to your Logitech Harmony Touch remote control:

1. **Identify Connectors:** Locate the USB Type-A connector (the larger, rectangular end) and the Micro-USB connector (the smaller, trapezoidal end) on your cable.
2. **Connect to Power Source/Computer:** Insert the USB Type-A connector into a compatible USB port on a power adapter (e.g., wall charger, computer USB port, power bank).
3. **Connect to Remote Control:** Carefully insert the Micro-USB connector into the corresponding port on your Logitech Harmony Touch remote control. Ensure the connector is oriented correctly to avoid damage.



Image 3: A separate view of the USB-A and Micro-USB connectors, illustrating their distinct shapes for proper connection.

4. OPERATING INSTRUCTIONS

Once connected, the cable facilitates two primary functions for your Logitech Harmony Touch remote:

4.1. Charging the Remote Control

- Connect the cable as described in the Setup section.
- Ensure the power source is active.
- The remote control should indicate that it is charging. Refer to your Logitech Harmony Touch remote's manual for specific charging indicators.

4.2. Data Transfer/Synchronization (if applicable)

- If your Logitech Harmony Touch remote supports data transfer or synchronization via USB, connect the USB Type-A end to a computer.
- Follow the instructions provided by Logitech's software for your remote control to perform updates or synchronize settings.

5. MAINTENANCE

Proper care will extend the life of your USB cable:

- **Cleaning:** Use a soft, dry cloth to wipe the cable and connectors. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the cable in a cool, dry place away from direct sunlight and extreme temperatures. The tangle-free design allows for easy coiling.
- **Handling:** Always grasp the connector housing when plugging or unplugging the cable. Avoid pulling directly on the cable itself to prevent internal damage.
- **Avoid Bending:** While designed to be tangle-free, avoid sharp bends or kinks, especially near the connectors, to maintain cable integrity.



Image 4: The GreatPowerDirect USB cable coiled, demonstrating its tangle-free nature for convenient storage.

6. TROUBLESHOOTING

If you encounter issues with your USB cable, consider the following:

- **Remote Not Charging:**
 - Ensure both ends of the cable are securely connected.
 - Try a different USB port or power adapter.

- Verify the power source is active and functioning correctly.
- Check if the remote control itself is functioning properly with its original charging accessories.
- **Cable Not Recognized by Computer:**
 - Ensure the cable is fully inserted into both the computer and the remote.
 - Try a different USB port on your computer.
 - Restart your computer and the remote control.
 - Ensure necessary drivers or software for your Logitech Harmony Touch remote are installed on your computer.
- **Physical Damage:** Inspect the cable for any visible signs of damage, such as frayed wires or bent connectors. If damaged, discontinue use and replace the cable.

7. SPECIFICATIONS

Brand	GreatPowerDirect
Model Number	GPD081203-19923
Connector Type	USB Type A, Micro-USB
Cable Type	USB
Special Feature	Tangle Free
Color	Black
Connector Gender	Male-to-Male
Item Weight	6 Ounces
Specification Met	FCC, CE, OEM
Indoor/Outdoor Usage	Indoor, Outdoor

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your GreatPowerDirect USB cable, please contact the manufacturer directly. Refer to the product packaging or the GreatPowerDirect official website for contact details.



Ideal for outdoor and coastal environments.