

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [XENEON](#) /

› [XENEON X21 Dual Portable Bluetooth Speakers Instruction Manual](#)

XENEON X21

XENEON X21 Dual Portable Bluetooth Speakers Instruction Manual

Model: X21 | Brand: XENEON

INTRODUCTION

Thank you for choosing the XENEON X21 Dual Portable Bluetooth Speakers. This manual provides essential information for setting up, operating, and maintaining your speakers to ensure optimal performance and longevity. Please read these instructions carefully before use.

WHAT'S IN THE BOX

- 2 x XENEON X21 Portable Bluetooth Speakers
- 2 x USB Charging Cables
- 2 x AUX Cables
- 1 x Hard EVA Travel Case
- 1 x User Manual

PRODUCT OVERVIEW

Controls and Ports

The XENEON X21 speakers feature intuitive controls and essential ports for versatile connectivity.

Build-in FM Radio

Enjoy FM Radio Indoor or Outdoor



- Strong Reception Receiving FM
- Auto-search radio

Image: XENEON X21 speaker with visible control buttons (Power, Volume Up/Next, Volume Down/Previous, Play/Pause, Bluetooth/TWS, Mode).

Control Buttons:

- **Power Button (O):** Press and hold to power on/off. Short press to switch modes (Bluetooth, FM Radio, Micro SD, AUX).
- **Volume Up / Next Track (+):** Short press for next track. Long press to increase volume.
- **Volume Down / Previous Track (-):** Short press for previous track. Long press to decrease volume.
- **Play / Pause (▶):** Short press to play/pause music.
- **Bluetooth / TWS Pairing (✳):** Short press to activate Bluetooth pairing. Long press to initiate True Wireless Stereo (TWS) pairing.
- **Mode Button (M):** Short press to cycle through input modes (Bluetooth, FM Radio, Micro SD, AUX).



Image: XENEON X21 speaker with rubber flap open, revealing DC 5V (charging), AUX, and Micro SD card slots.

Ports (located under a protective rubber flap):

- **DC 5V (Micro USB):** For charging the speaker.
- **AUX:** 3.5mm audio input for wired connection.
- **Micro SD Card Slot:** For playing music directly from a Micro SD card.

SETUP

1. Charging the Speakers

Before first use, fully charge your XENEON X21 speakers. Connect the provided USB charging cable to the DC 5V port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show charging status. A full charge takes approximately 4 hours.

2. Power On/Off

Press and hold the Power button (O) for 2-3 seconds to turn the speaker on or off. A voice prompt will indicate the power status.

3. Bluetooth Pairing (Single Speaker)

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'XENEON X21' from the list of devices.
4. Once paired, the speaker will emit a confirmation tone, and the LED light will become solid.

4. True Wireless Stereo (TWS) Pairing (Two Speakers)

For an immersive stereo experience, you can pair two XENEON X21 speakers together.



Dual X21 Speakers

Get Immersive Stereo Sound for a Party

Image: Two XENEON X21 speakers demonstrating True Wireless Stereo (TWS) pairing for enhanced audio.

1. Ensure both XENEON X21 speakers are powered on and not connected to any other Bluetooth device.
2. On one of the speakers (this will be your primary speaker), long press the Bluetooth/TWS Pairing button (⌘). The speaker will enter TWS pairing mode.
3. The primary speaker will search for the secondary speaker. Once connected, both speakers will emit a confirmation tone.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in the 'Bluetooth Pairing (Single Speaker)' section.
5. Both speakers will now play audio in synchronized stereo.

Video: Official Xeneo Power demonstration of Xeneo Dual Bluetooth Speakers Pack2 for True Wireless Stereo pairing. This video illustrates the process of connecting two speakers for a synchronized audio experience.

OPERATING THE SPEAKERS

Mode Selection

Short press the Power button (O) to cycle through available modes: Bluetooth, FM Radio, Micro SD Card, and AUX.



Image: XENEON X21 speaker showcasing its wide compatibility with various input methods.

1. Bluetooth Mode

After successful pairing, audio from your connected device will play through the speaker(s).

- **Play/Pause:** Short press the Play/Pause button (►).
- **Volume Control:** Long press the '+' button to increase volume, long press '-' button to decrease volume.
- **Next/Previous Track:** Short press the '+' button for the next track, short press '-' button for the previous track.

2. FM Radio Mode



Image: XENEON X21 speaker highlighting its built-in FM radio feature for indoor or outdoor enjoyment.

- In FM Radio mode, short press the Play/Pause button (►) to auto-scan and save available radio stations.
- Short press the '+' or '-' buttons to switch between saved stations.

3. Micro SD Card Mode

Insert a Micro SD card with MP3 audio files into the Micro SD card slot. The speaker will automatically switch to Micro SD card mode and begin playing music.

- Use the Play/Pause, Volume Up/Down, and Next/Previous Track buttons as in Bluetooth mode.

4. AUX Mode

Connect an external audio device (e.g., MP3 player, laptop) to the speaker's AUX port using the provided 3.5mm AUX cable. The speaker will automatically switch to AUX mode.

- Volume can be controlled via the speaker or the connected device. Track navigation must be done from the connected device.

5. Hands-Free Calling

When connected via Bluetooth, the built-in microphone allows for hands-free calls.

- **Answer/End Call:** Short press the Play/Pause button (►).
- **Reject Call:** Long press the Play/Pause button (►).

MAINTENANCE

Waterproof and Weatherproof Care (IPX6)

Dual X21 Speakers

Get Immersive Stereo Sound for a Party



Image: Two XENEKO X21 speakers positioned near a hot tub, illustrating their IPX6 waterproof design.

The XENEKO X21 speakers are IPX6 splashproof, dustproof, and shockproof. This means they can withstand strong jets of water, but should not be submerged in water. Ensure the rubber flap covering the charging, AUX, and Micro SD ports is securely closed to maintain water resistance.

Cleaning

Wipe the speakers with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

Battery Care

To prolong battery life, avoid fully discharging the speakers frequently. Charge them regularly, even if not in use for extended periods.

TROUBLESHOOTING

- Speaker won't turn on:** Ensure the battery is charged. Connect to a power source and try again.
- Cannot pair via Bluetooth:** Make sure the speaker is in pairing mode (flashing LED). Ensure your device's Bluetooth is enabled and within range (up to 100 feet). Forget previous pairings on your device and try again.
- No sound:** Check volume levels on both the speaker and your connected device. Ensure the correct mode is selected. If using AUX,

verify the cable connection.

- **TWS pairing fails:** Ensure both speakers are fully charged and not connected to any other Bluetooth device before initiating TWS pairing.
- **Poor FM radio reception:** Try moving the speaker to a different location or adjusting its orientation.

SPECIFICATIONS

Model Name	X21
Output Power	30 Watts
Connectivity Technology	Bluetooth 4.2, Auxiliary
Wireless Range	Up to 100 feet (Bluetooth)
Water Resistance Level	IPX6 Waterproof
Playtime	Up to 10 hours
Charging Time	4 Hours
Battery Type	2 Lithium Ion batteries (included)
Product Dimensions	2.8"D x 7.2"W x 2.8"H
Item Weight	0.93 Pounds (14.9 ounces)
Special Features	Built-in Microphone, FM Radio, Micro SD Card Slot, True Wireless Stereo Pairing

WARRANTY AND SUPPORT

XENEON X21 speakers come with a limited warranty. For detailed warranty information, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or visit the official XENEON website.