

[Manuals.plus](#) /

› [MEES](#) /

› MEES True Wireless Earbuds Sports - Instruction Manual

MEES MEES Black True

MEES True Wireless Earbuds Sports - Instruction Manual

Model: MEES Black True

Brand: MEES

INTRODUCTION

 
Thank you for choosing MEES True Wireless Earbuds. These earbuds are designed to provide a high-fidelity audio experience with the convenience of true wireless technology. Featuring Bluetooth 5.0, IPX4 water resistance, and touch controls, they are suitable for sports, travel, and daily use. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

WHAT'S IN THE BOX

- MEES True Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- Multiple Sizes of Ear Tips
- User Manual

PRODUCT OVERVIEW

The MEES True Wireless Earbuds feature an ergonomic design for a secure and comfortable fit, along with advanced audio technology for clear sound.

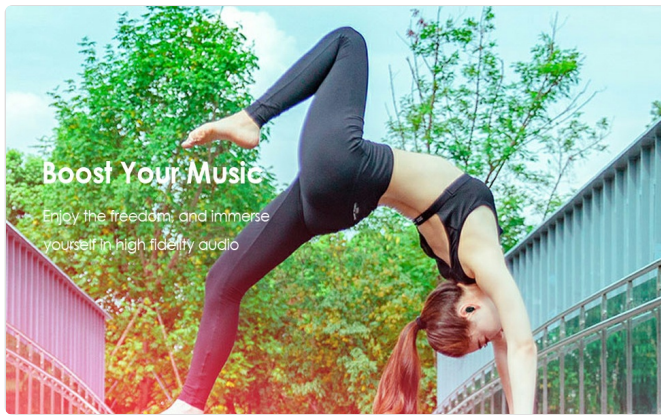

The MEES True Wireless Earbuds with their compact charging case.


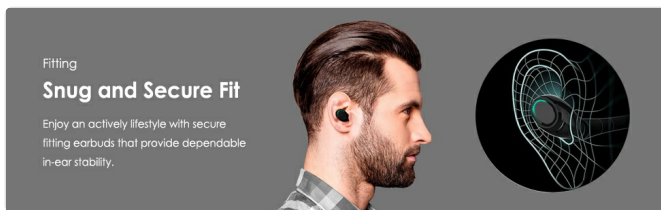 



Illustration of the snug and secure fit of the earbuds in the ear.

 


The earbuds utilize Bluetooth 5.0 for a stable and efficient wireless connection.

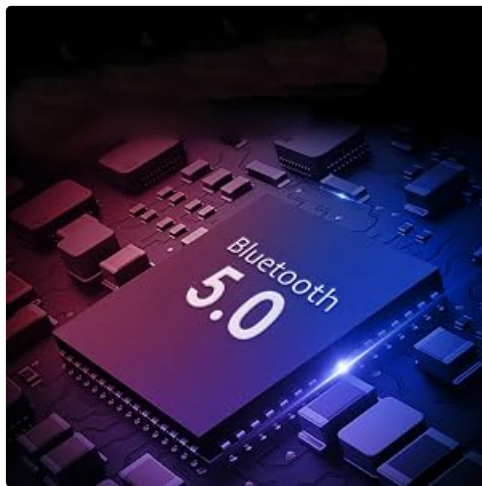

 The earbuds are IPX4 water resistant, protecting them from sweat and splashes.

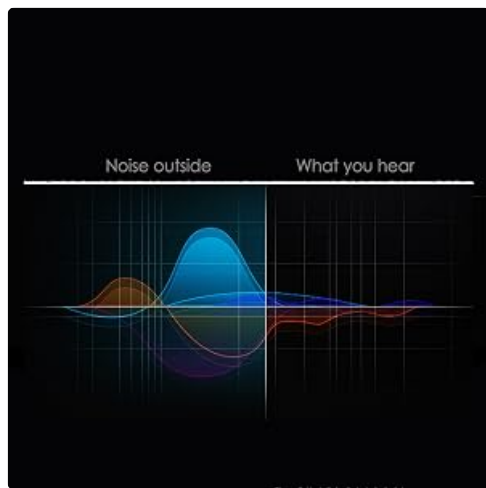

 Equipped with noise cancelling technology for clear audio.

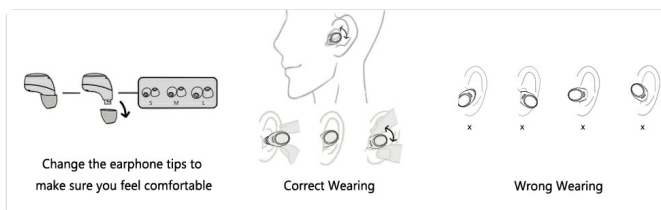

Interchangeable ear tips are included to ensure a comfortable and secure fit.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB charging cable to the Micro USB port on the case and to a power source. The indicator lights on the case will show the charging status.

2. Automatic Pairing

1. Open the charging case. The earbuds will automatically turn on and enter pairing mode.
2. On your mobile device, enable Bluetooth.
3. Search for "MEES" in the list of available Bluetooth devices and select it to connect.
4. Once connected, the earbuds will automatically pair with your device whenever they are taken out of the case.

3. Video Guide: MEES Wireless Sports Earbuds

Watch this official video for a visual guide on setting up and using your MEES Wireless Sports Earbuds.

OPERATING INSTRUCTIONS

The MEES True Wireless Earbuds feature intuitive touch controls for easy management of music and calls.

Touch Controls

TOUCH-KEY DESIGN

タッチキーデザイン



Easier to operate

操作しやすくなる



SINGLE TAP シングルタップ

Answer/Hangup the phone

電話を出る/切る

Play/Pause the music

音楽を再生/停止

DOUBLE TAP ダブルタップ

Left: Previous Song

左: 曲戻し

Right: Next Song

右: 曲送り

LONG PRESS 長押し

Left: Volume Down

左: ボリューム減少

Right: Volume Up

右: ボリューム増加

Visual guide to the touch-key design and functions.

- **Single Tap:** Answer/Hang up phone call, Play/Pause music.
- **Double Tap (Left Earbud):** Previous Song.
- **Double Tap (Right Earbud):** Next Song.

- **Long Press (Left Earbud):** Volume Down.
- **Long Press (Right Earbud):** Volume Up.

Power On/Off

- **Power On:** Earbuds automatically power on when removed from the charging case.
- **Power Off:** Earbuds automatically power off when placed back into the charging case.

Making Calls

With the built-in microphone, you can make and receive calls hands-free. Use the single tap function to manage calls as described above.

CARE AND MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging contacts with a soft, dry cloth. Avoid using harsh chemicals.
- **Water Resistance:** The earbuds are IPX4 water resistant, meaning they are protected against splashing water from any direction. They are suitable for workouts and light rain but should not be submerged in water.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged.
- **Ear Tips:** Experiment with the included ear tips to find the most comfortable and secure fit for optimal sound quality and noise isolation.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing with device	1. Ensure Bluetooth is enabled on your device. 2. Place earbuds back in the case, close, then reopen to re-enter pairing mode. 3. Forget "MEES" from your device's Bluetooth list and try pairing again. 4. Ensure earbuds are charged.
Only one earbud is working	1. Place both earbuds back into the charging case. 2. Ensure both earbuds are charged. 3. Take both earbuds out simultaneously. They should connect to each other first, then to your device.
Earbuds not charging	1. Ensure the charging case is charged. 2. Check that the charging contacts on both the earbuds and the case are clean and free of debris. 3. Try a different USB charging cable and power adapter.
Poor sound quality	1. Ensure earbuds are properly seated in your ears. Try different sized ear tips. 2. Check the audio source device's volume and sound settings. 3. Move closer to your connected device to avoid interference.

SPECIFICATIONS

Brand: MEES

Model Number: MEES Black True

Color: Black

Ear Placement: In Ear

Noise Control: Active Noise Cancellation

Item Weight: 3.5 ounces

Audio Driver Type: Dynamic Driver

Water Resistance Level: IPX4 Water Resistant

Connectivity Technology: Bluetooth

Bluetooth Version: 5.0

Bluetooth Range: 10 meters

Control Type: Media Control

Control Method: Touch

Playback Time (Earbuds): 3-4 hours

Total Playback Time (with Charging Case): Up to 12 hours

Headphone Jack: Micro USB

Compatible Devices: Bluetooth-enabled devices (iOS and Android)

WARRANTY AND SUPPORT

Warranty information for this product is not provided in the available data. Please refer to the product packaging or contact MEES customer support directly for details regarding warranty coverage and technical assistance.

For further support, visit the official MEES website or contact their customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question