



[Manuals.plus](#) /

> [Iceman](#) /

> Iceman Mini Portable Personal Fridge, 4 Liter Capacity (Model RJ48-BLACK-DE) Instruction Manual

Iceman RJ48-BLACK-DE

Iceman Mini Portable Personal Fridge (Model RJ48-BLACK-DE)

Instruction Manual

INTRODUCTION

The Iceman Mini Portable Personal Fridge is a versatile 4-liter capacity appliance designed to keep your food and beverages at optimal temperatures, whether cooling or warming. Its compact and lightweight design, along with dual power options, makes it suitable for various environments, from personal spaces to travel. The unique dry-erase door adds a functional and interactive element.

Key Features:

- **Perfect Portability:** Small size, sleek design, and a convenient carry handle for easy transport. Ideal for personal spaces, offices, dorms, road trips, and more.
- **Compact Size:** 4-liter capacity, capable of chilling six 12 oz. soda cans. Features a removable shelf for flexible storage of various small items like yogurt, fruit, milk, and bottles.
- **Cooling and Warming Functions:** Easily switch between cooling (up to 32°F below ambient temperature) and warming (up to 140°F in a 75°F ambient temperature) with a single switch.
- **Eco-Friendly & Safe:** 100% Freon-Free and Eco-Friendly, cETL approved with advanced safety technology.
- **Dual Power Options:** Includes plugs for both standard home outlets (AC) and 12V car chargers (DC).
- **Dry-Erase Door:** The front door functions as a dry-erase board, perfect for notes, reminders, or creative messages. A 3-color marker set is included.

WHAT'S IN THE BOX

Upon unpacking your Iceman Mini Portable Personal Fridge, please ensure all components are present:

- Iceman Mini Portable Personal Fridge Unit
- Removable Interior Shelf
- AC Power Cord (for home outlets)
- DC Power Cord (for 12V car chargers)

- 3-Color Dry-Erase Marker Set
- User Guide (this document)

SETUP

1. **Unpack the Unit:** Carefully remove the fridge and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the fridge on a flat, stable surface. Ensure adequate ventilation around the unit, especially at the rear where the fan is located. Avoid placing it in direct sunlight or near heat sources.
3. **Insert Shelf:** If desired, insert the removable shelf into the interior grooves to create two compartments.
4. **Power Connection:**
 - **For Home Use (AC):** Connect the AC power cord to the AC port on the back of the fridge. Plug the other end into a standard home electrical outlet (120V).
 - **For Car Use (DC):** Connect the DC power cord to the DC port on the back of the fridge. Plug the other end into your vehicle's 12V car charger/cigarette lighter socket.

Note: Ensure the fridge is OFF before connecting or disconnecting power cords.



Image: The Iceman Mini Portable Personal Fridge shown with its included AC and DC power cords, and the three dry-erase markers. This illustrates the convenience of its dual power options and the dry-erase feature.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the power switch on the back of the unit. Slide it to the 'ON' position to power the fridge.
2. **Select Mode (Cool/Warm):** Use the 'COOL/WARM' switch on the back of the unit to select your desired function. The indicator light will change color (typically green for cool, red for warm).

Video: This official product video demonstrates the features of the Chefman Mini Portable Eraser Board Personal Fridge, including its cooling and heating capabilities, 4-liter capacity, and ability to chill six 12oz cans. It also highlights its portability and dry-erase function.

3. **Loading Items:**

- **For Cooling:** For best results, place pre-chilled items into the fridge. The unit is designed to maintain temperature, not rapidly cool warm items.
- **For Warming:** For best results, place pre-warmed items into the fridge. The unit is designed to maintain warmth, not rapidly heat cold items.



Image: A visual representation of the fridge's versatility, showing one side filled with cold items like berries and a sandwich, and the other side with a warm beverage, demonstrating its cooling and heating functions.

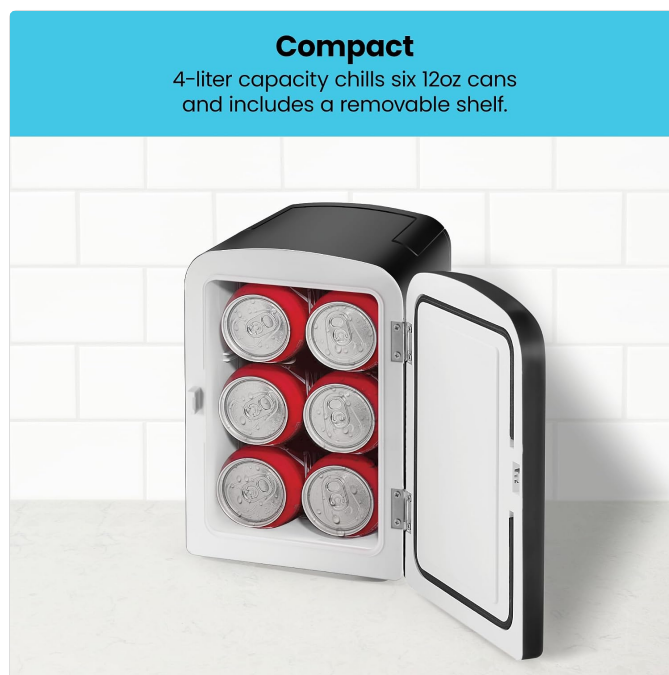


Image: The interior of the compact fridge, showcasing its 4-liter capacity by holding six standard 12oz beverage cans, with the door open.

4. **Using the Dry-Erase Board:** Use the included markers to write notes or reminders on the fridge door.

MAINTENANCE

- **Cleaning the Exterior:** Wipe the exterior with a soft, damp cloth. For the dry-erase board, use a wet cloth to easily wipe away marker ink. Avoid abrasive cleaners.
- **Cleaning the Interior:** Unplug the unit before cleaning. Wipe the interior with a soft cloth dampened with mild soap

and water. Rinse with a clean, damp cloth and dry thoroughly. The removable shelf can be washed separately.

- **Ventilation:** Periodically check the rear fan and vents for dust or obstructions. Keep them clear to ensure efficient operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not securely plugged in; power outlet malfunction; switch in 'OFF' position.	Ensure both ends of the power cord are firmly connected. Test the outlet with another appliance. Slide the power switch to 'ON'.
Unit is not cooling/warming effectively.	Ambient temperature too high/low; vents obstructed; items not pre-chilled/warmed.	Ensure proper ventilation around the unit. Place pre-chilled/warmed items inside. The unit maintains temperature, it does not rapidly change it.
Excessive noise from the unit.	Fan obstruction; unit not on a stable surface.	Check the rear fan for any obstructions and clear them. Ensure the unit is on a flat, stable surface to minimize vibrations.
Dry-erase marks are difficult to remove.	Incorrect markers used; surface not cleaned regularly.	Use only the provided dry-erase markers or compatible ones. Wipe with a wet cloth immediately after use for best results.

SPECIFICATIONS

Feature	Detail
Product Dimensions	9.45"D x 6.89"W x 10.43"H
Brand	Iceman
Capacity	4 Liters (Chills 6 x 12oz cans)
Configuration	Compact Freezerless
Color	Black Dry Erase
Special Feature	Dry-Erase Door, Portable Handle
Installation Type	Countertop
Number of Doors	1
Defrost System	Frost Free
Voltage	AC 120V / DC 12V
Cooling Method	Thermoelectric
Number Of Shelves	1 (Removable)
Adjustable Temperature Control	Yes (Cool/Warm Switch)

Feature	Detail
Item Weight	1.8 Kilograms
Annual Energy Consumption	250 Kilowatt Hours Per Year
Model Number	RJ48-BLACK-DE
Safety Certification	cETL Approved

WARRANTY & SUPPORT

This Iceman Mini Portable Personal Fridge (Model RJ48-BLACK-DE) comes with a **1-year Limited Warranty** provided by Chefman. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please refer to the contact information provided in your purchase documentation or visit the manufacturer's official website.