

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA MICKE White Desk User Manual

IKEA MICKE

IKEA MICKE White Desk User Manual

Model: MICKE

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your IKEA MICKE White Desk. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: Front view of the IKEA MICKE White Desk, showcasing its clean white finish and two integrated drawers.

SETUP AND ASSEMBLY

The IKEA MICKE White Desk requires assembly. Please ensure all components are present before starting. Refer to the

included assembly instructions for detailed step-by-step guidance.

- Unpack all components and verify against the parts list.
- Assemble the frame according to the diagrams.
- Attach the tabletop securely.
- Install drawers and their runners.
- Ensure all screws and fasteners are tightened for stability.

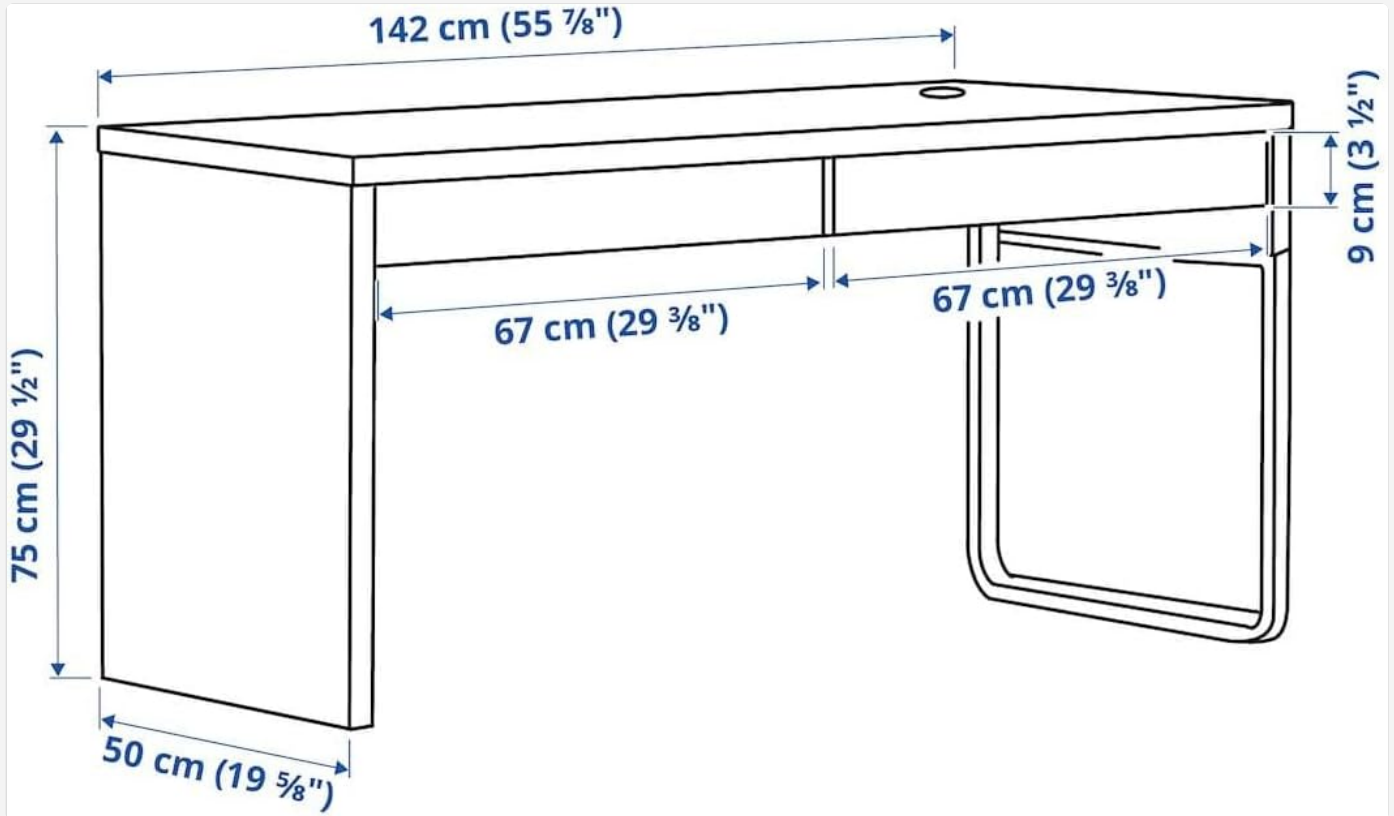


Image: Technical drawing illustrating the dimensions of the IKEA MICKE White Desk: 142 cm (55 7/8") length, 75 cm (29 1/2") height, and 50 cm (19 5/8") depth.

OPERATING FEATURES

The MICKE desk is designed for functionality and convenience in a home office environment.

Cable Management

The desk features integrated cable outlets and a compartment at the back to keep your cords and cables organized and out of sight.

- Route power cords and data cables through the circular opening on the tabletop.
- Utilize the rear compartment to store excess cable length and power strips, maintaining a tidy workspace.



Image: Close-up view of the circular cable outlet on the desk's surface, with cables passing through it.



Image: View of the cable management compartment located underneath the desk, showing cables neatly routed through it.

Drawers

The desk includes two integrated drawers for storage of office supplies and documents.

- Pull the drawer handles to open.
- Organize contents as desired.
- Push firmly to close until the drawer is flush with the desk front.



Image: An open desk drawer revealing organized office supplies such as a planner, stapler, and pens.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your IKEA MICKE White Desk, follow these care instructions:

- **Cleaning:** Wipe clean with a damp cloth and a mild cleaner. Dry with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong solvents, or polishes that may damage the painted surface.
- **Protect from Heat and Moisture:** Avoid placing hot items directly on the surface. Wipe up spills immediately.
- **Regular Checks:** Periodically check and retighten all assembly fittings to ensure stability.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Solution
Desk feels wobbly.	Check all screws and bolts. Tighten any loose fittings. Ensure the desk is on a level surface.
Drawers do not slide smoothly.	Ensure drawer runners are correctly installed and free of obstructions. Lightly lubricate runners if necessary.

Problem	Solution
Surface scratches or marks.	For minor marks, a furniture touch-up pen matching the white finish may be used. Use coasters or desk pads to prevent future damage.

SPECIFICATIONS

Feature	Detail
Brand	IKEA
Model	MICKE
Product Dimensions (D x W x H)	19.6" x 55.9" x 29.5" (50 cm x 142 cm x 75 cm)
Color	White
Style	Modern
Base Material	Wood
Finish Type	Painted
Special Features	Cable Outlet, Modular
Room Type	Office
Recommended Uses	Working
Mounting Type	Tabletop

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation provided at the time of purchase or visit the official IKEA website. Keep your proof of purchase for any warranty claims. For assembly assistance or missing parts, please contact IKEA customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question