

[Manuals.plus](#) /

› [Hyper Tough](#) /

› Hyper Tough 4-in-1 Heavy Duty Stapler User Manual

Hyper Tough 4393

Hyper Tough 4-in-1 Heavy Duty Stapler User Manual

Model: 4393

INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Hyper Tough 4-in-1 Heavy Duty Stapler. Please read this manual thoroughly before using the tool and keep it for future reference.



Figure 1: Hyper Tough 4-in-1 Heavy Duty Stapler. This versatile tool is designed for various fastening tasks, including light-duty staples, heavy-duty staples, cable staples, and 18-gauge brads.

The Hyper Tough 4-in-1 Heavy Duty Stapler is designed to complete cable installations and other projects efficiently. It features an adjustable power switch for driving various staple types and 18-gauge brads. The coated handle ensures a comfortable grip, and the reversible clip allows for convenient portability. Integrated wire guides assist in accurate stapling over wiring and cabling, securing them properly to wooden beams.

SAFETY INSTRUCTIONS

Always follow these safety precautions to prevent injury and damage to the tool:

- **Wear Eye Protection:** Always wear ANSI Z87.1 compliant safety glasses with side shields when operating this tool.
- **Keep Hands Clear:** Never place hands or fingers near the staple exit area.
- **Inspect Tool:** Before each use, inspect the stapler for any damage or loose parts. Do not use if damaged.
- **Use Correct Fasteners:** Only use staples and brads specified for this tool.
- **Secure Workpiece:** Ensure the material being stapled is stable and secure.
- **Avoid Overreaching:** Maintain proper footing and balance at all times.
- **Store Safely:** Store the stapler in a dry, secure place out of reach of children.
- **Do Not Modify:** Never attempt to modify the tool.

FEATURES

The Hyper Tough 4-in-1 Heavy Duty Stapler offers the following key features:

- Versatile compatibility with light-duty staples, heavy-duty staples, cable staples, and 18-gauge brads.
- High/low power switch for adjusting fastening force based on material.
- Integrated wire guides for precise stapling over wires and cables.
- Reversible belt clip for convenient carrying and access.
- Coated handle for a comfortable and secure grip during extended use.

SETUP

Loading Staples/Brads

1. Ensure the stapler is not pointed at anyone or anything.
2. Locate the staple magazine release latch, typically at the rear or bottom of the tool.
3. Press the release latch and pull out the staple pusher rod.
4. Insert the correct type and size of staples or brads into the magazine with the points facing down.
5. Push the pusher rod back into the magazine until it locks securely in place.



Figure 2: Loading staples and operating the stapler. The image illustrates the process of inserting staples into the magazine and the proper technique for stapling various materials.

OPERATING INSTRUCTIONS

Adjusting Power

The stapler features a high/low power switch, usually located on the top or side of the tool. Set the switch to 'High' for harder materials or longer fasteners, and 'Low' for softer materials or shorter fasteners. Test on a scrap piece of material first to determine the optimal setting.

Stapling Procedure

1. Ensure safety glasses are worn.
2. Select the appropriate power setting.
3. Place the nose of the stapler firmly against the workpiece where the staple is to be driven.
4. Apply firm, even pressure to the handle to drive the staple.

5. Release the handle to allow it to return to its original position.

Using Wire Guides

For securing wires or cables, align the wire within the integrated wire guides located on the nose of the stapler. This ensures the staple straddles the wire without piercing it, providing a secure and safe installation.

MAINTENANCE

Cleaning

Regularly clean the stapler to ensure optimal performance. Use a dry cloth to wipe down the exterior. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal mechanisms. Do not use harsh chemicals or solvents.

Storage

When not in use, store the stapler in a clean, dry environment. It is recommended to remove any staples or brads from the magazine before long-term storage to prevent spring fatigue.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Staples not driving fully	Low power setting; hard material; incorrect staple size; worn spring.	Switch to 'High' power; use appropriate staples; consider professional service if spring is worn.
Stapler jams frequently	Incorrect staple size/type; bent staples; debris in magazine.	Ensure correct staples are used; remove bent staples; clear any debris from the magazine.
Staples not feeding	Magazine empty; pusher rod not fully engaged; bent staples.	Reload staples; ensure pusher rod is locked; remove bent staples.

SPECIFICATIONS

Attribute	Detail
Brand	Hyper Tough
Model Number	4393
Dimensions	29.01 x 16.99 x 4.5 cm (11.42 x 6.69 x 1.77 inches)
Material	Alloy Steel, Plastic, Aluminium
Colour	Red
Operation Mode	Manual
Compatible Fasteners	Light-duty staples, heavy-duty staples, cable staples, 18-gauge brads
UPC	820909043935

WARRANTY AND SUPPORT

Specific warranty details for the Hyper Tough 4-in-1 Heavy Duty Stapler are not provided within this manual. For information regarding warranty coverage, product support, or service, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

© 2024 Hyper Tough. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question