

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lenco](#) /

› [Lenco LS-300WD Turntable with Bluetooth and Two External Speakers Instruction Manual](#)

## Lenco LS-300WD

# Lenco LS-300WD Turntable with Bluetooth and Two External Speakers Instruction Manual

Model: LS-300WD

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Lenco LS-300WD Turntable. Please read these instructions carefully before using the product and retain them for future reference. The Lenco LS-300WD is a belt-drive turntable featuring Bluetooth connectivity and two external 10W RMS speakers, designed for playing vinyl records at 33 and 45 RPM.

## 2. SAFETY INSTRUCTIONS

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation around the unit. Do not block ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Keep the product away from direct sunlight, heat sources, and strong magnetic fields.
- Avoid placing heavy objects on the unit.

## 3. PACKAGE CONTENTS

Carefully unpack your Lenco LS-300WD Turntable and ensure all items are present and undamaged. The package should contain:

- Lenco LS-300WD Turntable Unit
- 2 x External Speakers (10W RMS each)
- Power Adapter (CE-UK multi-plug)
- Slipmat
- 45 RPM Adapter
- Plastic Dust Cover

- 2 x Speaker Cables
- Moving Magnetic Cartridge (MMC)
- Instruction Card

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your Lenco LS-300WD Turntable.



Figure 4.1: The Lenco LS-300WD Turntable system, including the main unit and two external speakers, all in a wood finish.



Figure 4.2: A detailed view of the turntable unit with the protective dust cover raised, showing the platter, tonearm, and controls.



Figure 4.3: A close-up of the turntable's moving magnetic cartridge (MMC) and stylus, positioned over the platter.



**EXTRA WARM GELUID**  
DOOR DE AUDIO TECHNICA MMC CARTRIDGE EN DE  
2 HOUTEN SPEAKERS (10W PER STUK)

Figure 4.4: Diagram illustrating the dimensions of the Lenco LS-300WD turntable unit: 440mm width, 350mm depth, and 150mm height.

## 5. SETUP

### 5.1 Unpacking and Placement

1. Remove all packaging materials and protective films from the turntable and speakers.
2. Place the turntable on a stable, level surface, away from direct sunlight, heat sources, and strong vibrations.
3. Position the two external speakers on either side of the turntable for optimal stereo sound.

### 5.2 Connecting the Speakers

1. Locate the speaker output terminals on the rear of the turntable unit.
2. Connect the provided speaker cables to the corresponding terminals on the turntable and the external speakers. Ensure correct polarity (positive to positive, negative to negative).

### 5.3 Platter and Belt Installation

1. Carefully place the platter onto the turntable spindle.
2. Locate the drive belt, typically found underneath the platter or separately packaged.
3. Stretch the drive belt around the motor pulley and the inner rim of the platter. Refer to the included instruction card for a visual guide if necessary.
4. Place the slipmat on top of the platter.

## 5.4 Stylus Protection Removal

Before first use, carefully remove the protective cap from the stylus (needle) at the end of the tonearm. Be gentle to avoid damaging the stylus.

## 5.5 Power Connection

1. Connect the power adapter to the DC input jack on the rear of the turntable.
2. Plug the power adapter into a suitable wall outlet.

# 6. OPERATING INSTRUCTIONS

---

## 6.1 Playing a Record

1. Open the dust cover.
2. Place a record on the platter, ensuring it is centered. If playing a 45 RPM single, place the 45 RPM adapter on the spindle first.
3. Select the correct speed (33 or 45 RPM) using the speed selector switch on the turntable.
4. Gently lift the tonearm using the cueing lever.
5. Move the tonearm over the desired starting groove of the record.
6. Lower the tonearm slowly onto the record using the cueing lever. The record will begin to play.
7. Adjust the volume using the volume control knob.
8. At the end of the record, the auto-stop feature will automatically stop the platter rotation. Lift the tonearm and return it to its rest.

## 6.2 Bluetooth Operation

The Lenco LS-300WD can receive audio wirelessly via Bluetooth from compatible devices.

1. Ensure the turntable is powered on.
2. Switch the turntable to Bluetooth mode (refer to the control panel for the Bluetooth indicator/button). The Bluetooth indicator will typically flash, indicating it is in pairing mode.
3. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
4. Select "Lenco LS-300WD" from the list of devices.
5. Once paired, the Bluetooth indicator on the turntable will become solid, and you can now stream audio from your device through the turntable's speakers.

# 7. MAINTENANCE

---

## 7.1 Cleaning the Unit

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the dust cover and cabinet surfaces.

- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

## 7.2 Stylus Care

- The stylus is delicate. Handle it with extreme care.
- Clean the stylus periodically using a soft brush, brushing gently from back to front.
- A worn or damaged stylus can harm your records and degrade sound quality. Replace the stylus when necessary.

## 7.3 Dust Cover

Keep the dust cover closed when the turntable is not in use to protect the platter and stylus from dust and debris.

## 8. TROUBLESHOOTING

If you encounter issues with your Lenco LS-300WD, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected and the outlet is functional.
No sound from speakers	Speakers not connected, volume too low, or incorrect input mode.	Check speaker cable connections. Increase volume. Ensure turntable is in the correct playback mode (Phono or Bluetooth).
Record skipping	Dirty record, worn stylus, or unstable surface.	Clean the record. Inspect and replace stylus if worn. Place turntable on a stable, level surface.
Bluetooth pairing failure	Turntable not in pairing mode, device too far, or interference.	Ensure turntable is in Bluetooth pairing mode. Move device closer. Reduce interference from other wireless devices.
Incorrect playback speed	Wrong speed selected.	Adjust the speed selector switch to 33 or 45 RPM as appropriate for the record.

## 9. SPECIFICATIONS

- **Brand:** Lenco
- **Model:** LS-300WD
- **Type:** Belt-drive Turntable
- **Speeds:** 33 1/3, 45 RPM
- **Cartridge:** Moving Magnetic Cartridge (MMC)
- **Speakers:** 2 x External Speakers
- **Output Power:** 2 x 10W RMS
- **Connectivity:** Bluetooth Receiver
- **Features:** Auto Stop, Adjustable Counterweight, Adjustable Speed, Dust Cover, RCA Output
- **Material:** MDF Housing (Wood finish)
- **Product Dimensions (Turntable):** 16.69 x 13.66 x 5.55 inches (42.4 x 34.7 x 14.1 cm)
- **Item Weight (Turntable):** 17.64 pounds (8 kg)

- **Power Consumption (On-mode):** 24 watts

## 10. WARRANTY AND SUPPORT

Lenco products are designed and manufactured to the highest quality standards. For warranty information, technical support, or service inquiries, please refer to the contact details provided in your purchase documentation or visit the official Lenco website. Keep your proof of purchase for warranty claims.

### Related Documents - LS-300WD

 <p><b>Lenco LS-10 User Manual: Turntable with Built-in Speakers</b> User manual for the Lenco LS-10 turntable. Learn how to set up, operate, and maintain your vinyl record player with built-in speakers. Includes safety information and specifications.</p>
 <p><b>Lenco LS-410 Turntable User Manual: Setup, Operation &amp; Features</b> Explore the Lenco LS-410 turntable, featuring 4 built-in speakers and Bluetooth connectivity. This comprehensive user manual provides detailed instructions for setup, playback, care, and troubleshooting, ensuring an optimal vinyl and digital audio experience.</p>
 <p><b>Lenco LS-15 User Manual: Turntable with Built-in Speakers and Bluetooth</b> Comprehensive user manual for the Lenco LS-15 turntable, detailing setup, operation, features like Bluetooth connectivity, and troubleshooting. Includes safety instructions and technical specifications.</p>
 <p><b>Lenco LS-300/LS-301/LS-310 Turntable with Bluetooth: User Manual &amp; Setup Guide</b> Comprehensive user manual for the Lenco LS-300, LS-301, and LS-310 turntables. Learn setup, record playback, Bluetooth connectivity, safety, and specifications.</p>
 <p><b>Lenco LS-430/LS-440 User Manual: Turntable with Built-in Speakers and Bluetooth</b> Comprehensive user manual for the Lenco LS-430 and LS-440 turntables. Learn about setup, operation, features like built-in speakers and Bluetooth reception, maintenance, and troubleshooting for this versatile audio device.</p>

**Lenco**



### [Lenco LS-430/LS-440 Turntable User Manual](#)

Comprehensive user manual for the Lenco LS-430 and LS-440 turntables. Learn about setup, operation, built-in speakers, Bluetooth, and maintenance for your Lenco record player.