

Amazon Kindle Oasis

Kindle Oasis User Manual

Model: Kindle Oasis (8 GB, Wi-Fi)

INTRODUCTION

Welcome to the Kindle Oasis user manual. This guide will help you get started with your new e-reader, understand its features, and troubleshoot any issues you may encounter. The Kindle Oasis is designed for an immersive reading experience, featuring a high-resolution display, adjustable warm light, and a waterproof design.

- **7-inch, 300 ppi flush-front Paperwhite display:** Enjoy crisp, clear text that reads like real paper.
- **Adjustable warm light:** Shift screen shade from white to amber for comfortable reading day or night.
- **Waterproof (IPX8):** Read confidently in the bath, by the pool, or at the beach.
- **Thin and light ergonomic design:** Comfortable to hold for extended reading sessions, with dedicated page turn buttons.
- **E-ink technology:** Provides a glare-free reading experience, even in direct sunlight.
- **Vast library access:** Instantly access millions of books, newspapers, and audiobooks.

GETTING STARTED

1. Charging Your Kindle Oasis

Before first use, fully charge your Kindle Oasis. Connect the included USB cable to the charging port on your device and plug the other end into a power adapter (sold separately) or a computer's USB port. The charging indicator light will turn green when fully charged.

2. Powering On/Off

To power on your Kindle Oasis, press and hold the power button located on the top edge of the device for a few seconds until the screen lights up. To turn off, press and hold the power button until a power dialog appears, then select 'Power Off'. A short press of the power button will put the device to sleep.

3. Connecting to Wi-Fi

1. From the Home screen, tap the **Settings** icon (gear icon) or swipe down from the top of the screen and tap **All Settings**.
2. Tap **Wi-Fi & Bluetooth**, then **Wi-Fi Networks**.
3. Select your desired Wi-Fi network from the list.

4. If prompted, enter the Wi-Fi password and tap **Connect**.

4. Registering Your Device

After connecting to Wi-Fi, you will be prompted to register your Kindle Oasis to your Amazon account. Follow the on-screen instructions to enter your Amazon account credentials. Registration is necessary to access your Kindle library and the Kindle Store.

OPERATING YOUR KINDLE OASIS

1. Navigating Your Device

The Kindle Oasis offers both touchscreen navigation and physical page turn buttons.

- **Page Turn Buttons:** Use the large buttons on the side of the device to turn pages forward or backward while reading. The orientation of these buttons adjusts automatically when you rotate the device.
- **Touchscreen:** Tap the left or right side of the screen to turn pages. Tap the top of the screen to access reading options, settings, and the Home screen.



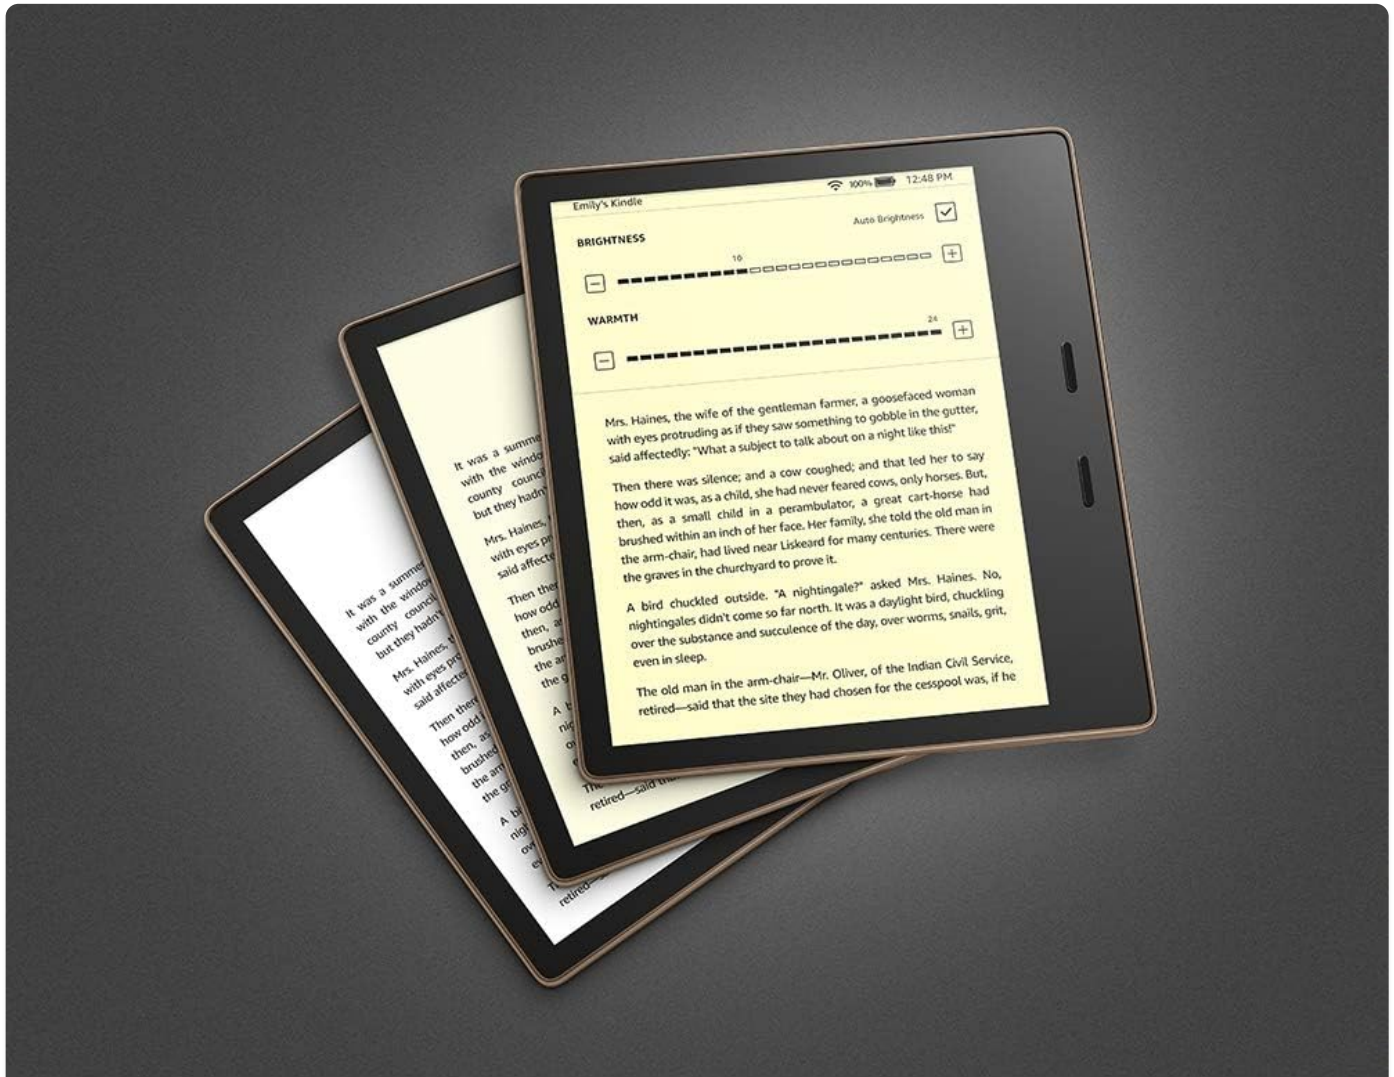 
Image: The Kindle Oasis features a sleek, ergonomic design with physical page turn buttons for comfortable one-handed reading. The

device is shown held in a hand, highlighting its slim profile and the placement of the buttons.

2. Adjusting Display Settings

The Kindle Oasis allows you to customize your reading experience with adjustable brightness and warm light settings.

- **Brightness:** Swipe down from the top of the screen and use the brightness slider to adjust the screen's illumination.
- **Warm Light:** Swipe down from the top of the screen and use the warm light slider to shift the screen tone from white to amber. You can also schedule warm light to change automatically based on the time of day.



Adjustable warm light Éclairage chaleureux à l'intensité ajustable

Image: A close-up of the Kindle Oasis screen displaying the brightness and warm light adjustment sliders. This feature allows users to customize the screen's illumination and color temperature for optimal reading comfort in various lighting conditions.

3. Reading Books

To open a book, tap its cover on the Home screen. While reading, you can:

- **Turn Pages:** Tap the left/right side of the screen or use the page turn buttons.
- **Access Menu:** Tap the top of the screen to bring up the reading toolbar, which includes options for font size, dictionary, X-Ray, and more.

- **Highlight & Notes:** Press and hold a word to highlight it or add a note.

4. Water Resistance

The Kindle Oasis is designed to withstand accidental immersion in water, with an IPX8 rating. This means it can endure submersion in up to two meters of fresh water for up to 60 minutes. It is suitable for reading in the bath, by the pool, or at the beach. If your Kindle Oasis gets wet, wipe it dry with a soft cloth before charging.



Waterproof Résistant à l'eau

Image: A person is shown relaxing by a swimming pool, reading on their Kindle Oasis. This image illustrates the device's waterproof capability, allowing for worry-free reading in various environments where water might be present.

CARE AND MAINTENANCE

1. Cleaning Your Device

To clean your Kindle Oasis, use a soft, lint-free cloth. If necessary, dampen the cloth slightly with water. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the screen or finish.

2. Battery Information

The Kindle Oasis uses a rechargeable lithium-ion battery. Battery life varies based on usage, Wi-Fi connectivity, and light settings. To maximize battery life, keep Wi-Fi off when not needed and use lower brightness settings. Avoid exposing the device to extreme temperatures.

3. Software Updates

Your Kindle Oasis periodically checks for and downloads software updates automatically when connected to Wi-Fi. These updates provide new features, performance improvements, and bug fixes. Ensure your device is charged and connected to Wi-Fi for updates to install smoothly.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Solution
Device not responding/frozen	Perform a hard reset: Press and hold the power button for 40 seconds until the device restarts.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on your Kindle. Verify the Wi-Fi password. Restart your Wi-Fi router. Try connecting to a different network if available.
Books not downloading	Check Wi-Fi connection. Ensure device is registered to the correct Amazon account. Sync your Kindle from the settings menu.
Screen flickering or ghosting	This is normal for E-ink displays. The screen refreshes periodically. If persistent, try a hard reset.

Resetting Your Device

If troubleshooting steps do not resolve your issue, you may need to reset your Kindle Oasis to factory defaults. This will erase all content and settings on your device. Go to **Settings > Device Options > Reset Device**.

PRODUCT SPECIFICATIONS

- **Display:** 7-inch Paperwhite display technology with E Ink Carta and built-in light, 300 ppi, optimized font technology, 16-level grayscale.
- **Dimensions:** Approximately 159 mm x 141 mm x 3.4-8.4 mm (thin and light ergonomic design).
- **Weight:** Approximately 188 grams.
- **Storage:** 8 GB (holds thousands of books).
- **Connectivity:** Wi-Fi (802.11b/g/n).
- **Waterproofing:** IPX8 rated (can withstand immersion in 2 meters of fresh water for 60 minutes).
- **Battery Life:** A single charge lasts up to six (6) weeks, based on a half hour of reading per day with the wireless off and the light setting at 13.



Our best 7" Kindle, with 300 ppi display

Notre meilleure tablette Kindle de 7 pouces, avec un écran de 300 ppp

Image: A detailed view of the Kindle Oasis screen displaying text from a book. This highlights the 7-inch, 300 ppi display, which provides a sharp and clear reading experience, mimicking the appearance of ink on paper.

WARRANTY AND SUPPORT


 


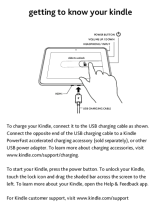 
 
Warranty Information

Your Kindle Oasis is covered by a limited warranty. For specific details regarding the warranty period and coverage, please refer to the warranty information provided with your device at the time of purchase or visit the official Amazon support website.

Customer Support

For further assistance, technical support, or to report issues not covered in this manual, please visit the Amazon Device Support page or contact Amazon Customer Service directly. You can find support options by visiting amazon.ca/devicesupport.

Related Documents - Kindle Oasis

	<p>Amazon Kindle Oasis Quick Start Guide and Information</p> <p>Concise guide for the Amazon Kindle Oasis e-reader, covering device overview, multilingual support information, and links to further resources. Optimized for accessibility and SEO.</p>
 <p>Learn how to charge your Kindle by selecting the Kindle User's Guide in the library on your device. To contact Amazon Customer Service, visit www.amazon.com/customer-support.</p>	<p>Amazon Kindle E-Reader Quick Start and Support</p> <p>Get started with your Amazon Kindle e-reader. Find information on device usage, access the Kindle User's Guide, and contact Amazon Customer Service for support.</p>
	<p>Amazon Fire Tablet and Kindle E-Reader Quick Setup Guide</p> <p>A quick setup guide for Amazon Fire tablets and Kindle e-readers, covering initial charging, Wi-Fi connection, account registration, payment settings, content download, and family sharing features.</p>
	<p>User Manual: 6ft White PVC USB 2.0 Cables for Charging and Data Transfer</p> <p>Official user manual for 6ft white PVC USB 2.0 cables, detailing compatibility with USB-C and Micro-USB devices, charging, data transfer, and care instructions. Compatible with various Kindle models.</p>
	<p>Amazon Kindle Fire HD Quick User Guide</p> <p>A quick user guide for the Amazon Kindle Fire HD, detailing device features, charging, unlocking, and important product information including terms, policies, and warranty.</p>
	<p>Kindle Kids Edition Quick Start Guide</p> <p>Get started with your Amazon Kindle Kids Edition. This guide covers what's included in the box and the initial setup process, including registration and claiming your 1-year Amazon FreeTime Unlimited subscription.</p>