

## Easytry123 Easytry4921

# Easytry123 Replacement Remote Control Instruction Manual

Model: Easytry4921

## INTRODUCTION

---

This manual provides instructions for the Easytry123 replacement remote control, model Easytry4921. This remote is designed to be compatible with various Saba LED and LCD HDTV models, including LED26V11, SBV1943H, SBV2243H, SCB1909W, SCB1910VX, LED32PV412, and S19104DVD. Please read this manual carefully before use to ensure proper operation.

### Important Note:

- This is a replacement remote control. Some advanced functions of your original TV remote may not be supported.
- Ensure your TV model is listed in the compatible models for full functionality.
- Batteries are not included with this remote control.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect installation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, revealing the battery compartment. This shows where to insert the AAA batteries.



Image: Back of the remote control with the battery cover partially removed, illustrating the correct orientation for battery insertion.

After installing the batteries, the remote control is ready for use. No programming is typically required for this replacement remote.

## OPERATING INSTRUCTIONS

---

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the TV's IR receiver for optimal performance.

## Basic Functions:

- **Power Button:** Turns the TV on or off.
- **Channel Up/Down:** Changes the TV channel.
- **Volume Up/Down:** Adjusts the TV's audio volume.
- **Mute Button:** Mutes or unmutes the TV's audio.
- **Input/Source Button:** Cycles through available input sources (e.g., HDMI 1, AV, Component).
- **Number Buttons (0-9):** Directly select TV channels.
- **Menu Button:** Accesses the TV's on-screen menu.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Used to navigate through TV menus and confirm selections.

Refer to your television's original user manual for specific functions and menu navigation details, as these may vary by TV model.

## MAINTENANCE

---

### Cleaning the Remote Control

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote control in water.

### Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or damage.

#### **Battery Safety:**

- Remove batteries if the remote control will not be used for an extended period.
- Dispose of used batteries according to local regulations.
- Keep batteries out of reach of children.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote control does not work.	Batteries are dead or incorrectly installed. No clear line of sight to the TV's IR receiver. TV is not powered on. Remote control is incompatible with the TV model.	Replace batteries with new AAA batteries, ensuring correct polarity. Ensure no obstructions between the remote and the TV. Point the remote directly at the TV. Turn on the TV manually or check its power connection. Verify your TV model is listed as compatible.
Some functions do not work.	This is a replacement remote; some advanced functions may not be supported. Button is stuck or dirty.	Confirm if the function is a basic TV operation. Clean the remote control.
Remote control works intermittently.	Low battery power. Interference from other electronic devices.	Replace batteries. Move away from other devices that might emit IR signals or strong electromagnetic fields.

## SPECIFICATIONS

---

- **Model:** Easytry4921
- **Brand:** Easytry123
- **Compatible Devices:** Saba LED/LCD HDTVs (LED26V11, SBV1943H, SBV2243H, SCB1909W, SCB1910VX, LED32PV412, S19104DVD)
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design

## WARRANTY AND SUPPORT

---

Information regarding specific warranty terms for this Easytry123 replacement remote control is not provided in the product details. For any support inquiries or further assistance, please contact the seller directly through the platform where the purchase was made.

Please refer to the original product listing or your purchase documentation for any available warranty information.