

Manuals.plus /
› Easytry123 /
› User Manual: Remote Control for Schneider ZITTIHD1900USB EXIA1915DVDPVR EXIA1601PVR RC-1900 EXIA MOONLIT2202FHD LCD HDTV TV

Easytry123 Easytry4922

User Manual: Remote Control for Schneider ZITTIHD1900USB
EXIA1915DVDPVR EXIA1601PVR RC-1900 EXIA
MOONLIT2202FHD LCD HDTV TV

Model: Easytry4922 | Brand: Easytry123

1. PRODUCT OVERVIEW

This document provides essential information for the operation and maintenance of your Easytry123 replacement remote control, model Easytry4922. This remote is designed as a replacement for various Schneider and EXIA LCD HDTV TV models, including ZITTIHD1900USB, EXIA1915DVDPVR, EXIA1601PVR, RC-1900, and MOONLIT2202FHD. Please note that as a replacement item, this remote control may not support all functions of your original remote. It is crucial to verify that your unit's model number is listed in the product title for compatibility. The images provided are for reference to ensure you receive the correct replacement. The remote is designed for ease of use and does not come with batteries or a separate manual in its packaging.



Figure 1: Front view of the Easytry123 replacement remote control, showing the button layout including number pad, navigation, volume, and channel controls.



Figure 2: Back view of the remote control with the battery compartment cover removed, revealing the slots for two AAA batteries.



Figure 3: Back view of the remote control with the battery compartment cover securely closed, showing its ergonomic design.

2. SETUP

2.1. Battery Installation

Your remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote and must be purchased separately.

1. Locate the battery compartment on the back of the remote control (refer to Figure 2).
2. Press down on the tab and slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) ends align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely (refer to Figure 3).

Once batteries are installed, the remote is ready for use with compatible devices. No programming is typically required for this replacement remote.

3. OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. Ensure there is a clear line of sight between the remote's IR emitter (located at the front tip) and the IR receiver on your television or compatible device.

3.1. Basic Functions

- **Power Button:** Located at the top, typically red. Press to turn the TV on or off.
- **Number Pad (0-9):** Used for direct channel input.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Mute Button:** Silences the audio.
- **Navigation Buttons (Arrow Keys & OK/Enter):** Used to navigate menus and confirm selections.
- **Input/Source Button:** Switches between different video inputs (e.g., HDMI, AV).

3.2. Advanced Functions

Depending on your specific TV model and its original remote's capabilities, some advanced functions such as Smart TV features, specific menu navigation, or media playback controls (e.g., Play, Pause, Stop, Fast Forward, Rewind) may or may not be fully supported by this replacement remote. Refer to your television's original manual for detailed information on its functions and how they might map to a universal or replacement remote.

4. MAINTENANCE

4.1. Cleaning

To clean your remote control, gently wipe the surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

4.2. Battery Replacement

Replace batteries when the remote's performance degrades, such as reduced range or unresponsive buttons. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of

batteries, as this can lead to leakage or damage.

4.3. Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent potential leakage and damage.

5. TROUBLESHOOTING

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.
 - Ensure there is a clear line of sight between the remote and the TV's IR receiver. Remove any obstructions.
 - Try moving closer to the TV.
- **Some functions do not work:**
 - As a replacement remote, it may not support all functions of your original TV remote. This is common for universal or replacement remotes.
 - Verify that your TV model is listed as compatible with this remote.
- **Remote range is limited:**
 - Replace the batteries. Low battery power can reduce the remote's effective range.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

6. SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Model Number	Easytry4922
Compatible Devices	Television (Schneider ZITTIHD1900USB, EXIA1915DVDPVR, EXIA1601PVR, RC-1900, EXIA MOONLIT2202FHD LCD HDTV TV)
Connectivity Technology	Infrared
Controller Type	Button Control
Batteries Required	2 x AAA batteries (not included)
Special Feature	Ergonomic
Manufacturer	Easytry123
Country of Origin	China
ASIN	B07L61L6Q4

Feature	Detail
Date First Available	December 7, 2018

7. WARRANTY AND SUPPORT

Specific warranty information for this replacement remote control is not provided in the product details. For details regarding warranty coverage, return policies, or technical support, please contact the seller directly through your purchase platform.

For general inquiries or assistance with your Easytry123 product, please refer to the contact information provided by the retailer or manufacturer at the time of purchase.

© 2024 Easytry123. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question