

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sekonda](#) /

› [Sekonda Editions 2506 Women's Watch User Manual](#)

Sekonda 2506

Sekonda Editions 2506 Women's Watch User Manual

Model: **2506**

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Sekonda Editions 2506 women's watch. Please read this guide thoroughly to ensure optimal performance and longevity of your timepiece.



Image: Front view of the Sekonda Editions 2506 watch, featuring a round silver-tone case, a clean white dial with silver-tone hour markers, and a light pink faux leather strap. The Sekonda logo is visible below the 12 o'clock position.

SETUP

Setting the Time

1. **Pull out the crown:** Locate the small knob (crown) on the right side of the watch case. Gently pull it outwards until you feel a click.
2. **Adjust the time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.

3. **Push in the crown:** Once the correct time is set, push the crown back into its original position against the watch case. This will start the watch movement.

Wearing the Watch

Place the watch on your wrist and adjust the strap to a comfortable fit. The strap should be snug enough to prevent the watch from sliding freely, but not so tight as to restrict circulation.

OPERATING INSTRUCTIONS

Daily Use

Your Sekonda watch is designed for everyday wear. Avoid exposing it to extreme temperatures, strong magnetic fields, or harsh chemicals. While the watch has basic splash resistance, it is not suitable for swimming or showering unless explicitly stated otherwise in the specifications.

MAINTENANCE

Cleaning

- **Case:** Wipe the watch case with a soft, dry cloth to remove dust and fingerprints. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Strap:** For the faux leather strap, wipe it with a dry or very slightly damp cloth. Avoid excessive moisture, as this can damage the material. Allow the strap to air dry completely if it becomes damp.

Battery Replacement

The watch is powered by a quartz movement requiring a battery. When the watch stops running, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function. Attempting to replace the battery yourself may void the warranty and damage the watch.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch is not running	<ul style="list-style-type: none">• Crown is pulled out• Battery is depleted	<ul style="list-style-type: none">• Push the crown fully back into the case.• Have the battery replaced by a professional watch technician.
Strap feels stiff or uncomfortable	New strap material	The faux leather strap may require a period of wear to soften and conform to your wrist.

SPECIFICATIONS

Brand: Sekonda
Model Number: 2506
Movement: Quartz
Dial Color: White

Case Material: Base Metal (Silver-tone finish)

Strap Material: Faux Leather

Strap Color: Light Pink

Water Resistance: Splash resistant (not suitable for immersion)

Battery Type: 1 x LR44 (for movement, professional replacement recommended)






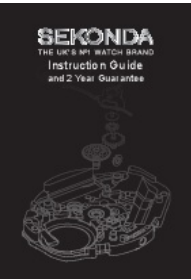
Package Dimensions: 20.9 x 9.2 x 7.6 cm; 140 grams (Note: These are packaging dimensions, not watch dimensions.)



Image: A black watch box with the Sekonda logo printed in white on the lid. The box has a silver-colored stripe along its edge.

WARRANTY AND SUPPORT

Sekonda watches typically come with a manufacturer's warranty covering defects in materials and workmanship. For specific warranty terms, duration, and to obtain support or service, please refer to the warranty card included with your purchase or visit the official Sekonda website. Keep your proof of purchase for warranty claims.

	<p>Sekonda Watch Size Guide: Find Your Perfect Fit</p> <p>Explore the Sekonda watch size guide to accurately measure and select the ideal watch case and strap size before making your purchase. Learn how to print and use the guide for a perfect fit.</p>
	<p>Sekonda Watch: Simple Instructions and User Guide</p> <p>This official instruction manual provides clear, step-by-step guidance for setting up, operating, and caring for your Sekonda watch. It covers various models including non-date, day-date, multi-dial, and chronograph types, along with essential information on water resistance, warranty, and service.</p>
	<p>Sekonda Watch Size Guide: Find Your Perfect Fit</p> <p>Explore the Sekonda watch size guide to accurately measure and select the ideal watch case and strap size for your wrist. Includes detailed dimensions and printing instructions.</p>
	<p>Sekonda Watch Size Guide</p> <p>A guide to help you gauge the size of Sekonda watches before you buy, with printable case and strap dimensions.</p>
	<p>Sekonda Ladies Smart Watch 40387/40388 User Manual and Instructions</p> <p>Comprehensive instructions and user guide for the Sekonda Ladies Smart Watch models 40387 and 40388, covering setup, features, safety, and specifications.</p>
	<p>Sekonda Watch Instruction Guide and 2 Year Guarantee</p> <p>Detailed instruction manual for Sekonda watches, covering setup, operation, water resistance, service, and guarantee information. Learn how to use various functions including chronograph, moon phase, and world timer.</p>