Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > PERLESMITH /
- > PERLESMITH TV Stand Instruction Manual for 32-60 Inch TVs, Model PSTVS04

PERLESMITH PSTVS04

PERLESMITH TV Stand Instruction Manual

Model: PSTVS04

1. PRODUCT OVERVIEW

Thank you for choosing the PERLESMITH TV Stand, Model PSTVS04. This freestanding TV stand is designed to securely hold televisions and monitors ranging from 32 to 60 inches, with a maximum load capacity of 40kg. It features VESA compatibility up to 400x400mm and offers 6 levels of height adjustment for optimal viewing comfort. Its sturdy construction, including a tempered glass base, ensures stability and durability.

Important Safety Information:

- · Read all instructions carefully before assembly and use.
- Ensure all parts are present and undamaged before beginning assembly. Do not use if any parts are missing or defective.
- Do not exceed the maximum load capacity of 40kg (88 lbs).
- Ensure your TV's VESA pattern is compatible (100x100mm to 400x400mm).
- Always assemble with at least two people to prevent injury or damage.
- Place the stand on a stable, level surface.

2. PACKAGE CONTENTS

Please verify that all components listed below are included in your package. If any parts are missing or damaged, please contact PERLESMITH customer service.



Image depicting the assembly process, showing a person attaching the TV to the stand and an exploded view of the parts organized in numbered bags for easy identification.

All parts are typically organized in numbered vinyl bags for easy identification during assembly.

3. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these four simple steps for quick and easy assembly. It is recommended to have two people for assembly.

1. Step 1: Attach TV Brackets to the TV

Carefully place your TV face down on a soft, clean surface. Attach the TV brackets to the back of your television using the appropriate screws and spacers provided. Ensure the brackets are securely fastened and aligned with your TV's VESA mounting holes. If power or antenna cables interfere, use the included spacers to create a wider gap between the TV back and the VESA plate.

2. Step 2: Assemble the Base

Assemble the main support column and the tempered glass base. Ensure all screws are tightened securely to provide a stable foundation for your TV.

3. Step 3: Attach the TV Plate to the Support Column

Connect the TV plate (which will hold the TV brackets) to the top of the assembled support column. This plate allows for vertical height adjustments.

4. Step 4: Mount the TV to the TV Plate

With assistance, carefully lift your TV (with the attached brackets) and hook it onto the TV plate. Ensure the TV is properly seated and secured. Utilize the safety lock mechanism to prevent accidental tipping or falling.



Close-up of the safety lock mechanism on the TV stand, designed to prevent the TV from tipping or falling.

4. OPERATING INSTRUCTIONS

4.1 Height Adjustment


The PERLESMITH TV Stand offers 6 levels of height adjustment to customize your viewing experience. This adjustment is achieved through a combination of 2 levels on the TV brackets and 3 levels on the main TV plate. Adjust the TV height to your preferred eye level for comfortable viewing.



Diagram illustrating the 6-level height adjustment feature of the TV stand. The bracket allows 2 levels of adjustment, and the plate allows 3 levels, providing a total of 6 height options from 59cm to 64cm (measured from the center of the mounting part to the base).

4.2 Cable Management

The stand includes integrated cable management features to help organize and conceal unsightly cables. Route your power and signal cables neatly along the support column to maintain a clean and organized appearance.

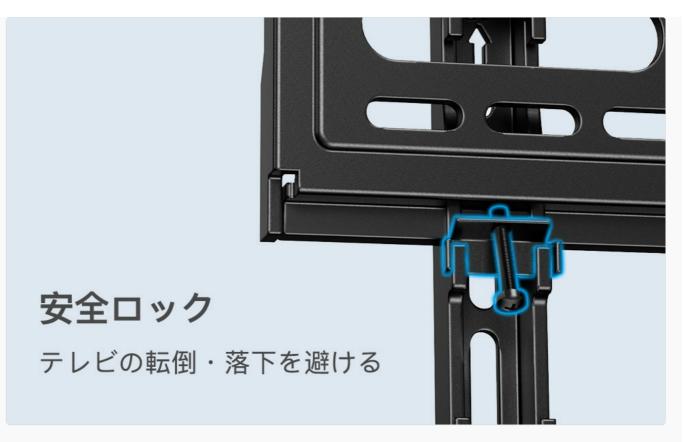

Rear view of the TV stand demonstrating integrated cable management, allowing for neat organization of cables.

5. MAINTENANCE

- Regularly check all screws and connections to ensure they remain tight and secure.
- Clean the stand with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- Keep the tempered glass base free from sharp objects to prevent scratches or damage.

6. TROUBLESHOOTING

- TV appears wobbly: Ensure all screws are fully tightened, especially those connecting the TV brackets to the TV and the main column to the base. Verify the stand is on a level surface.
- **TV does not fit:** Double-check your TV's size (32-60 inches), weight (max 40kg), and VESA pattern (100x100mm to 400x400mm) against the product specifications.
- Missing parts: Refer to the package contents list. If parts are missing, contact PERLESMITH customer service immediately.
- **Difficulty with height adjustment:** Ensure no cables are obstructing the adjustment mechanism. Loosen adjustment screws slightly before attempting to reposition, then retighten.

7. Specifications

Feature	Specification
Model Number	PSTVS04

Compatible TV Size	32 - 60 inches
Maximum Load Capacity	40 kg (88 lbs)
VESA Compatibility	100x100mm, 200x100mm, 200x200mm, 300x200mm, 300x300mm, 400x300mm, 400x400mm
Height Adjustment	6 levels (via bracket and plate adjustments)
Material	Tempered Glass, Steel
Color	Black
Mounting Type	Freestanding
Movement Type	Fixed
Base Dimensions (approx.)	40 cm (width) x 24 cm (depth)
UPC	768488464119



Image showing the compatibility requirements for the PERLESMITH TV Stand: supports 32-60 inch TVs, up to 40kg, and VESA patterns from 100x100mm to 400x400mm. Dimensions of the base are 24cm depth and 40cm width.

8. WARRANTY AND SUPPORT

PERLESMITH is committed to providing high-quality products. In the event of initial defects, missing parts, or

damage incurred during delivery, we offer returns or exchanges. If you encounter any issues during assembly or have questions regarding the product, please do not hesitate to contact our customer service team for assistance. For support, please refer to the contact information provided with your purchase or visit the official PERLESMITH website.

© 2023 PERLESMITH. All rights reserved.

Related Documents - PSTVS04



PERLESMITH PSTVS17 Universal Swivel Tabletop TV Stand - Instruction Manual

Comprehensive instruction manual for the PERLESMITH PSTVS17 universal swivel tabletop TV stand. Learn how to safely assemble and install your TV stand with detailed steps, parts lists, and compatibility checks.



PERLESMITH PSTVS04 Table Top TV Stand Instruction Manual

This manual provides step-by-step instructions for assembling and installing the PERLESMITH PSTVS04 Table Top TV Stand. It includes safety information, weight restrictions, VESA pattern compatibility, tools needed, and a list of supplied parts and hardware. The manual also offers video guides for installation and safety lock attachment.



PERLESMITH PSTM1 TV Tripod Stand Installation Guide

Detailed installation instructions for the PERLESMITH PSTM1 TV Tripod Stand, a portable and height-adjustable floor stand for 23-55 inch LED, LCD, and OLED flat-screen TVs with VESA 400x400mm compatibility and an 88 lbs weight capacity.



Perlesmith PSTVS01 Table Top TV Stand Instruction Manual

This document provides instructions for assembling and installing the Perlesmith PSTVS01 Table Top TV Stand. It includes a list of supplied parts and hardware, safety information, and step-by-step assembly diagrams.



PERLESMITH PSTVS33 Tabletop TV Stand Instruction Manual

This instruction manual provides detailed steps for assembling and installing the PERLESMITH PSTVS33 Tabletop TV Stand. It covers compatibility checks for VESA patterns and weight limits, lists all included parts and hardware, and guides users through each installation step, including attaching brackets, assembling the base, mounting the TV plate, securing the TV, and managing cables. Safety warnings and contact information are also provided.



PERLESMITH PSTVS04 Table Top TV Stand Instruction Manual

Comprehensive instruction manual for the PERLESMITH PSTVS04 Table Top TV Stand, detailing assembly, safety information, and compatibility checks.