

[Manuals.plus](#) /

> [tiebutie](#) /

> User Manual for tiebutie Universal Remote Control for Roku and Vizio TV

tiebutie Universal Remote Control (ASIN: B07L76F7S8)

tiebutie Universal Remote Control User Manual

Model: Universal Remote Control (ASIN: B07L76F7S8)

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your tiebutie Universal Remote Control. This remote is designed to replace your original Roku remote and offers additional learning capabilities for other devices like Vizio TVs, soundbars, DVDs, and receivers. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

PRODUCT OVERVIEW

The tiebutie Universal Remote Control is an all-in-one solution for managing your entertainment system. It features pre-programmed compatibility for various Roku models and Vizio TVs, along with 9 learning keys for extended functionality.





Image: Front and side view of the tiebutie Universal Remote Control, showcasing its ergonomic design and button layout.

Key Features:

- Pre-programmed for Roku Ultra, Premiere/+, Express 4K/4K+, and Roku 1, 2, 3, 4.
- Compatible with Vizio TVs (Power, Mute, Vol+/-, Source, CH+/- keys).
- 9 learnable buttons for programming functions from other IR remotes (TVs, DVD, Receiver, Soundbar).
- 4 dedicated shortcut buttons: Netflix, Prime Video, Hulu, Sling.
- Stable and high-quality construction with sensitive buttons and over 26 ft transmitting distance.
- Ergonomic design for comfortable grip and use.

SETUP GUIDE

1. Battery Installation

The remote requires two AAA batteries (not included). Open the battery compartment cover on the back of the remote, insert the batteries according to the polarity indicators (+/-), and close the cover securely.

2. Initial Setup for Roku Devices

This remote is largely pre-programmed for compatible Roku devices. For initial pairing or if the remote does not work directly:


1. Unplug your Roku device from its power source.
2. Wait for 1 to 2 minutes.
3. Plug your Roku device back in. The remote should automatically pair with your Roku player during the startup process.

3. Programming Volume & Power Keys for Roku Box (Requires Original IR Remote)

For Roku boxes, the volume and power keys on this universal remote must be programmed using your original Roku IR remote. **Do not purchase this remote if your original IR remote is unavailable for this step.**

Pre-programmed for Roku Box & Vizio TV

For Roku Ultra, Premiere/+, Express/+, 1/2/3/4

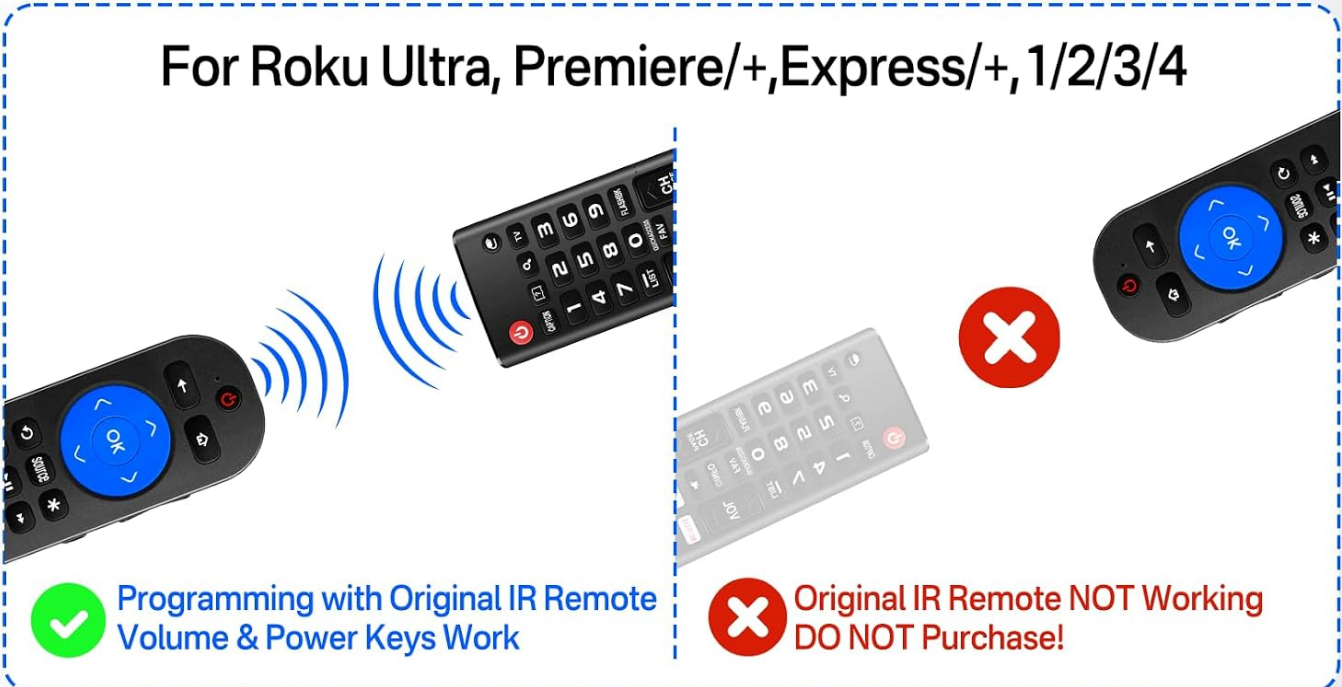

✓ Programming with Original IR Remote
Volume & Power Keys Work

✗ Original IR Remote NOT Working
DO NOT Purchase!

For Vizio TV - Keys of Power, Mute, Vol+/-, Source, CH+/-



✓

Image: Illustration demonstrating the process of programming the volume and power keys for a Roku box using the original IR remote. It highlights that an original IR remote is required for this function.

1. Ensure both the tiebutie remote and your original Roku IR remote have fresh batteries.
2. Place both remotes head-to-head, about 1 cm (0.39 inches) apart, ensuring their IR emitters are aligned.



Image: Two remote controls positioned head-to-head, illustrating the correct distance and alignment for IR signal transfer during the programming process.

3. Press and hold the desired learning key on the tiebutie remote (e.g., Volume Up). The indicator light on the tiebutie remote will blink slowly.
4. While holding the key on the tiebutie remote, press the corresponding key on your original Roku IR remote (e.g., Volume Up).
5. The indicator light on the tiebutie remote will blink rapidly, then turn solid, indicating successful programming.
6. Repeat for other keys like Volume Down, Mute, and Power.

4. Programming 9 Learnable Keys (All-in-One Functionality)

This remote features 9 additional learnable keys, allowing you to consolidate functions from other devices (e.g., Vizio TV, DVD player, soundbar) onto this single remote. An original IR remote for the device you wish to program is required.

Head to Head about 1 cm

Easy to set up with video in user manual

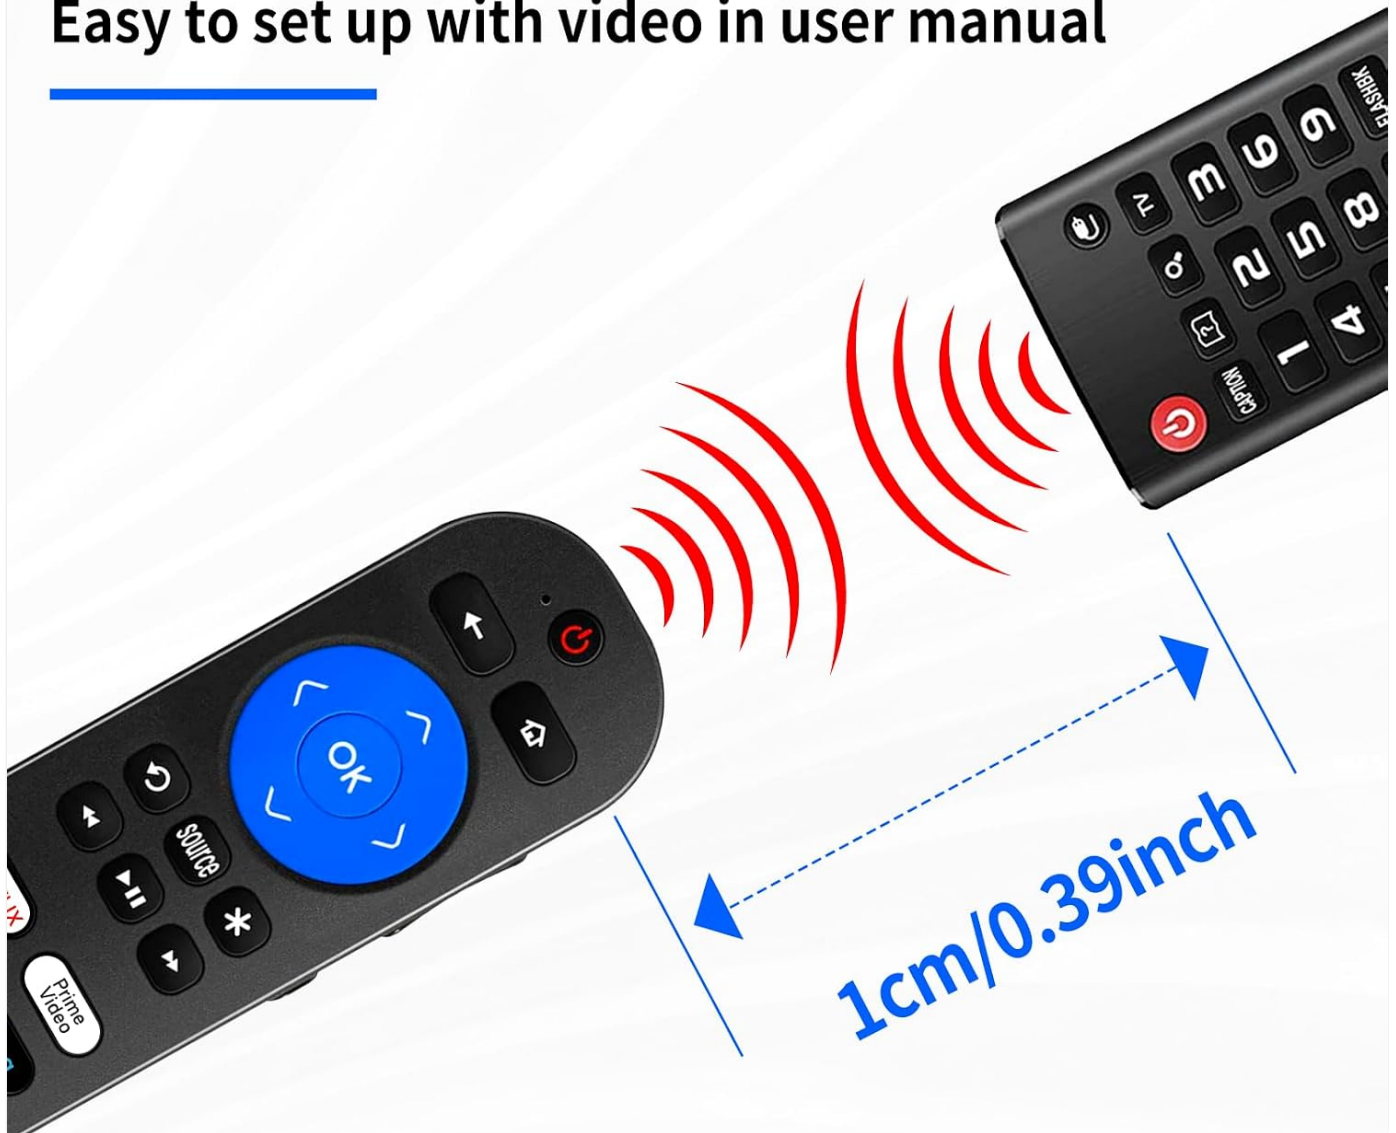


Image: Close-up view of the tiebutie remote highlighting the 9 learnable keys and their corresponding functions, indicating that an original IR remote is needed for programming.

1. Ensure both the tiebutie remote and the original remote for the device you want to program have fresh batteries.
2. Place both remotes head-to-head, about 1 cm (0.39 inches) apart, ensuring their IR emitters are aligned.
3. Press and hold the desired learnable key on the tiebutie remote. The indicator light will blink slowly.
4. While holding the key on the tiebutie remote, press the corresponding key on your original remote.
5. The indicator light on the tiebutie remote will blink rapidly, then turn solid, indicating successful programming.
6. Repeat for all desired functions.

For Vizio TVs, the remote is pre-programmed for Power, Mute, Vol+/-, Source, and CH+/- keys. If these do not work, you can use the learning function to program them from your original Vizio TV remote.

DIY Re-programmed Fit for Other Devices

Note: Original IR Remote Must Required



Image: A visual representation of the remote's pre-programmed compatibility with Roku devices and Vizio TVs, showing which functions are ready to use and which require programming.

OPERATING INSTRUCTIONS

Basic Roku Control

- **Power Button:** Turns your Roku device on/off (if programmed).
- **Directional Pad (Up, Down, Left, Right):** Navigates menus and selections.
- **OK Button:** Confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the Roku home screen.
- **Volume Up/Down/Mute:** Controls audio volume (if programmed for Roku box or Vizio TV).
- **Play/Pause, Fast Forward, Rewind:** Controls media playback.

Shortcut Buttons

The remote includes four dedicated shortcut buttons for quick access to popular streaming services:

- Netflix
- Prime Video
- Hulu
- Sling

4 Channel Shortcut Buttons

Quickly Switch Your Favorite Channels



Image: A detailed view of the remote control highlighting the four dedicated shortcut buttons for Netflix, Prime Video, Hulu, and Sling, designed for quick channel switching.

Using Programmed Learning Keys

Once you have programmed the 9 learnable keys, you can use them to control the corresponding functions on your other devices (e.g., TV input, DVD menu, soundbar modes). Simply press the programmed key to activate the function.

MAINTENANCE

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the surface.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or the indicator light does not illuminate. Always use new AAA batteries and dispose of old batteries responsibly.

Storage

Store the remote in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding to Roku device.	Batteries are low or incorrectly inserted. Remote not paired. Roku device needs a reset.	Check and replace batteries. Unplug Roku device for 1-2 minutes, then plug back in to re-pair.
Volume/Power keys not working for Roku box.	Keys not programmed or programmed incorrectly. Original IR remote unavailable.	Ensure you have an original Roku IR remote. Follow the "Programming Volume & Power Keys" section carefully.
Learnable keys not working for other devices.	Keys not programmed or programmed incorrectly. Original remote's signal not strong enough.	Re-program the keys, ensuring remotes are 1 cm apart and IR emitters are aligned. Ensure original remote has fresh batteries.
Remote range is poor.	Low batteries. Obstruction between remote and device.	Replace batteries. Ensure clear line of sight to the device.

If you continue to experience issues, please refer to the video in the user manual (if available) or contact customer support.

No official product videos are available for embedding based on the provided product data.

SPECIFICATIONS

Feature	Detail
Brand	tiebutie
Model	Universal Remote Control (ASIN: B07L76F7S8)
Special Feature	Ergonomic, Universal, Learnable Keys
Color	Single Remote (Black)

Feature	Detail
Max Number of Supported Devices	1 (plus learnable functions from other devices)
Compatible Devices	Roku Express, Premiere, Ultra, 1, 2, 3, 4; Vizio TVs; other IR-controlled devices (via learning). NOT for Roku Stick or Roku Streaming Stick.
Transmission Type	Infrared (IR) - NOT for RF, IP, Bluetooth, or Wi-Fi remotes.
Operating Distance	Over 26 ft
Power Source	2 x AAA Batteries (not included)
Limitations	Does not include headphone jack, pairing button, voice search, or game functionality.

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details are typically provided at the point of purchase or on the manufacturer's official website. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact tiebutie customer support through the retailer where you purchased the product or visit the official tiebutie store on Amazon: [tiebutie Official Amazon Store](#)

© 2024 tiebutie. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question