

[Manuals.plus](#) /

› [CosmoLiving by Cosmopolitan](#) /

› COSMOLiving by COSMOPOLITAN Westerleigh 4 Drawer Dresser Instruction Manual

CosmoLiving by Cosmopolitan 3640408COMS

COSMOLiving by COSMOPOLITAN Westerleigh 4 Drawer Dresser Instruction Manual

Model: 3640408COMS

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembling and using this product. Keep this manual for future reference.

- Always follow the assembly steps in the order provided.
- Ensure all parts are securely fastened before use.
- Do not allow children to climb on or play with the dresser.
- To prevent tipping injuries, a wall anchor kit is provided. It is highly recommended to install the wall anchor kit as instructed.
- Place the dresser on a flat, stable surface.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.


- Dresser frame components
- 4 Drawer boxes
- Drawer slides
- 4 Gold drawer pulls
- 4 Legs
- Hardware pack (screws, bolts, wall anchor kit)
- Instruction manual

ASSEMBLY INSTRUCTIONS

While the dresser is designed for straightforward assembly, it is recommended to have two people for certain steps due to

its weight and size.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Assemble the Frame:** Follow the diagrams to connect the side panels, back panel, and top/bottom panels using the provided hardware. Ensure all connections are snug.
3. **Install Drawer Slides:** Attach the drawer slides to the interior of the dresser frame according to the markings.
4. **Assemble Drawers:** Construct each of the four drawer boxes. Attach the remaining drawer slide components to the sides of each drawer.
5. **Attach Drawer Pulls:** Secure the gold drawer pulls to the front of each drawer using the provided screws.
6. **Insert Drawers:** Carefully slide each assembled drawer into its corresponding slot in the dresser frame.
7. **Attach Legs:** Securely fasten the four legs to the bottom of the dresser.
8. **Install Wall Anchor Kit:** Locate a suitable wall stud and follow the instructions provided with the wall anchor kit to secure the dresser to the wall. This is a critical safety step.

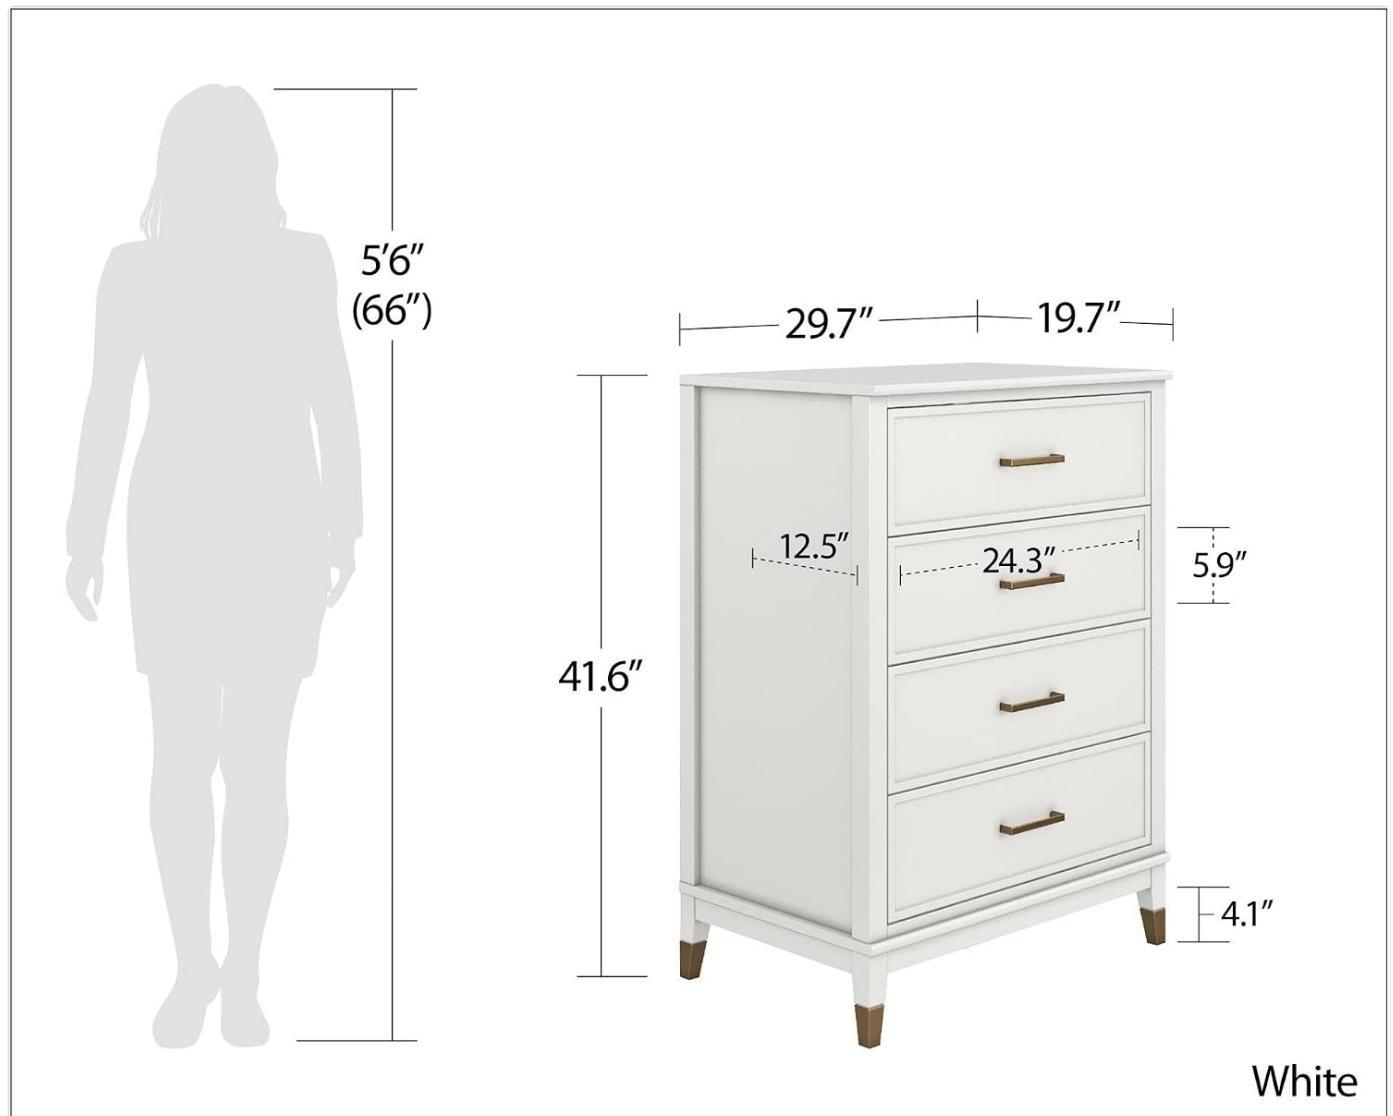

Product Dimensions

29.7 in. W x 19.7 in. D x 41.6 in. H

Weight Limit: Top - 50 lbs.

Each Drawer - 25 lbs.



Pink



Graphite Gray



Black

Image: Dimensions of the dresser, useful for planning placement and understanding assembly points.



Image: Detail of the gold drawer pulls on the graphite gray dresser.

OPERATING YOUR DRESSER

The Westerleigh 4 Drawer Dresser is designed for smooth and easy operation.

- **Opening Drawers:** Gently pull the gold handle on each drawer to open. Avoid excessive force.
- **Closing Drawers:** Push the drawer firmly until it is fully closed and flush with the dresser frame.
- **Weight Capacity:** The top surface has a weight limit of 50 lbs. Each drawer has a weight limit of 25 lbs. Do not exceed these limits to ensure stability and longevity.



Image: A drawer of the dresser shown partially open, illustrating its functionality.

CARE AND MAINTENANCE

Proper care will help maintain the appearance and functionality of your dresser.

- **Cleaning:** Wipe the dresser surfaces with a dry, soft cloth. Avoid using abrasive cleaners, harsh chemicals, or polishes that may damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Tighten if necessary.
- **Sunlight:** Avoid placing the dresser in direct sunlight for prolonged periods, as this may cause fading or discoloration.

TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common solutions:

- **Drawers are Sticking:** Ensure the drawer slides are properly aligned and free of obstructions. Check that the drawer boxes are assembled correctly and not warped.
- **Loose Handles:** Tighten the screws on the inside of the drawer front that secure the gold pulls.
- **Dresser Wobbles:** Verify that the dresser is on a level surface. Adjust the legs if they have levelers, or place shims under the legs if needed. Ensure all frame connections are tight.
- **Tipping Hazard:** If the dresser feels unstable, immediately install the wall anchor kit as instructed in the assembly section.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	CosmoLiving by Cosmopolitan
Model Name	Westerleigh 4 Drawer Dresser
Model Number	3640408COMS
Color	Graphite Gray
Product Dimensions	19.72"D x 29.68"W x 41.61"H
Item Weight	112.2 Pounds
Material	Wood (Painted MDF and wood)
Number of Drawers	4
Furniture Finish	Gray Finish, Gold (pulls)
Assembly Required	Yes (as per general dresser assembly)
Product Care Instructions	Wipe with Dry Cloth



Image: The Westerleigh 4 Drawer Dresser in a bedroom setting.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for any warranty claims.

Manufacturer: CosmoLiving

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question