

## BLACK+DECKER TO3215SS

# BLACK+DECKER 6-Slice Crisp 'N Bake Air Fry Toaster Oven

MODEL: TO3215SS

Instruction Manual

## 1. INTRODUCTION

---

Welcome to the BLACK+DECKER 6-Slice Crisp 'N Bake Air Fry Toaster Oven instruction manual. This versatile appliance is designed to bring convenience and efficiency to your kitchen, offering deep-fried taste without the excess fat. With its innovative Air Fry Technology, you can bake, brown, and crisp your favorite foods using little to no oil. This manual will guide you through the proper setup, operation, and maintenance of your new toaster oven to ensure years of reliable use.

## 2. KEY FEATURES

---

- **Air Fry Technology:** Enjoy deep-fried taste without the fat! High-intensity hot air circulates to bake, brown, and crisp foods with little to no oil.
- **6 Cooking Functions:** Select from Bake, Broil, Toast, Keep Warm, and Air Fry modes to suit your cooking needs.
- **Large Capacity:** Designed to fit up to six slices of bread or a 12-inch pizza, making it ideal for family meals or entertaining.
- **60-Minute Timer:** Features a precision timer with stay-on functionality for extended baking tasks.
- **Countertop Baking:** Perfect for pizzas, frozen snacks, and reheating leftovers, reducing the need to use your main oven.
- **Included Accessories:** Comes with an air fry basket, bake/broil pan, and rack for immediate use.



## Air Fry Technology

Figure 2.1: Air Fry Technology in action, crisping French fries.



## Large Capacity

Figure 2.2: Large capacity interior, easily accommodating a 12-inch pizza.

### 3. SETUP

#### 3.1 Unpacking

Carefully remove all contents from the packaging. Ensure all accessories (air fry basket, bake/broil pan, rack) are present. Remove any protective film or packaging materials from the appliance.

#### 3.2 Placement

Place the toaster oven on a flat, stable, heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the appliance for proper ventilation. Do not place it near flammable materials or under cabinets that are not heat-resistant.



Figure 3.1: Product dimensions for proper placement.

### 3.3 Initial Cleaning

Before first use, wipe down the interior and exterior of the toaster oven with a damp cloth. Wash the air fry basket, bake/broil pan, and rack in warm, soapy water. Rinse thoroughly and dry completely. This helps remove any manufacturing residues.

## 4. OPERATING INSTRUCTIONS

Your BLACK+DECKER toaster oven features three control knobs for easy operation: Temperature/Function, Timer, and Toast Shade.



Figure 4.1: Detailed view of the control panel with 5 cooking functions.

#### 4.1 Temperature/Function Knob

This knob allows you to select the desired cooking function and temperature. Options include:

- **Warm:** For keeping food warm.
- **Bake (250°F - 450°F):** For general baking, such as casseroles, cookies, or frozen meals.
- **Broil:** For grilling or browning the top of food.
- **Toast:** For toasting bread, bagels, and pastries.
- **Air Fry (450°F):** For crisping foods with circulating hot air.

#### 4.2 Timer Knob

Set the cooking duration using this knob. It can be set for up to 60 minutes. The 'Stay On' setting allows for continuous operation, ideal for longer baking times. The oven will automatically turn off when the timer reaches zero.



Figure 4.2: The 60-minute precision timer knob.

### 4.3 Toast Shade Knob

When using the Toast function, this knob allows you to select your desired toast shade, from light to dark.

### 4.4 Using the Accessories

- **Air Fry Basket:** Use this basket for air frying. Place it on top of the bake/broil pan to catch any drips.
- **Bake/Broil Pan:** Use for baking, broiling, or as a drip tray when air frying.
- **Rack:** Use for toasting or supporting the bake/broil pan. The oven has multiple rack positions for cooking flexibility.



Figure 4.3: Countertop baking convenience with the included pan.

## 4.5 Official Product Videos

No official product videos from the seller were available for direct embedding in this manual.

## 5. MAINTENANCE

### 5.1 Cleaning the Interior

Always unplug the toaster oven and allow it to cool completely before cleaning. Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used. Do not use steel wool or abrasive pads.

### 5.2 Cleaning the Exterior

Wipe the exterior surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners that could damage the finish.

### 5.3 Cleaning the Crumb Tray

The external crumb tray slides out for easy cleaning. Pull out the tray, discard crumbs, and wash it in warm, soapy water. Rinse and dry thoroughly before reinserting. Regular cleaning of the crumb tray prevents grease buildup and reduces fire risk.

## 6. TROUBLESHOOTING

If your toaster oven is not functioning as expected, please check the following common issues:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical

outlet. Check if the timer knob is set to a cooking duration or 'Stay On'.

- **Food Not Cooking Evenly:** Ensure the correct rack position is used for the selected function. Preheat the oven if necessary. For air frying, ensure the air fry basket is not overloaded to allow for proper air circulation.
- **Excessive Smoke:** This may be due to food residue or grease buildup. Unplug the unit, allow it to cool, and clean the interior and crumb tray thoroughly.
- **Timer Not Advancing:** Ensure the timer knob is properly set. If it's stuck, gently rotate it to release.

For issues not covered here, please contact customer support or refer to the full product manual.

## 7. SPECIFICATIONS

Attribute	Value
Brand	BLACK+DECKER
Model Name	TO3215SS
Color	Stainless Steel
Product Dimensions	14.5"D x 17.75"W x 11.25"H
Special Feature	Air Fry Technology
Control Type	Knob
Included Components	Toaster Oven, Air Fry Basket, Bake/Broil Pan
Power Source	AC adapter
Temperature Range	250 - 450 Degrees Fahrenheit
Capacity	6 Slice / 12" Pizza
Item Weight	14.55 pounds
Date First Available	December 9, 2018

## 8. WARRANTY AND SUPPORT

### 8.1 Limited Warranty

This BLACK+DECKER toaster oven comes with a 2-year limited warranty from the date of purchase. This warranty covers defects in material or workmanship. Please retain your original sales receipt as proof of purchase to obtain warranty service.

### 8.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact BLACK+DECKER customer support. Refer to the contact information provided in your product packaging or visit the official BLACK+DECKER website for the most up-to-date support details.

