

Manuals.plus /

› WYMECT /

› WYMECT VMC-15FS A/V Cable Instruction Manual for Sony Handycam Camcorders

WYMECT VMC-15FS

WYMECT VMC-15FS A/V Cable Instruction Manual

Model: VMC-15FS | Brand: WYMECT

1. INTRODUCTION

The WYMECT VMC-15FS A/V Cable is designed to connect compatible Sony Handycam camcorders to televisions or other display devices. This cable facilitates the transfer of audio and video signals, allowing you to view your camcorder's content on a larger screen using S-Video and RCA composite inputs.

2. SAFETY INFORMATION

- Ensure all devices are powered off before connecting or disconnecting the cable.
- Avoid bending or kinking the cable sharply, as this can damage internal wires.
- Keep the cable away from heat sources and moisture.
- Do not pull the cable by the cord; always grasp the connector when plugging or unplugging.

3. PRODUCT OVERVIEW

The VMC-15FS cable features a 10-pin AV connector for your Sony Handycam camcorder on one end, and multiple output connectors for your television on the other. These output connectors include one S-Video, one yellow RCA for video, and two RCA connectors (red for right audio, white for left audio).

Sony Handycam Camcorder
VMC-15FS A/V Cable



Image: The WYMECT VMC-15FS A/V Cable with its 10-pin camcorder connector and S-Video, yellow video, red audio, and white audio RCA connectors.



Semicircle DV interface

S-Video

Audio

Video

Audio

Image: Detailed view of the 10-pin semicircular DV interface, S-Video, and RCA audio/video connectors, along with a close-up of a compatible camcorder's A/V port.

Key Features:

- **Output Cable Type:** 1x S-Video, 1x RCA Video (Yellow), 2x RCA Audio (Red, White)
- **Input Cable Type:** 10 Pin AV Connector
- **Function:** Connects Sony Handycam Camcorders to TVs for audio/video output.
- **Cable Length:** Approximately 1.2 meters (3.9 feet)

4. COMPATIBILITY

This cable is compatible with a wide range of Sony Handycam camcorders that feature a 10-pin AV output port. Please ensure your camcorder has the necessary VMC-15FS compatible port before use.

Compatible Sony Handycam Series:

- **DCR-D Series:** DCR-DVD101, DCR-DVD103, DCR-DVD105, DCR-DVD108, DCR-DVD108BDL, DCR-DVD201, DCR-DVD203, DCR-DVD203KIT1, DCR-DVD205, DCR-DVD301, DCR-DVD305, DCR-DVD308, etc.
- **DCR-H Series:** DCR-HC20, DCR-HC21, DCR-HC26, DCR-HC28, DCR-HC30, DCR-HC32, DCR-HC36, DCR-HC37, DCR-HC37E, DCR-HC38, DCR-HC38E, etc.
- **DCR-I Series:** DCR-IP1, DCR-IP5, DCR-IP5KITB, DCR-IP7BT, DCR-IP7KITB, DCR-IP55, DCR-IP55KITB, DCR-IP220, etc.
- **DCR-P Series:** DCR-PC55, DCR-PC55/B, DCR-PC55/R, DCR-PC55/S, DCR-PC105, DCR-PC330, DCR-PC100, etc.

- **DCR-S Series:** DCR-SR40, DCR-SR42, DCR-SR42A, DCR-SR45, DCR-SR47, DCR-SR60, DCR-SR62, DCR-SR65, DCR-SR67, DCR-SR80, DCR-SR82, etc.
- **HDR-C Series:** HDR-CX6EK, HDR-CX7, HDR-CX11E, HDR-CX12, HDR-CX100, HDR-CX100/R, HDR-CX100B, HDR-CX500V, etc.
- **HDR-F/H Series:** HDR-FX7, HDR-FX1000, HDR-HC1, HDR-HC3, HDR-HC5, HDR-HC7, HDR-HC9, etc.
- **HDR-S/U/X Series:** HDR-SR1, HDR-SR5, HDR-SR5C, HDR-SR7, HDR-SR8, HDR-SR10, HDR-SR10D, HDR-SR11, HDR-SR12, HDR-TG1, HDR-TG5V, HDR-UX5, HDR-UX7, HDR-UX10, HDR-UX20, HDR-XR100, HDR-XR200V, etc.

5. SETUP INSTRUCTIONS

Follow these steps to connect your Sony Handycam camcorder to a television using the VMC-15FS A/V Cable:

1. **Locate the Camcorder Port:** Find the 10-pin AV output port on your Sony Handycam camcorder. This port is typically labeled 'A/V OUT' or similar.
2. **Connect to Camcorder:** Insert the 10-pin connector of the VMC-15FS cable firmly into the camcorder's AV output port.
3. **Identify TV Inputs:** On your television or display device, identify the corresponding input ports:
 - S-Video port (for higher quality video, if available).
 - Yellow RCA port for composite video.
 - Red RCA port for the right audio channel.
 - White RCA port for the left audio channel.
4. **Connect to TV:** Connect the S-Video plug (if using) and the yellow, red, and white RCA plugs from the cable to their respective ports on the television. Ensure all connections are secure and color-matched.



Image: A close-up view of the 10-pin connector being inserted into the A/V port of a Sony Handycam camcorder.

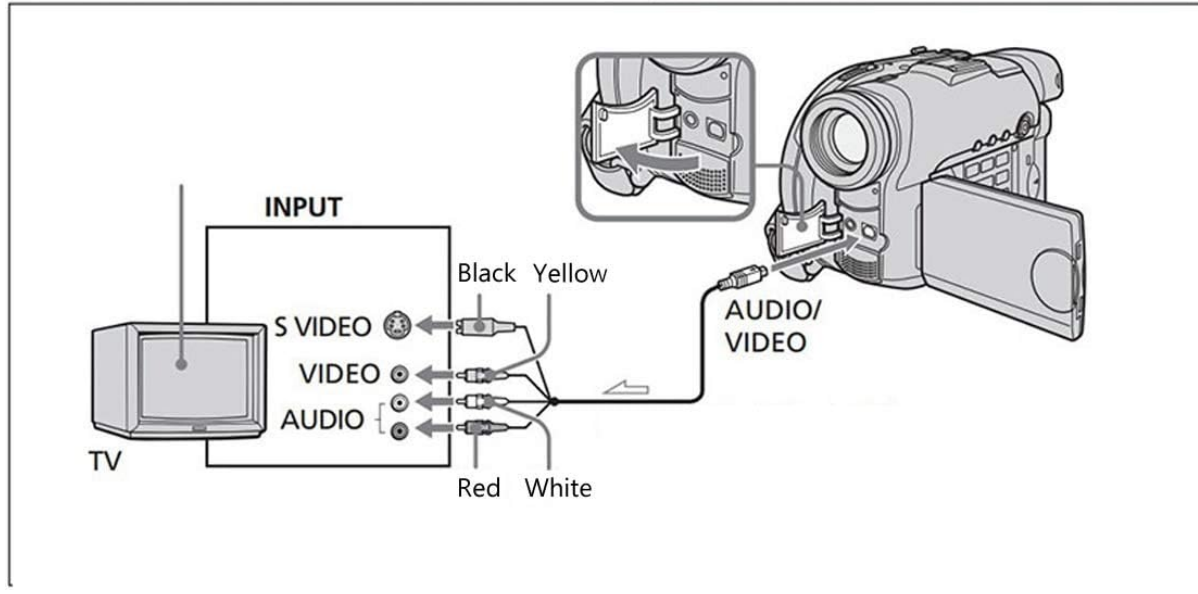


Image: A diagram illustrating the connection of the VMC-15FS cable from a camcorder's A/V output to a television's S-Video and RCA audio/video inputs.

6. OPERATING INSTRUCTIONS

Once the cable is securely connected, follow these steps to view your camcorder's content on your television:

1. **Power On Devices:** Turn on your television and your Sony Handycam camcorder.
2. **Select TV Input:** On your television, use your TV remote control to select the correct input source. This is typically done by pressing the 'Input', 'Source', or 'TV/Video' button. Select the input that corresponds to where you connected the cable (e.g., AV1, Video 1, S-Video).
3. **Play Camcorder Content:** Put your camcorder into playback mode and begin playing the desired video. The audio and video from your camcorder should now be displayed on your television.

Note: If you are using the S-Video connection for video, you must still connect the red and white RCA cables for audio, as S-Video only transmits video signals.

7. MAINTENANCE

Proper care will extend the life of your A/V cable:

- Keep the cable clean and free from dust and debris. Use a soft, dry cloth for cleaning.

- Store the cable in a cool, dry place when not in use, avoiding extreme temperatures.
- Do not coil the cable too tightly, as this can stress the internal wiring.

8. TROUBLESHOOTING

If you encounter issues, try the following:

- **No Picture or No Sound:**
 - Verify that all cable connections are secure at both the camcorder and television ends.
 - Ensure your television is set to the correct input source (e.g., AV1, Video 1, S-Video).
 - Confirm that your camcorder is powered on and in playback mode.
 - If using S-Video, remember to connect the red and white RCA cables for audio.
- **Poor Picture or Sound Quality:**
 - Check for any visible damage to the cable or connectors.
 - Ensure all connectors are fully inserted into their respective ports.
 - Try using a different input port on your television, if available, to rule out a faulty TV port.

9. SPECIFICATIONS

- **Brand:** WYMECT
- **Model Number:** XZT001321 (VMC-15FS)
- **Connector Type (Camcorder):** 10 Pin AV Connector
- **Connector Type (TV):** S-Video, RCA (Video, Left Audio, Right Audio)
- **Cable Type:** Component (Analog Audio/Video)
- **Cable Length:** 1.2 meters (3.9 feet)
- **Color:** Black
- **Item Weight:** 0.64 ounces (0.04 Pounds)
- **Product Dimensions:** 5 x 4 x 0.5 inches
- **UPC:** 754914111665

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact WYMECT customer service directly. Keep your purchase receipt for any warranty claims.