

Coby True Wireless Bluetooth Speaker

Coby True Wireless Bluetooth Speaker Instruction Manual

Model: True Wireless Bluetooth Speaker

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Coby True Wireless Bluetooth Speaker. Please read this manual thoroughly before using the device and retain it for future reference. This portable speaker offers high-definition sound, IPX5 water resistance, and true wireless stereo pairing capabilities.

PRODUCT OVERVIEW

Components and Controls

Familiarize yourself with the speaker's components and control buttons.



Image Description: Front view of the Coby True Wireless Bluetooth Speaker, showcasing its red fabric grille and control buttons (Power, Volume Down/Previous, Volume Up/Next, Play/Pause/Call, Mode).



Image Description: An infographic highlighting key features of the Coby speaker, including 8W speaker output, wireless high-fidelity sound, 33ft wireless range, 12-hour play time, IPX5 waterproofing, and a built-in microphone. The speaker is shown in the foreground.

- **Power Button:** Press and hold to power on/off.
- **Play/Pause/Call Button:** Press to play/pause music, answer/end calls.
- **Volume Up (+) / Next Track:** Short press for volume up, long press for next track.
- **Volume Down (-) / Previous Track:** Short press for volume down, long press for previous track.
- **Mode Button (M):** Press to switch between Bluetooth, AUX, and USB input modes.
- **Microphone:** For hands-free calling.
- **Charging Port:** USB-C or Micro USB (refer to specific model for type).
- **AUX Input:** For wired audio connection.
- **USB Input:** For playing music from a USB drive.
- **Carabiner Loop:** For portability.

SETUP

Charging the Speaker

1. Connect the provided USB charging cable to the speaker's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate during charging.
4. Once fully charged (approximately 3 hours), the indicator light will change or turn off.
5. A full charge provides up to 12 hours of playback time.

Powering On/Off

- **To Power On:** Press and hold the Power button for approximately 3 seconds until you hear an audible prompt.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds until you hear an audible prompt.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED). If not, press the 'M' (Mode) button to switch to Bluetooth mode.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "Coby Speaker" (or similar name) from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the LED indicator will stop flashing.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

True Wireless Stereo (TWS) Pairing

To achieve a stereo sound experience, you can pair two Coby True Wireless Bluetooth Speakers together.

1. Ensure both speakers are powered on and in Bluetooth mode, but not yet paired to any device.
2. On one of the speakers (this will be the primary speaker), double-press the Power button.
3. The two speakers will attempt to connect to each other. Once connected, you will hear an audible confirmation.
4. Now, pair your mobile device to the primary speaker as described in the "Bluetooth Pairing" section.
5. Audio will now play in stereo through both speakers.

Call Functions

- **Answer Call:** Press the Play/Pause/Call button once.
- **End Call:** Press the Play/Pause/Call button once during a call.
- **Reject Call:** Press and hold the Play/Pause/Call button for 2 seconds.
- **Redial Last Number:** Double-press the Play/Pause/Call button.

Audio Playback

- **Play/Pause:** Press the Play/Pause/Call button.
- **Volume Up:** Short press the '+' button.
- **Volume Down:** Short press the '-' button.
- **Next Track:** Long press the '+' button.

- **Previous Track:** Long press the '-' button.
- **Mode Switching:** Press the 'M' button to cycle through Bluetooth, AUX, and USB modes.

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The speaker is IPX5 water-resistant, meaning it can withstand splashes and light rain. Do not submerge the speaker in water. Ensure the charging port cover is securely closed when exposed to water.



Image Description: The Coby speaker shown with water splashes, illustrating its IPX5 protection against rain, mud, and sweat.

- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker fully before long periods of storage and recharge it at least once every three months.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source and try again.
Cannot pair via Bluetooth.	<ul style="list-style-type: none">• Ensure the speaker is in Bluetooth pairing mode (flashing LED).• Make sure Bluetooth is enabled on your device.• Move the speaker closer to your device (within 33 feet).• Forget "Coby Speaker" from your device's Bluetooth list and try pairing again.• Ensure no other devices are currently connected to the speaker.
No sound or low volume.	<ul style="list-style-type: none">• Increase the volume on both the speaker and your connected device.• Ensure the speaker is correctly paired or connected via AUX/USB.• Check if the speaker is in the correct mode (Bluetooth, AUX, USB).
TWS pairing fails.	<ul style="list-style-type: none">• Ensure both speakers are Coby True Wireless Bluetooth Speakers.• Make sure both speakers are powered on and not connected to any other device.• Try resetting both speakers by powering them off and on, then attempt TWS pairing again.

SPECIFICATIONS

- **Brand:** Coby
- **Model:** True Wireless Bluetooth Speaker
- **Speaker Output Power:** 8 Watts
- **Audio Output Mode:** Surround
- **Mounting Type:** Freestanding
- **Special Feature:** Portable, IPX5 Waterproof, Built-in Microphone, True Wireless Stereo (TWS)
- **Battery:** 1800 mAh Li-ion (Up to 12 hours playback, 55 hours standby)
- **Charging Time:** Approximately 3 hours
- **Wireless Range:** Up to 33 feet (10 meters)

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the speaker. This will void the warranty.
- Keep the speaker away from strong magnetic fields.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the speaker and its battery responsibly according to local regulations.
- Avoid listening at high volumes for extended periods to prevent hearing damage.

WARRANTY AND SUPPORT






For warranty information and technical support, please refer to the documentation included with your purchase or

visit the official Coby website. Keep your proof of purchase for warranty claims.

Coby Official Website: [Visit the Coby Store on Amazon](#)

© 2023 Coby. All rights reserved.

Related Documents - True Wireless Bluetooth Speaker

 <p>IFIXIT Coby DVD209 The bottom portion of the DVD player Replacement This guide will show you how to safely remove screws, disconnect cables, and access internal components. Written By: Tony Vaccaro</p>	<p>Coby DVD209 DVD Player Bottom Portion Replacement Guide</p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
 <p>COBY® CETW645 Active Noise Cancelling TWS Earbuds Auriculares TWS con cancelación de ruido With Hi-Res LCD Touchscreen Case Con funda de pantalla táctil LCD de alta resolución User Manual Manual De Usuario Bluetooth® CE - 01 CE - 23</p>	<p>CETW645 Active Noise Cancelling TWS Earbuds User Manual</p> <p>User manual for the CETW645 Active Noise Cancelling TWS Earbuds with Hi-Res LCD Touchscreen Case. Learn about powering on/off, pairing, controls, troubleshooting, and specifications.</p>
 <p>COBY® True Wireless Party Speaker Instruction Manual CSTW530 BC</p>	<p>COBY CSTW530 True Wireless Party Speaker Instruction Manual</p> <p>Instruction manual for the COBY CSTW530 True Wireless Party Speaker, covering safety, setup, features, controls, specifications, and warranty information.</p>
 <p>COBY® True Wireless Rugged Speaker Instruction Manual CSTW-43FD BC</p>	<p>Coby CSTW-43FD True Wireless Rugged Speaker Instruction Manual</p> <p>Instruction manual for the Coby CSTW-43FD True Wireless Rugged Speaker, covering setup, operation, features, and specifications.</p>
 <p>COBY® True Wireless Party Speaker Instruction Manual CPA640 BC</p>	<p>COBY CPA640 True Wireless Party Speaker Instruction Manual</p> <p>Instruction manual for the COBY CPA640 True Wireless Party Speaker, detailing setup, features, Bluetooth connectivity, music controls, light modes, radio, karaoke, AUX/USB/memory card usage, specifications, and warranty information from Summit Electronics LLC.</p>

COBY

CSTW52FD

True Wireless Speaker



User Manual / Manual de usuario



[Coby CSTW52FD True Wireless Speaker User Manual](#)

User manual for the Coby CSTW52FD True Wireless Speaker. Learn about its features, operation, charging, Bluetooth connectivity, TWS pairing, FM radio mode, external device playback, and safety precautions.