

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Acctim](#) /

› [Acctim 74367 Peron Radio Controlled Wall Clock Instruction Manual](#)

Acctim 74367

Peron Radio Controlled Wall Clock

Model: 74367 | Brand: Acctim

INTRODUCTION

Thank you for purchasing the Acctim Peron Radio Controlled Wall Clock. This clock is designed to automatically synchronize with the atomic time signal, ensuring precise timekeeping without manual adjustment. Please read this manual carefully to ensure proper setup and operation of your new clock.



This image is a placeholder and does not depict the actual product. It indicates that a product image is not available.

SETUP

- Battery Installation:** Open the battery compartment cover on the back of the clock. Insert one fresh AA alkaline battery, ensuring the polarity (+/-) matches the diagram inside the compartment. Close the cover securely.
- Initial Synchronization:** After battery installation, the clock hands will automatically move to the 12:00 position and begin searching for the radio time signal. This process can take several minutes to several hours, depending on your location and signal strength. Place the clock near a window for better reception.
- Time Zone Setting:** If your clock has a time zone switch (usually on the back), set it to your local time zone (e.g., GMT, EST, PST). If there is no switch, the clock will display the time for the default time zone of the signal (typically GMT/UTC).

OPERATING INSTRUCTIONS

- Automatic Time Adjustment:** The clock will automatically receive the radio time signal daily (usually overnight) to ensure accurate timekeeping, including adjustments for Daylight Saving Time (DST).
- Manual Signal Search:** To manually initiate a signal search, press and hold the 'WAVE' or 'SET' button (if available) on the back of the clock for a few seconds. The hands will move to 12:00 and attempt to resynchronize.
- Signal Reception Indicator:** Some models may have an indicator (e.g., an LED light or a specific hand

movement) to show successful signal reception. Refer to your clock's specific markings.

MAINTENANCE

- **Battery Replacement:** Replace the battery annually or when the clock hands stop moving or become erratic. Always use a fresh, high-quality AA alkaline battery.
- **Cleaning:** Clean the clock casing and face with a soft, dry cloth. Do not use abrasive cleaners, solvents, or spray directly onto the clock.
- **Environmental Considerations:** Avoid placing the clock in direct sunlight, near strong magnetic fields, or in areas with extreme temperatures or high humidity, as these can affect performance and signal reception.

TROUBLESHOOTING

Problem	Solution
Clock not synchronizing or showing incorrect time.	Ensure the battery is fresh and correctly installed. Move the clock to a location with better signal reception (e.g., near a window, away from electronics). Manually initiate a signal search.
Hands are stuck or not moving.	Replace the battery. If the problem persists, gently check for any obstructions to the hands.
Clock loses time or runs slow/fast.	This indicates poor signal reception or a weak battery. Replace the battery and reposition the clock.

SPECIFICATIONS

- **Model:** 74367 Peron
- **Power Source:** 1 x AA Alkaline Battery (not included)
- **Time Signal:** DCF77 (Europe) or WWVB (North America) - (*Note: Signal type depends on region of purchase*)
- **Operating Temperature:** 0°C to 40°C (32°F to 104°F)
- **Dimensions:** Approximately 30cm (12 inches) diameter

WARRANTY & SUPPORT

Acctim products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please visit the official Acctim website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

Note: Warranty terms and conditions may vary by region.

