

## KLARSTEIN DSM-1200-wjrg

# Klarstein Mini Dishwasher DSM-1200-wjrg User Manual

Model: DSM-1200-wjrg | Brand: KLARSTEIN

## 1. INTRODUCTION

Thank you for choosing the Klarstein Mini Dishwasher DSM-1200-wjrg. This compact countertop dishwasher is designed for small households, offering convenience and efficiency. To ensure safe operation and optimal performance, please read this manual thoroughly before using the appliance and retain it for future reference.

## 2. SAFETY INSTRUCTIONS

Always adhere to basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the power supply matches the voltage specified on the appliance's rating label.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Do not operate the dishwasher if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Avoid opening the door during operation, especially during the hot wash or drying cycles, to prevent steam burns.
- Ensure proper ventilation around the appliance.
- Disconnect the appliance from the power supply before cleaning or maintenance.

## 3. PRODUCT OVERVIEW AND COMPONENTS

The Klarstein Mini Dishwasher is designed for convenience and efficiency in a compact form factor. It accommodates 2 place settings.



Figure 3.1: Front view of the Klarstein Mini Dishwasher, showcasing its compact design and transparent door.

The package includes the following components:

- 1 x Dishwasher unit
- 1 x Fruit basket
- 1 x Cutlery holder
- 1 x Baby bottle container
- 2 x Hoses (inlet and drain)
- 1 x Funnel (for water filling)

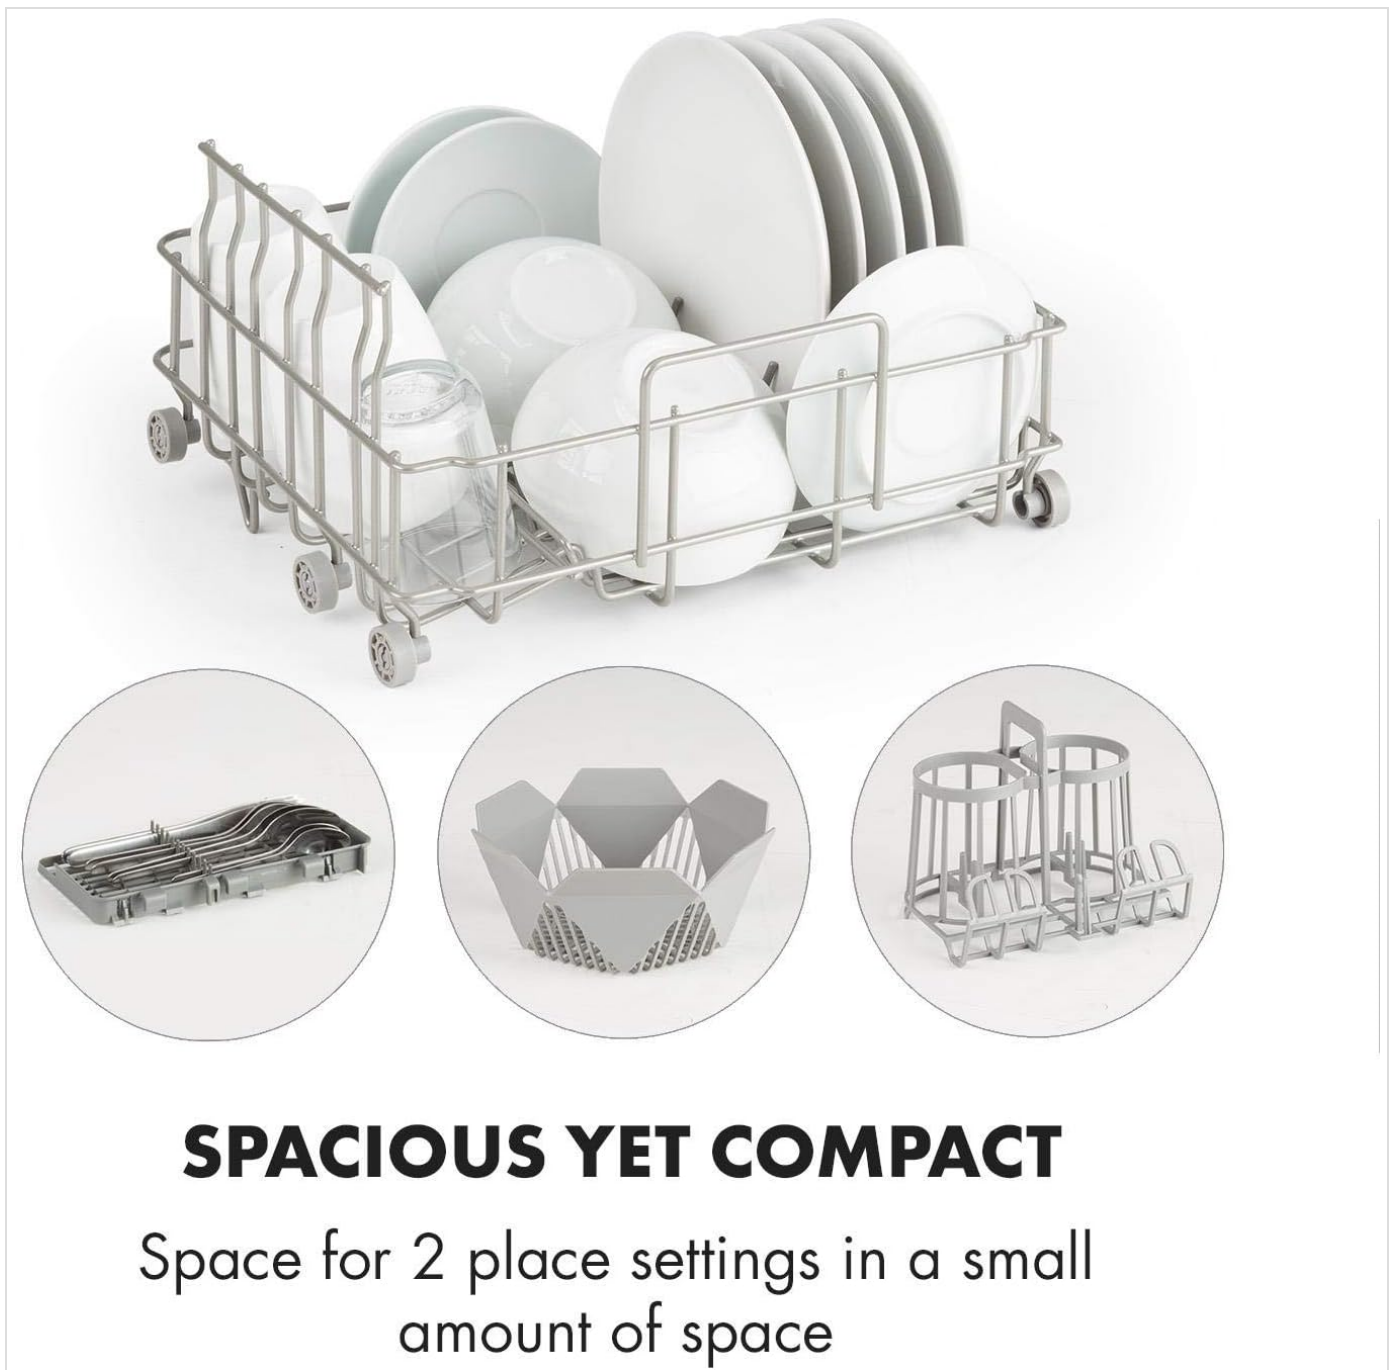


Figure 3.2: Interior view of the dishwasher, showing the dish rack, cutlery holder, and space for two place settings.

## 4. SETUP AND INSTALLATION

This portable dishwasher requires minimal installation, making it ideal for various settings.

### 4.1 Placement

- Place the dishwasher on a stable, level surface, such as a countertop.
- Ensure there is adequate space around the unit for ventilation.
- Position it near a water source for manual filling and a drain for wastewater.

### 4.2 Water Filling (Manual)

The dishwasher features an integrated water tank, allowing for manual water filling without direct plumbing.

1. Open the water inlet cap on the top of the appliance.
2. Use the provided funnel to pour clean water into the inlet until the water tank is full. The appliance will signal when

the tank is full.



Figure 4.1: Illustrates the process of manually filling the dishwasher's water tank using the provided funnel.

### 4.3 Drainage Connection

Connect the drain hose to the appliance's drain outlet and direct the other end into a sink or a suitable drain point. Ensure the hose is securely fastened and positioned to allow for proper water flow.

### 4.4 Power Connection

Plug the power cord into a grounded electrical outlet. The dishwasher is now ready for use.

## 5. OPERATING INSTRUCTIONS

### 5.1 Control Panel

The dishwasher features an LED display and a touch control panel for easy operation.



Figure 5.1: Detailed view of the touch control panel and LED display, showing program indicators and time remaining.

## 5.2 Loading Dishes

Arrange dishes in the basket, ensuring they do not block the spray arms. Place larger items towards the back and smaller items, like cutlery, in the designated holder. The dishwasher can accommodate plates up to 26 cm in diameter.

## 5.3 Adding Detergent

Add the appropriate amount of dishwasher detergent to the dispenser. Refer to the detergent manufacturer's instructions for dosage.

## 5.4 Selecting a Wash Program

The dishwasher offers 7 wash programs to suit various cleaning needs:

- **ECO:** Energy-efficient program for normally soiled dishes.
- **Glass:** Gentle cleaning for delicate glassware.
- **1 Hour:** Quick wash for lightly soiled dishes.
- **Rapid:** Even faster wash cycle.
- **Baby Care:** Intensive cleaning and sterilization for baby bottles and items.
- **Fruit Wash:** Dedicated program for washing fruits and vegetables.



- **Hot Disinfection:** High-temperature wash for enhanced hygiene.



## VARIOUS CLEANING PROGRAMMES

Eco, one hour, fast, fruit, hot disinfection and glass

Figure 5.2: Examples of items suitable for different wash programs, including fruits, baby bottles, and delicate glasses.

### 5.5 Starting a Cycle

After selecting your desired program, press the Start button to begin the wash cycle. The LED display will show the remaining time.

### 5.6 360° Wash Technology

The dishwasher utilizes 360° wash technology with upper and lower spray arms to ensure thorough cleaning of all items.



## 360° WASH

Thorough cleaning with spray arms  
on ceiling and floor



Figure 5.3: Illustration of the 360° wash system with water jets from both upper and lower spray arms for comprehensive cleaning.

### 5.7 Low Water Consumption

This model is designed for efficiency, requiring only 5 liters of water per wash cycle.



Figure 5.4: Visual representation of the dishwasher's low water consumption, highlighting its efficiency.

## 6. CARE AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your dishwasher and ensure optimal performance.

### 6.1 Cleaning the Filters

Periodically check and clean the filters located at the bottom of the dishwasher tub. Remove any food particles or debris to prevent blockages and ensure efficient drainage.

### 6.2 Cleaning the Interior

Wipe down the interior surfaces with a damp cloth after each use. For deeper cleaning, run an empty cycle with a dishwasher cleaner or a cup of white vinegar.

### 6.3 Cleaning the Exterior

Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.



## 7. TROUBLESHOOTING GUIDE

Before contacting customer support, please refer to the following table for common issues and their potential solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Program not selected.	Ensure power cord is securely plugged in; Close the door firmly; Select a wash program and press Start.
Dishes are not clean	Improper loading; Insufficient detergent; Clogged spray arms or filters.	Reload dishes correctly; Use adequate detergent; Clean spray arms and filters.
Water not draining	Drain hose kinked or blocked; Clogged filter.	Check and clear the drain hose; Clean the filter.
Excessive noise	Dishes rattling; Appliance not level.	Rearrange dishes; Ensure the dishwasher is on a level surface.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	DSM-1200-wjrg
Brand	KLARSTEIN
Dimensions (L x W x H)	42 x 42 x 44 cm
Weight	14 kg
Capacity	2 Place Settings / 5 Liters
Voltage	220-240 V~   50/60 Hz
Power Consumption	124 kWh/annum (Energy Class A)
Noise Level	58 dB
Number of Wash Programs	7
Internal Material	Stainless Steel
Control Type	Touch, LED Display





Figure 8.1: The EU Energy Label for the Klarstein Mini Dishwasher, indicating its energy efficiency class A, annual energy consumption, water consumption, noise level, and capacity.

## 9. WARRANTY AND CUSTOMER SUPPORT

Klarstein products are manufactured with care and undergo strict quality control. In the unlikely event of a defect, please contact your retailer or the Klarstein customer service department for assistance. Please retain your proof of purchase for warranty claims.

For further assistance or inquiries, please visit the official Klarstein website or contact their customer support channels.

	<p><a href="#">Klarstein AMAZONIA 6 SECRET Geschirrspüler – Bedienungsanleitung</a></p> <p>This document provides essential information for the Klarstein AMAZONIA 6 SECRET compact dishwasher, covering safety, installation, operation, and maintenance to ensure optimal performance and longevity.</p>
	<p><a href="#">Klarstein Vermont Serving Trolley - Assembly and Product Information</a></p> <p>Detailed information and assembly instructions for the Klarstein Vermont Serving Trolley (Model 10030776), including scope of delivery and manufacturer details.</p>
	<p><a href="#">Klarstein AMAZONIA 8 Instrukcja Obsługi Zmywarki</a></p> <p>Kompleksowa instrukcja obsługi zmywarki Klarstein AMAZONIA 8 (modele 10045371, 10045372), zawierająca wytyczne bezpieczeństwa, instalację, obsługę, instrukcje ładowania, czyszczenie, konserwację, rozwiązywanie problemów i specyfikacje produktu. Dowiedz się, jak zoptymalizować wydajność i dbać o swoją zmywarkę.</p>
	<p><a href="#">Klarstein Amazonia 6 Dishwasher User Manual</a></p> <p>Comprehensive user manual for the Klarstein Amazonia 6 dishwasher, including installation, operation, maintenance, troubleshooting, and program details for models 10028325, 10028326, 10041203, 10041204.</p>

 The image shows the cover of the Klarstein Amazonia 6 Luminance dishwasher user manual. The cover is red with white text. At the top, the words 'KLARSTEIN' and 'Amazonia 6 Luminance' are repeated in a grid-like pattern. Below this, the brand name 'KLARSTEIN' is prominently displayed, followed by the model name 'Amazonia 6 Luminance' and the word 'Használati' (Usage) in smaller text.	<p><a href="#">Klarstein Amazonia 6 Luminance Mosogatógép Felhasználói Kézikönyv</a></p> <p>Átfogó felhasználói kézikönyv a Klarstein Amazonia 6 Luminance mosogatógéphez, amely tartalmazza a telepítést, üzemeltetést, mosogatási programokat, karbantartást, hibaelhárítást és termékspecifikációkat. Ismerje meg, hogyan optimalizálhatja mosogatógépe teljesítményét és biztosíthatja hosszú élettartamát.</p>
 The image shows the cover of the Klarstein AMAZONIA 6 Dishwasher User Manual. The cover is light blue with a white grid pattern. The text 'AMAZONIA 6' is prominently displayed in the center, with 'Dishwasher' written below it. The Klarstein logo is visible in the bottom right corner.	<p><a href="#">Klarstein AMAZONIA 6 Dishwasher User Manual</a></p> <p>Comprehensive user manual for the Klarstein AMAZONIA 6 dishwasher, covering safety instructions, installation, operation, programs, loading dishes, cleaning, maintenance, troubleshooting, and product specifications. Learn how to effectively use and care for your dishwasher.</p>