

Beikell VCR-740

Beikell High-Speed USB 3.0 SD/Micro SD Card Reader

Model: VCR-740

Brand: Beikell

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Beikell High-Speed USB 3.0 SD/Micro SD Card Reader. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.



Figure 1: Beikell USB 3.0 SD/Micro SD Card Reader with included accessories.

2. PRODUCT FEATURES

- **Super Speed Transmission:** Utilizes USB 3.0 technology to achieve data transfer rates of up to 5Gbps, significantly faster than USB 2.0. This allows for rapid transfer of large files such as photos and videos.
- **Broad Compatibility:** Supports a wide range of memory card types including SD, Micro SD, TF, SDHC, SDXC, and MMC. It is compatible with Windows and macOS operating systems.
- **Safe and Durable Design:** Engineered to prevent data loss during card reading and writing operations. The metal connector is constructed with high-quality materials for enhanced reliability and durability.
- **Perfect Portability:** Features a compact and lightweight design (60mm x 17mm x 10mm, 15g) with an integrated keychain, making it easy to carry in a bag, purse, backpack, or pocket.
- **Protective Lid:** Includes a transparent protective lid designed to safeguard the interface from damage, dirt, water, and corrosive liquids, ensuring consistent performance.



Figure 2: Internal components and compact structure of the card reader.

3. SETUP GUIDE

The Beikell USB 3.0 SD/Micro SD Card Reader is designed for plug-and-play functionality, requiring no additional driver installations for most operating systems.

1. **Insert Memory Card:** Gently insert your SD, Micro SD, or other compatible memory card into the appropriate slot on the card reader. Ensure the card is fully seated.
2. **Connect to Device:** Plug the USB 3.0 connector of the card reader directly into an available USB port on your computer, laptop, tablet, or other compatible device.
3. **Access Data:** Your operating system should automatically detect the card reader and the inserted memory card. The card will appear as a removable drive, allowing you to access, transfer, or manage your files.



Figure 3: Connecting the card reader to a laptop.

4. OPERATING INSTRUCTIONS

Once connected, the card reader functions like any standard external storage device. You can perform the following operations:

- **File Transfer:** Drag and drop files between your computer and the memory card. For optimal speed, ensure you are connected to a USB 3.0 port.
- **Data Backup:** Use the card reader to back up important data from your memory cards to your computer's hard drive.
- **Media Playback:** Directly play media files (photos, videos, music) stored on the memory card without transferring them to your computer first.
- **Safe Removal:** Always safely eject the card reader from your operating system before physically disconnecting it to prevent data corruption.



Figure 4: High-speed data transfer in action.

5. COMPATIBILITY

The Beikell USB 3.0 SD/Micro SD Card Reader offers extensive compatibility:

- **Supported Memory Card Types:**
 - SD Card
 - Micro SD Card (TF Card)
 - SDHC
 - SDXC

- MMC
- RSMMC
- **Supported Operating Systems:**
 - Windows (Windows 10, 8, 7, Vista, XP)
 - macOS
 - Linux

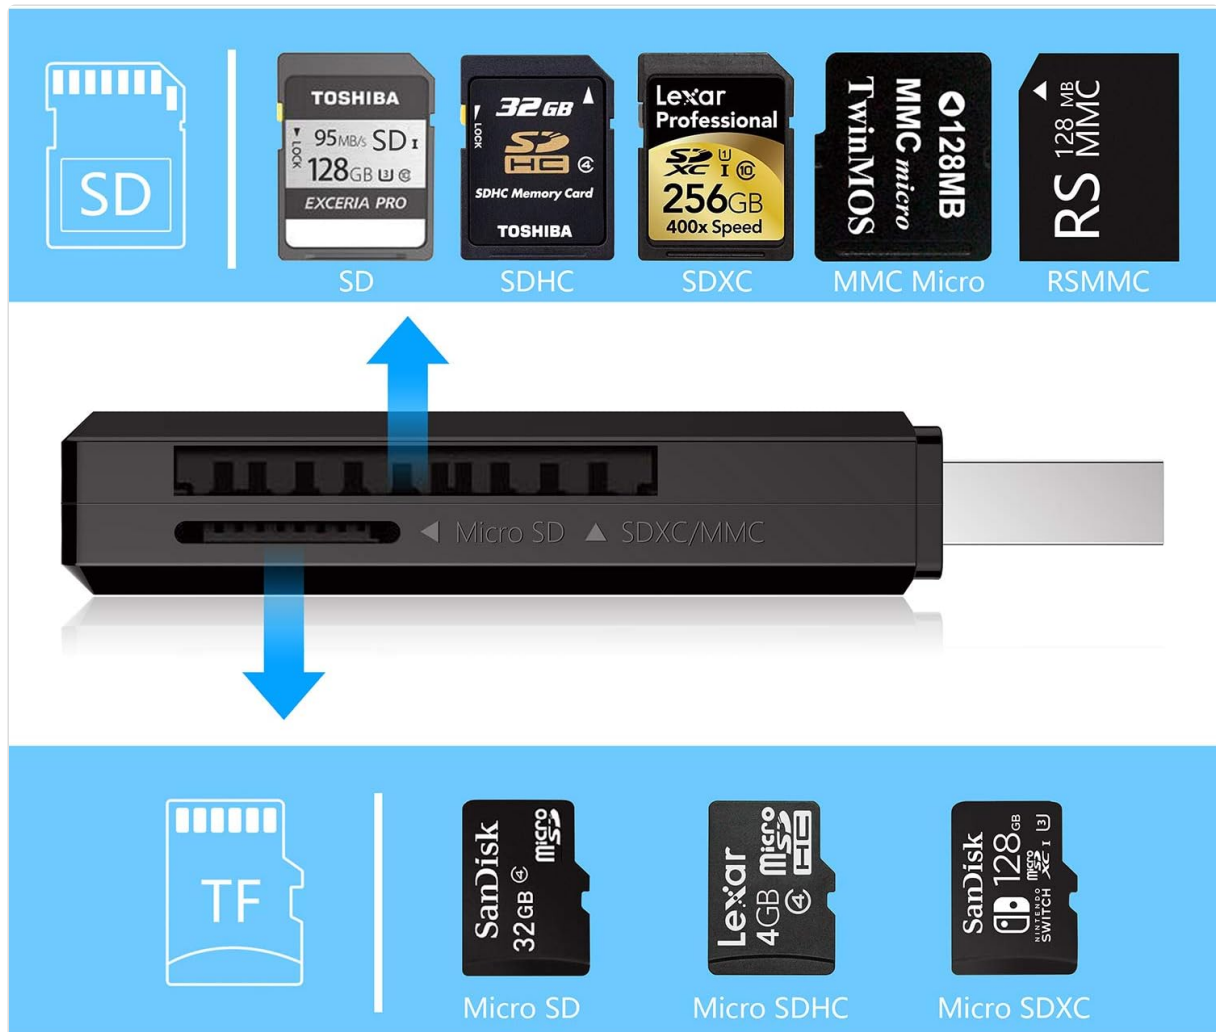


Figure 5: Supported memory card types.

6. MAINTENANCE

To ensure the longevity and optimal performance of your card reader, follow these maintenance guidelines:

- **Keep Clean:** Regularly wipe the exterior of the card reader with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Protect Connectors:** Always use the transparent protective lid when the card reader is not in use to prevent dust, dirt, and physical damage to the USB connector and card slots.
- **Avoid Moisture and Extreme Temperatures:** Do not expose the device to water, high humidity, or extreme temperatures. Store it in a cool, dry place.
- **Handle with Care:** Avoid dropping or subjecting the card reader to strong impacts, which can damage internal components.

7. TROUBLESHOOTING

If you encounter issues with your Beikell card reader, consider the following common solutions:

Problem	Possible Cause / Solution
Card reader not detected by computer.	Ensure the card reader is fully inserted into the USB port. Try a different USB port on your computer. Test the card reader on another computer to rule out computer-specific issues. Restart your computer.
Memory card not recognized.	Ensure the memory card is fully and correctly inserted into the appropriate slot. Verify the memory card is not damaged or corrupted. Check if the memory card is locked (some SD cards have a physical lock switch). Try a different memory card to see if the issue is with the card itself.
Slow data transfer speeds.	Ensure you are connected to a USB 3.0 port (usually blue inside). If connected to a USB 2.0 port, speeds will be limited. The speed of the memory card itself can limit transfer rates. Close other applications that might be using system resources.

8. SPECIFICATIONS

Attribute	Detail
Brand	Beikell
Model Number	VCR-740
Connectivity Technology	USB Type A (USB 3.0)
Supported Media Types	MMC, microSD, SDXC, SDHC, SD Card (TF Card)
Operating System Compatibility	Windows, macOS, Linux
Item Weight	0.388 ounces (approx. 11 grams)
Product Dimensions (LxWxH)	2.36 x 0.67 x 0.39 inches (approx. 60 x 17 x 10 mm)
Color	Black
Special Feature	Plug & Play

9. WARRANTY AND SUPPORT

Beikell products are designed for reliability and performance. For any questions, technical support, or warranty inquiries, please contact Beikell customer service using the information below:

- **Telephone:** 1-800-360-5881

- **Email:** support@beikell.com
- **Website:** www.beikell.com

Please retain your proof of purchase for warranty claims.