Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Peerless-AV /
- > Peerless-AV T6X4 Universal Flat/Tilt Wall Mount Instruction Manual

Peerless-AV T6X4

Peerless-AV T6X4 Universal Flat/Tilt Wall Mount Instruction Manual

Model: T6X4

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective installation, operation, and maintenance of your Peerless-AV T6X4 Universal Flat/Tilt Wall Mount. Please read this manual thoroughly before beginning installation and retain it for future reference.

The Peerless-AV T6X4 wall mount is designed for 50-inch to 65-inch displays, offering a low-profile solution with flexible viewing angles. Its design prioritizes ease of installation, featuring a Hook-and-Hang system and Easy-Glide adaptors for a secure setup.

SAFETY INFORMATION

WARNING: Failure to read, understand, and follow all instructions can result in serious personal injury, property damage, or voiding of factory warranty. It is the installer's responsibility to ensure all components are properly assembled and installed.

IMPORTANT: Ensure the mounting surface can safely support the combined weight of the mount and the display. Always use appropriate tools and safety equipment. If unsure about any part of the installation, consult a qualified professional.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not proceed with installation. Contact Peerless-AV customer support.

- · Wall Plate Assembly
- Display Adaptor Brackets (2)
- Mounting Hardware Kit (various screws, washers, spacers)
- Instruction Manual



Image: Main components of the Peerless-AV T6X4 Universal Flat/Tilt Wall Mount, including the wall plate and display adaptor brackets.

SETUP AND INSTALLATION

This section outlines the steps for installing the Peerless-AV T6X4 wall mount. It is recommended to have at least two people for the installation process, especially when lifting the display.

Step 1: Attach Display Adaptor Brackets to Display

- 1. Carefully place the display face down on a soft, clean surface to prevent scratches.
- 2. Identify the VESA mounting holes on the back of your display.
- 3. Select the appropriate screws, washers, and spacers from the hardware kit that fit your display's mounting holes.
- 4. Attach the two display adaptor brackets to the back of the display, ensuring they are centered and securely fastened. The Hook-and-Hang system requires the top hooks to face upwards.



Image: Close-up view of the display adaptor brackets being attached to the rear of a television, showing the screw points and bracket orientation.

Step 2: Mount Wall Plate to Wall

- 1. Determine the desired height and location for your display on the wall. Use a stud finder to locate wall studs if mounting to wood.
- 2. Position the wall plate against the wall at the desired height and use a level to ensure it is perfectly horizontal.
- 3. Mark the drilling locations through the holes on the wall plate.
- 4. Drill pilot holes according to the recommended drill bit size for your wall type (wood stud, concrete, brick).
- 5. Secure the wall plate to the wall using the appropriate lag bolts and washers provided in the hardware kit. Ensure it is firmly attached.

Step 3: Hang Display on Wall Plate

- 1. With assistance, carefully lift the display with the attached adaptor brackets.
- 2. Align the top hooks of the display adaptor brackets with the top edge of the wall plate.

- 3. Lower the display slowly, allowing the Easy-Glide adaptors to hook onto the wall plate. Ensure the display is securely seated.
- 4. Engage the safety screws or locking mechanisms on the bottom of the adaptor brackets to prevent accidental dislodgement.



Image: A television securely mounted on a wall using the Peerless-AV T6X4 mount, integrated into a living room environment above a fireplace.

OPERATING INSTRUCTIONS

The Peerless-AV T6X4 mount offers simple adjustments for optimal viewing.

Tilt Adjustment

- The mount allows for a +70 tilt adjustment.
- To adjust the tilt, loosen the tilt knobs or bolts located on the side of the display adaptor brackets.
- Carefully tilt the display to the desired angle.
- Tighten the tilt knobs or bolts to secure the display in place.

Side-to-Side Adjustment

- After installation, the display can be shifted horizontally along the wall plate for ideal positioning.
- Ensure the safety screws are disengaged before attempting to slide the display.
- Gently slide the display left or right along the wall plate until it is centered or positioned as desired.
- Re-engage the safety screws to lock the display in its new position.

MAINTENANCE

The Peerless-AV T6X4 wall mount requires minimal maintenance to ensure long-term performance.

- Cleaning: Use a soft, dry cloth to wipe down the mount. Avoid abrasive cleaners or solvents that could damage the finish.
- **Periodic Inspection:** Periodically check all screws and bolts to ensure they remain tight. Over time, vibrations or adjustments can cause fasteners to loosen.
- Weight Capacity: Do not exceed the maximum weight capacity of the mount. Refer to the specifications section for details.

TROUBLESHOOTING

If you encounter issues with your Peerless-AV T6X4 wall mount, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mount feels unstable after installation.	Wall plate not securely fastened; incorrect anchors used; wall surface not strong enough.	Ensure all lag bolts are tightened. Verify wall type and use appropriate fasteners. Consult a professional if wall integrity is a concern.
Display is not level.	Wall plate installed unevenly.	Remove display, re-level wall plate using a spirit level, and re-secure.
Difficulty tilting the display.	Tilt knobs/bolts are too tight.	Loosen tilt knobs/bolts slightly, adjust tilt, then re-tighten.

SPECIFICATIONS

Model Number	T6X4
Brand	Peerless-AV
Mounting Type	Wall Mount
Movement Type	Tilt
Compatible Display Sizes	50 Inches to 65 Inches
Maximum Tilt Angle	+7 Degrees
Low Profile Distance from Wall	1.27 inches

Universal Mounting Pattern (Max)	600 mm x 400 mm (23.62 in. W x 15.75 in. H)
Item Weight	4.07 pounds
Product Dimensions (L x W x H)	1.27 x 25.2 x 16.46 inches
Color	Black
UPC	735029342526
Manufacturer	PEERLESS INDUSTRIES INC

WARRANTY AND SUPPORT

For warranty information and technical support, please contact Peerless-AV directly. Keep your purchase receipt as proof of purchase.

• Manufacturer: PEERLESS INDUSTRIES INC

• Brand: Peerless-AV

• Website: www.peerless-av.com (Note: This is a generic link, actual support link may vary)

For the most up-to-date support information, please visit the official Peerless-AV website or refer to the product packaging.

© 2024 Peerless-AV. All rights reserved.

Related Documents - T6X4



Peerless-AV TV Wall Mount Installation Guide (50"-65")

Comprehensive installation guide for Peerless-AV TV wall mounts, covering wood stud and concrete wall installations, safety precautions, parts list, and assembly steps for screen sizes 50-65 inches and up to 110 lbs.



Peerless-AV OSUA771PU DesignerSeries Universal Ultra Slim Articulating Wall Mount for 55-77" OLED/QLED Displays

Detailed specifications and features of the Peerless-AV OSUA771PU DesignerSeries Universal Ultra Slim Articulating Wall Mount, designed for 55-77 inch OLED and QLED televisions, offering flexible mounting, adjustable tilt, swivel, and integrated cable management for a clean installation.



Peerless-AV ACC-SB2 Universal UC/VC Soundbar Mount for Large Displays

Detailed specifications and compatibility information for the Peerless-AV ACC-SB2 Universal UC/VC Soundbar Mount, designed for 55" to 85" single displays and 55" to 75" dual displays. Features adjustable mounting and robust construction.



Peerless PF640 Universal Flat Wall Mount for 23"-46" Screens

The Peerless PF640 is a low-profile, universal flat wall mount designed for 23" to 46" flat panel screens. It offers easy installation, viewing flexibility with horizontal adjustment, and secure mounting options for various wall types. Includes Sorted-for-You™ fastener pack and is UL listed.



Peerless-AV DSF265L Floor to Ceiling Cable Mount Installation Guide

This document provides installation instructions for the Peerless-AV DSF265L Floor to Ceiling Cable Mount, designed for 46-inch to 65-inch displays. It includes safety warnings, tools needed, parts list, and step-by-step assembly guidance.



Peerless-AV DS-S555-3X2 46-55 Inch Full-Motion Mount Installation Guide

Comprehensive installation guide for the Peerless-AV DS-S555-3X2 full-motion mount, supporting 46-55 inch displays up to 600 lbs. Includes parts list, assembly instructions, and safety warnings.