

Manuals.plus /

› EWA /

› EWA A110mini Bluetooth Speaker User Manual

EWA A110mini

EWA A110mini Bluetooth Speaker User Manual

Model: A110mini | Brand: EWA

1. INTRODUCTION

The EWA A110mini is a compact, portable Bluetooth speaker designed for high-quality audio playback. It features Bluetooth 4.0 connectivity, enhanced bass, and True Wireless Stereo (TWS) technology, allowing two A110mini speakers to be paired for an immersive stereo experience. Its durable metal casing and long battery life make it suitable for various environments.

2. WHAT'S IN THE BOX


- 1 x EWA A110mini Bluetooth Speaker
- 1 x Micro USB Charging Cable
- 1 x User Guide (this manual)
- 1 x Carrying Case

3. PRODUCT FEATURES

- **Powerful and Clear Sound:** Despite its compact size, the A110mini delivers robust and clear audio with enhanced bass.
- **True Wireless Stereo (TWS) Technology:** Pair two A110mini speakers for a 360° immersive stereo sound experience.
- **Portable Design:** Compact and lightweight, includes a carrying case for easy transport.
- **Extended Playback:** Built-in lithium-ion battery provides up to 10 hours of playtime at 50% volume.
- **Durable Construction:** Features a high-quality metallic casing for enhanced durability.
- **Bluetooth 4.0:** Ensures stable and efficient wireless connectivity.
- **Micro SD Card Slot:** Supports direct music playback from a Micro SD card.

4. SETUP

4.1 Powering On/Off

- To power on, press and hold the power button (marked with ) located on the bottom of the speaker until the LED indicator lights up.

- To power off, press and hold the power button until the LED indicator turns off.

4.2 Bluetooth Pairing

1. Ensure the EWA A110mini speaker is powered on. The LED indicator will flash, indicating it is in pairing mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "EWA A110mini" from the list.
4. Once connected, the LED indicator on the speaker will remain solid blue.

4.3 True Wireless Stereo (TWS) Pairing (for two A110mini speakers)

This function allows you to pair two EWA A110mini speakers for a left and right stereo channel experience.

1. Ensure both EWA A110mini speakers are powered off.
2. Power on both speakers simultaneously.
3. On **one** of the speakers, quickly double-press the power button (). The speakers will automatically search for and pair with each other.
4. Once paired, one speaker will act as the primary (left channel) and the other as the secondary (right channel). The LED indicators will reflect their connected status.
5. Now, connect your mobile device to the primary speaker via Bluetooth as described in Section 4.2.



Image: Two EWA A110mini speakers connected via True Wireless Stereo (TWS) to a smartphone.

4.4 Micro SD Card Playback

- Insert a Micro SD card (with music files) into the Micro SD Card slot located on the side of the speaker.
- The speaker will automatically detect the card and begin playing music.

Re-engineered

in no small way

A110mini



A110



Image: EWA A110mini speaker with LED indicator and Micro SD Card slot labeled.

5. OPERATING THE SPEAKER

5.1 Controls

The EWA A110mini features three control buttons located on its base:

- **Power Button ():**
 - Press and hold: Power On/Off.
 - Single press: Play/Pause music.
 - Double press: Initiate TWS pairing (during initial setup for two speakers).
- **"+" Button:** Press to skip to the next track.

- "-" Button: Press to go back to the previous track.

Note: Volume control is managed directly from your connected Bluetooth device. The speaker buttons do not control volume.

Down-ward Button Design



Image: Speaker bottom with labeled control buttons.

5.2 Charging

- Connect the provided Micro USB cable to the charging port on the speaker and the other end to a standard USB power adapter (DC: 5V-500mA).
- The LED indicator will show the charging status (e.g., red for charging, off when fully charged).

6. MAINTENANCE

6.1 Cleaning

- Wipe the speaker's exterior with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, benzene, or other chemical solvents, as these may damage the surface or internal components.
- Avoid exposing the speaker to excessive moisture.

6.2 Storage

- When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use the provided carrying case to protect the speaker from dust and scratches.

7. TROUBLESHOOTING

- **Speaker does not power on:**

- Ensure the battery is sufficiently charged. Connect the speaker to a power source using the Micro USB cable.
- Press and hold the power button for a few seconds to ensure it's not a brief press.

- **No sound or low volume:**

- Check the volume level on both the speaker and your connected Bluetooth device.
- Ensure the speaker is properly paired with your device via Bluetooth.
- If using a Micro SD card, ensure the music files are in a compatible format and the card is inserted correctly.

- **Cannot pair with Bluetooth device:**

- Ensure the speaker is in pairing mode (LED indicator flashing).
- Turn off and then turn on Bluetooth on your device.
- Move the speaker closer to your device and away from other electronic interference.
- If previously paired, try forgetting the device on your phone and re-pairing.

- **TWS pairing issues (two speakers):**

- Ensure both speakers are EWA A110mini models.
- Follow the TWS pairing steps in Section 4.3 precisely. Ensure both speakers are powered off before starting the TWS pairing process.
- Make sure no other Bluetooth devices are actively connected to either speaker during TWS pairing.

8. SPECIFICATIONS

Feature	Specification
Brand	EWA
Model	A110mini
Connectivity Technology	Bluetooth, USB (for charging)
Bluetooth Version	4.0
Speaker Output Power	3 Watts
Battery Life	Up to 10 hours (at 50% volume)
Battery Capacity	500mAh
Charging Input	DC: 5V-500mA
Control Method	Tactile Buttons
Speaker Size	15 mm
Item Weight	400 Grams
Compatible Devices	Smartphone
Color	Black
Audio Channels	2.0 (with TWS pairing)

9. WARRANTY AND SUPPORT

The EWA A110mini Bluetooth speaker comes with a **12-month warranty** from the date of purchase. For any product-related inquiries, technical assistance, or warranty claims, please contact our customer support team. We offer 24-hour customer service and email support to ensure your satisfaction.

