

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Schleich](#) /

› [Schleich bayala Sera's Magical Flower Boat Playset Instruction Manual](#)

Schleich 42444

Schleich bayala Sera's Magical Flower Boat Playset Instruction Manual

Model: 42444 | Brand: Schleich

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and care of your Schleich bayala Sera's Magical Flower Boat playset. Please read all instructions carefully before use to ensure proper setup and enjoyment of the product.

SAFETY INFORMATION

Warning! This product contains small parts which may pose a choking hazard. Not suitable for children under 3 years.

- Always supervise children during play.
- Keep all packaging materials away from children to prevent suffocation.
- Inspect all parts regularly for damage. Discontinue use if any part is broken or damaged.

COMPONENTS (WHAT'S IN THE Box)

Your Schleich bayala Sera's Magical Flower Boat playset includes the following 19 pieces:

- 1x boat
- 1x sail
- 1x Sera figure
- 1x flying squirrel figure
- 1x sea unicorn foal figure
- 2x pillows
- 1x blanket
- 4x pin-on flowers
- 1x chalice
- 1x potion bottle
- 1x treasure chest

- 1x anchor
- 1x crow's nest
- 1x dinghy
- 1x sticker sheet



Figure 1: All 19 components included in the playset.

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Magical Flower Boat:

- 1. Unpack all components:** Carefully remove all pieces from the packaging and verify against the "Components" list.
- 2. Assemble the boat hull:** The main boat body may come in sections. Connect these sections securely.
- 3. Attach the sail:** Insert the sail into the designated slot on the boat's mast. Ensure it is firmly in place.
- 4. Attach decorative elements:** Secure the pin-on flowers and other decorative pieces to the boat as desired.
- 5. Position the crow's nest and anchor:** Attach the crow's nest to the top of the mast and the anchor to its designated hanging point.
- 6. Prepare the dinghy:** The small dinghy can be attached to the main boat with the provided string. Place the

sea unicorn foal inside the dinghy.

7. **Apply stickers:** Use the sticker sheet to add decorative details to the boat and accessories as shown in the product images or manual illustrations.
8. **Arrange accessories:** Place the pillows, blanket, chalice, potion bottle, and treasure chest inside the boat. The treasure chest can be stored in the secret hatch.



Figure 2: The assembled boat structure before adding figures and small accessories.



Figure 3: The separate dinghy for the sea unicorn foal.

Assembly Video Guide

Your browser does not support the video tag.

Video 1: An unboxing and assembly guide for Sera's Magical Flower Boat playset, demonstrating how to put together the various components.

OPERATING AND PLAY FEATURES

The Sera's Magical Flower Boat is designed for imaginative play within the bayala world. Here are some key features:

- **Main Boat:** The boat serves as the primary setting for adventures. Place Sera and the flying squirrel on board.
- **Secret Hatch:** Discover the hidden compartment within the boat to store the treasure chest or other small items.
- **Movable Elements:** The side panels of the boat can open and close, adding to the play experience.
- **Dinghy:** The small dinghy can be towed behind the main boat, providing a separate vessel for the sea

unicorn foal.

- **Figures and Accessories:** Use Sera, the flying squirrel, and the sea unicorn foal along with the various accessories (pillows, blanket, chalice, potion, telescope) to create diverse play scenarios.



Figure 4: The complete playset ready for imaginative adventures.



Figure 5: Detail of the boat's interior, highlighting the secret storage hatch.



Figure 6: Sera and the flying squirrel enjoying the boat's amenities.

MAINTENANCE

To ensure the longevity of your playset, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the figures and boat with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the playset in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Inspection:** Periodically check all parts for wear and tear. Replace any broken components if possible, or contact customer support.

TROUBLESHOOTING

If you encounter any issues with your playset, consider the following:

- **Missing Parts:** Double-check the packaging and play area. If a part is genuinely missing, refer to the

"Warranty and Support" section.

- **Assembly Difficulties:** Review the assembly instructions and video carefully. Ensure all pieces are oriented correctly and snapped into place firmly. Do not force parts together.
- **Damaged Parts:** If any part arrives damaged or breaks during normal use, contact Schleich customer support for assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.76 x 3.94 x 13.58 inches (7 x 10 x 34.5 cm)
Item Weight	2.2 pounds (1 kg)
Model Number	42444
Recommended Age	5 - 12 years
Manufacturer	Schleich
Release Date	July 1, 2019

WARRANTY AND SUPPORT

Schleich products are manufactured with high standards of quality and safety. For warranty information, missing parts, or customer support, please visit the official Schleich website or contact their customer service department directly. Contact details can typically be found on the product packaging or the manufacturer's website.

You can visit the [Schleich Store on Amazon](#) for more information and products.