

Manuals.plus /

> [Redi-Remote](#) /

> Replacement Remote for Onkyo RC-438DV, DV-S939 User Manual

Redi-Remote RT24140438

Replacement Remote Control User Manual

For Onkyo Models: RC-438DV, DV-S939

Brand: Redi-Remote | Model: RT24140438

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, specifically designed to operate Onkyo units RC-438DV and DV-S939. This is a custom-built replacement remote and is not an original Onkyo product. It is engineered to perform all essential functions of the original remote for the specified models.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Initial Use

This Redi-Remote replacement control requires no programming. Once batteries are installed, it is ready for immediate use with compatible Onkyo RC-438DV and DV-S939 units.

OPERATING THE REMOTE CONTROL

Button Layout Overview

The remote control features a logical button layout for intuitive operation. The upper section contains primary control buttons, while the lower section, accessible by sliding down a panel, provides advanced functions for media playback and settings.



Image: Front view of the Redi-Remote replacement remote control. The upper half features power, menu, volume, channel, and number buttons. The lower half, covered by a sliding panel, reveals media playback, setup, and additional function buttons.

Upper Section Buttons

Button	Function
PWR	Power On/Off for the Onkyo unit.
TOP MENU	Accesses the main menu of the connected device.
SLEEP	Activates or adjusts the sleep timer function.
ZOOM+ / CH+	Increases zoom level or navigates to the next channel.
STANDBY / TV/VIDEO	Puts the unit in standby mode or switches between TV and video inputs.
DISP/NAVI / DISP	Displays on-screen information or navigates menus.
VOL- / VOL+	Decreases or increases the volume level.
MUTE	Mutes or unmutes the audio output.
MENU	Accesses the device's menu system.
CH- / ZOOM-	Decreases zoom level or navigates to the previous channel.
ZOOM ON	Activates or deactivates the zoom feature.
RECALL	Recalls the previously viewed channel or input.
Number Buttons (0-9)	Direct input for channel numbers or menu selections.
+10 / 100	Used for entering two-digit or three-digit channel numbers.
SEARCH	Initiates a search function.
ENT (Enter)	Confirms a selection or input.

Lower Section Buttons (Slide Down Panel)

To access the advanced functions, slide the lower panel of the remote control downwards. This reveals additional buttons for media playback, audio/video settings, and other specific features.

Button	Function
DVD	Selects the DVD input source.
VIDEO 1 / VIDEO 2 / VIDEO 3	Selects the corresponding video input source.
AUDIO	Selects the audio input source.
ANGLE	Changes the viewing angle on compatible DVDs.
SUBTITLE	Toggles subtitles on/off or cycles through subtitle options.
OPEN/CLOSE	Opens or closes the disc tray.
RETURN	Returns to the previous menu or screen.
SETUP	Accesses the setup menu for the device.

Button	Function
PROG-RESSIVE (Progressive Scan)	Activates or deactivates progressive scan output.
V.REMOTE	Function specific to virtual remote or advanced control.
PLAY	Starts playback.
ENTER	Confirms selections within menus.
Directional Arrows (Up, Down, Left, Right)	Navigates through menus and options.
REWIND / FAST FORWARD	Rewinds or fast forwards media playback.
PREVIOUS / NEXT	Skips to the previous or next track/chapter.
STOP	Stops media playback.
SLOW	Activates slow-motion playback.
PAUSE/STEP	Pauses playback or advances frame by frame.
DIMMER	Adjusts the brightness of the unit's display.
CLEAR	Clears current input or selection.
RANDOM	Activates random playback mode.
MEMORY	Stores or recalls settings/preferences.
REPEAT	Repeats current track, chapter, or disc.
- STILL +	Adjusts still image settings.
DNR (Digital Noise Reduction)	Toggles or adjusts digital noise reduction.
A-B	Repeats a specific section between points A and B.

MAINTENANCE

Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace all four AAA batteries at the same time with new ones. Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the Onkyo unit's infrared sensor.
 - Confirm the remote is pointed directly at the unit.

- **Limited range:**
 - Check battery strength; weak batteries can reduce range.
 - Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the non-working buttons, to remove any dirt or debris.
 - If only lower panel buttons are affected, ensure the panel is fully slid down.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	5 ounces
Batteries Required	4 AAA batteries
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1
Special Feature	No Programming Required
Compatible Devices (as per specifications)	Projector

Note: While specifications list 'Projector' as a compatible device, this remote is specifically designed and tested for Onkyo RC-438DV and DV-S939 units as stated in the product description.

SUPPORT

If you encounter any issues or have concerns regarding the remote control after purchase, please contact the seller directly for assistance. Direct contact ensures the quickest resolution for any product-related inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07LB8J69M>

More documents and user manuals: <https://manuals.plus/>