

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Redi-Remote](#) /

› [Redi-Remote Replacement Remote Control User Manual for Harman Kardon BDS Series \(BDS400, BDS300, BDS2, BDS700, BDS5, BDS800, BDS600\)](#)

Redi-Remote RT06RB76A00X

Redi-Remote Replacement Remote Control User Manual

For Harman Kardon BDS Series: BDS400, BDS300, BDS2, BDS700, BDS5, BDS800, BDS600

Model: RT06RB76A00X | Brand: Redi-Remote

1. INTRODUCTION

This document provides instructions for the Redi-Remote replacement remote control, designed for seamless operation with specific Harman Kardon BDS series home theater systems. This remote is a custom-built replacement and is not an original Harman Kardon product. It is pre-programmed to control all functions of the compatible Harman Kardon units without requiring additional setup.

Compatible Harman Kardon Models: BDS400, BDS300, BDS2, BDS700, BDS5, BDS800, BDS600.

2. SETUP: BATTERY INSTALLATION

To begin using your Redi-Remote, you must install the required batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert **four (4) AAA batteries**, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

The remote control is now ready for use. No programming is required.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Redi-Remote. The remote features a sliding cover that reveals additional controls for advanced functions.



Figure 1: Redi-Remote Control Layout

3.1. Top Section Buttons

- **PWR (Power):** Turns the Harman Kardon unit on or off.
- **TV/VIDEO:** Switches the input source to TV or Video.
- **SLEEP:** Activates the sleep timer function.
- **DISP (Display):** Changes the display information on the unit.
- **CH+ / CH-:** Changes channels up or down.
- **VOL+ / VOL-:** Adjusts the volume level up or down.
- **MUTE:** Mutes or unmutes the audio output.
- **MENU:** Accesses the main menu of the unit.
- **RECALL:** Recalls the previously selected channel or input.
- **Number Pad (0-9, 100, ENT):** Used for direct channel selection or entering numerical values.

3.2. Lower Section Buttons (Slide Down)

Slide the lower cover of the remote downwards to reveal additional control buttons.

- **iPOD CLR:** Clears iPod settings or selections.
- **DISK CLR:** Clears disc settings or selections.
- **SURROUND:** Activates or adjusts surround sound modes.
- **HOME:** Returns to the home screen or main menu.
- **EJECT:** Ejects a disc from the player.
- **FIND:** Initiates a search function.
- **iPOD POWER:** Controls power for a connected iPod.
- **SETTINGS:** Accesses system settings.
- **REPEAT:** Toggles repeat playback modes.
- **A-B:** Sets or repeats a specific A-B segment.
- **OPTIONS:** Displays additional options for the current function.
- **EXIT:** Exits the current menu or function.
- **TOP MENU:** Accesses the top menu of a disc.
- **DISK POP-UP:** Displays a disc's pop-up menu.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and selections.
- **OK:** Confirms a selection.
- **iPOD POP-UP:** Displays a pop-up menu for a connected iPod.
- **Playback Controls (Rewind, Fast Forward, Previous Track, Next Track, Play, Pause, Stop):** Standard media playback functions.
- **PROGRAM:** Initiates programming functions (e.g., for radio stations).
- **RADIO PROGRAM:** Specifically for programming radio stations.
- **BOOK MARK:** Sets a bookmark during playback.
- **THUMB-NAIL:** Displays content as thumbnails.
- **ZOOM:** Zooms in or out on the display.

4. MAINTENANCE

Proper care will ensure the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.

- **Battery Replacement:** If the remote's response becomes sluggish or inconsistent, replace all four AAA batteries simultaneously with new ones. Do not mix old and new batteries.
- **Avoid Drops:** Protect the remote from drops and impacts, which can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your Redi-Remote, please refer to the following common solutions:

- **Remote Not Responding:**
 - Ensure batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
 - Check for any obstructions between the remote and the Harman Kardon unit's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the unit.
- **Limited Functionality:**
 - This Redi-Remote is specifically designed for the listed Harman Kardon BDS models. It cannot be programmed to control auxiliary devices.
 - Verify that your Harman Kardon unit is one of the compatible models (BDS400, BDS300, BDS2, BDS700, BDS5, BDS800, BDS600).

6. SPECIFICATIONS

Model Number	RT06RB76A00X
Brand	Redi-Remote
Compatible Devices	Harman Kardon BDS400, BDS300, BDS2, BDS700, BDS5, BDS800, BDS600
Connectivity Technology	Infrared (IR)
Power Source	4 x AAA Batteries (not included)
Product Dimensions	7 x 2.5 x 1 inches (approximately)
Item Weight	5 ounces (approximately)
Special Feature	No Programming Required

7. SUPPORT

For any concerns or questions regarding your Redi-Remote replacement remote control after purchase, please contact the seller directly. As this is a replacement product, specific warranty details may vary and are typically handled by the point of purchase or the seller.

