

[manuals.plus](#) /› [Indesit](#) /› [Indesit H 461 IX.1/1 Cooker Hood User Manual](#)

Indesit H 461 IX.1/1

Indesit H 461 IX.1/1 Cooker Hood User Manual

Model: H 461 IX.1/1

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential information for the safe and efficient use of your Indesit H 461 IX.1/1 semi-integrated cooker hood. Please read these instructions carefully before installation, operation, or maintenance, and retain them for future reference.

1.1 General Safety Warnings

- Ensure the appliance is installed by a qualified technician in accordance with local regulations.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.
- Do not flambé under the cooker hood.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- Regularly clean the filters to maintain optimal performance and prevent fire hazards.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The Indesit H 461 IX.1/1 is a semi-integrated cooker hood designed to efficiently remove cooking fumes and odors from your kitchen. It features a durable stainless steel construction and multiple fan speeds for effective ventilation.



Figure 1: Front view of the Indesit H 461 IX.1/1 semi-integrated cooker hood. This image displays the front of the Indesit H 461 IX.1/1 cooker hood, showing its stainless steel finish, the two metal grease filters, and the control buttons located on the right side.

2.1 Main Components

- **Control Panel:** Buttons for power, fan speed selection, and lighting.
- **Grease Filters:** Removable metal filters designed to trap grease particles.
- **Lighting:** Integrated lights to illuminate the cooking area.
- **Motor Unit:** Located inside the hood, responsible for air extraction.
- **Ducting Outlet:** For connecting to an external ventilation system (duct mode).

3. SETUP AND INSTALLATION

Installation of the Indesit H 461 IX.1/1 cooker hood should be performed by a qualified professional. Incorrect installation can lead to hazards and void the warranty. Refer to the separate installation template and diagrams provided with the product for detailed instructions.

3.1 Pre-Installation Checks

- Verify that the power supply matches the specifications on the appliance rating plate.
- Ensure adequate space and structural support for mounting the hood.
- Confirm that the ducting system (if used) is correctly sized and free from obstructions.

3.2 Mounting the Hood

The hood is designed for semi-integrated installation into a kitchen cabinet. Follow the specific instructions and measurements provided in the installation guide to securely mount the unit and connect it to the electrical supply and ducting.

4. OPERATING INSTRUCTIONS

The control panel for the Indesit H 461 IX.1/1 cooker hood is typically located on the front right side of the unit. It features intuitive buttons for various functions.

4.1 Power On/Off

- Press the **Power** button to turn the hood on or off.

4.2 Fan Speed Selection

The hood offers 3 fan speeds to suit different cooking needs.

- Press the **Speed 1** button for light ventilation (e.g., simmering).
- Press the **Speed 2** button for medium ventilation (e.g., general cooking).
- Press the **Speed 3** button for maximum ventilation (e.g., frying, strong odors).

4.3 Lighting Control

- Press the **Light** button to turn the integrated cooking area lights on or off.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your cooker hood. Always disconnect the appliance from the power supply before cleaning or maintenance.

5.1 Cleaning the Exterior

- Use a soft cloth dampened with mild detergent and warm water to clean the stainless steel surfaces.

- Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
- Dry thoroughly with a clean, soft cloth.

5.2 Cleaning/Replacing Grease Filters

The metal grease filters should be cleaned regularly (approximately every 2-4 weeks, depending on usage) to prevent grease buildup and maintain extraction efficiency.

1. To remove the filters, locate the release latches (visible in Figure 1) and gently pull them down.
2. The filters can be washed by hand in hot soapy water or in a dishwasher on a low-temperature cycle.
3. Ensure filters are completely dry before re-installing them.
4. To re-install, align the filters with their slots and push them up until the latches click into place.

5.3 Replacing Carbon Filters (Recirculation Mode Only)

If your hood is operating in recirculation mode (without external ducting), it will require activated carbon filters to remove odors. These filters cannot be washed and must be replaced every 3-6 months, depending on usage.

- Refer to the specific instructions provided with the carbon filters for replacement procedures.

5.4 Replacing Light Bulbs

Ensure the hood is disconnected from the power supply before attempting to replace light bulbs. Use only bulbs of the same type and wattage as specified by the manufacturer.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

| Problem | Possible Cause | Solution |
|------------------------------|--|--|
| Hood does not operate. | No power supply. | Check if the appliance is plugged in and the circuit breaker is on. |
| Poor extraction performance. | Clogged grease filters. | Clean or replace grease filters. |
| Poor extraction performance. | Ducting obstruction or incorrect installation. | Check ducting for blockages. Ensure proper installation. |
| Lights do not work. | Faulty bulb. | Replace the light bulb. |
| Excessive noise. | Loose components or motor issue. | Ensure all components are securely fastened. If noise persists, contact service. |

7. SPECIFICATIONS

| | |
|-------------------------------|--|
| Brand | Indesit |
| Model Number | H 461 IX.1/1 |
| Type | Semi-integrated Cooker Hood |
| Material | Stainless Steel |
| Dimensions (L x W x H) | 59.8 x 30 x 18 cm (23.5 x 11.8 x 7.1 inches) |
| Weight | 6 kg (13.23 lbs) |

| | |
|---------------------------------|-----------------------|
| Maximum Airflow Capacity | 304 m ³ /h |
| Number of Fan Speeds | 3 |
| Noise Level | 62 dB |
| Voltage | 220V AC |
| Power (Lighting) | 6 Watts |

8. WARRANTY AND CUSTOMER SUPPORT

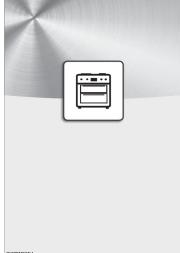
For information regarding the warranty period and terms for your Indesit H 461 IX.1/1 cooker hood, please refer to the warranty card included with your product or visit the official Indesit website. Keep your proof of purchase for any warranty claims.

If you encounter issues that cannot be resolved using the troubleshooting guide, or require professional assistance, please contact Indesit customer support. Contact details can typically be found on the manufacturer's website or in the product packaging.

When contacting support, please have your model number (H 461 IX.1/1) and serial number ready to expedite the service process.

Related Documents - H 461 IX.1/1

| | |
|---|---|
|  <p>EN Instructions for use DE Betriebsanleitung ES Manual de instrucciones NL Gebruiksaanwijzingen IT Istruzioni per l'uso ES Instrucciones de uso PT Instruções de uso BG Ръководство за употреба CS Uživatelská příručka DA Brugervejledning DE Anwendungshandbuch EL Οδηγίες χρήσης IT Istruzioni per l'utilizzo NO Brukerveiledning PL Instrukcja obsługi SV Bruksanvisning DE Anwendungshandbuch SK Návod na použitie DE Anwendungshandbuch UK Інструкція з експлуатації AR دليل الاستخدام</p> | <p>Indesit I CT 64LSS Kitchen Hood User Manual & Installation Guide Comprehensive user manual and installation guide for the Indesit I CT 64LSS kitchen hood. Learn about safe operation, installation procedures, maintenance, and troubleshooting for your Indesit appliance.</p> |
|  <p>IT Istruzioni per l'uso DE Betriebsanleitung ES Manual de instrucciones NL Gebruiksaanwijzingen IT Istruzioni per l'uso ES Instrucciones de uso PT Instruções de uso BG Ръководство за употреба CS Uživatelská příručka DA Brugervejledning DE Anwendungshandbuch EL Οδηγίες χρήσης IT Istruzioni per l'utilizzo NO Brukerveiledning PL Instrukcja obsługi SV Bruksanvisning DE Anwendungshandbuch SK Návod na použitie DE Anwendungshandbuch UK Інструкція з експлуатації AR دليل الاستخدام</p> | <p>Indesit H 461 IX.1/1 Kitchen Hood Installation and User Manual This comprehensive guide provides essential information for the safe installation, operation, and maintenance of the Indesit H 461 IX.1/1 kitchen hood. Learn about safety precautions, connection procedures, usage tips, and troubleshooting.</p> |
|  <p>Indesit HI561 IXUK HI591 IXUK Commercial Codes 28113 + 28114</p> <p>Instruction Booklet Aura</p> | <p>Indesit HI561 IXUK and HI591 IXUK Aura Cooker Hood Instruction Booklet Installation, usage, and maintenance guide for the Indesit Aura cooker hood models HI561 IXUK and HI591 IXUK. Includes safety warnings, component details, and cleaning instructions.</p> |

| | |
|---|---|
|  | <p><u>Indesit ID5G00KMW/UK/L Oven: Installation and User Manual</u></p> <p>This guide provides essential information for the Indesit ID5G00KMW/UK/L oven, including safety precautions, detailed installation instructions, operational guidance, technical specifications, and maintenance advice.</p> |
|  | <p><u>Indesit ID67G0MCB/UK & ID67G0MCX/UK Cooker User Manual</u></p> <p>Comprehensive user manual for Indesit ID67G0MCB/UK and ID67G0MCX/UK cookers, covering safety instructions, installation, daily use, cleaning, maintenance, and cooking tips.</p> |
|  | <p><u>Indesit IWC 91482 Washing Machine: User Manual & Installation Guide</u></p> <p>Comprehensive user manual for the Indesit IWC 91482 washing machine, covering installation, operation, care, safety precautions, troubleshooting, and guarantee information.</p> |