

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [OBH Nordica](#) /
- › [OBH Nordica Select Double Waffle Maker \(Model 6969\) User Manual](#)

OBH Nordica 6969

OBH Nordica Select Double Waffle Maker (Model 6969) User Manual

Your guide to safe and efficient waffle making.

1. INTRODUCTION

Thank you for choosing the OBH Nordica Select Double Waffle Maker, Model 6969. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your appliance. Please read all instructions carefully before first use and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

The OBH Nordica Select Double Waffle Maker is designed to prepare two delicious waffles simultaneously. It features a durable stainless steel construction and non-stick coating for easy release and cleaning.



Figure 1: The OBH Nordica Select Double Waffle Maker in its closed position, highlighting its compact and modern black design with the central temperature control dial.

Components:

- **Non-stick Waffle Plates:** For easy food release and cleaning.
- **Temperature Control Dial:** Adjustable settings for desired browning.
- **Indicator Lights:** Signal power and readiness.
- **Cool-Touch Handle:** For safe opening and closing.
- **Cord Storage:** For convenient storage.

4. SETUP

4.1 Unpacking

1. Carefully remove the waffle maker and all packaging materials from the box.
2. Remove any promotional stickers or labels.
3. Inspect the appliance for any damage. Do not use if damaged.

4.2 First Use Preparation

1. Before first use, wipe the non-stick plates with a damp cloth and then dry thoroughly.
2. For optimal non-stick performance, lightly brush or spray the plates with a small amount of cooking oil or butter during the first use. This is generally not required for subsequent uses due to the non-stick coating.
3. Place the waffle maker on a stable, heat-resistant, and dry surface, away from walls and curtains, ensuring adequate ventilation.

5. OPERATING INSTRUCTIONS

Follow these steps to prepare delicious waffles:



Figure 2: The waffle maker in a kitchen setting, demonstrating its use with freshly made waffles and fruit.

1. **Preheat:** Close the waffle maker and plug it into a 230V electrical outlet. The power indicator light will illuminate. Turn the temperature control dial to your desired setting (1-5). The waffle maker will begin to preheat.
2. **Ready Indicator:** The ready indicator light will turn on (or change color) when the waffle maker has reached the selected temperature and is ready for use. This typically takes 3-5 minutes.
3. **Add Batter:** Open the waffle maker. Pour approximately 1/2 to 3/4 cup of waffle batter onto the center of each lower waffle plate. Do not overfill, as batter will expand during cooking.
4. **Cook Waffles:** Carefully close the lid. The indicator light may turn off as the appliance maintains temperature. Cook for 3-6 minutes, or until the waffles are golden brown and crispy, according to your preference and the selected temperature setting.
5. **Check Doneness:** You can carefully lift the lid to check the waffles during cooking. If they are not ready, close the lid and continue cooking.
6. **Remove Waffles:** Once cooked, open the lid and carefully remove the waffles using a heat-resistant plastic or wooden utensil. Do not use metal utensils, as they can damage the non-stick coating.
7. **Continue Cooking:** If making more waffles, close the lid and wait for the ready indicator light to illuminate again before adding more batter.
8. **Finish:** When finished, unplug the waffle maker from the outlet and allow it to cool completely before cleaning.

Temperature Control Dial



Figure 3: Detailed view of the temperature control dial, allowing users to select browning levels from 1 (lightest) to 5 (darkest).

The temperature control dial allows you to adjust the browning level of your waffles. Setting '1' will produce lighter waffles, while setting '5' will result in darker, crispier waffles. Experiment with different settings to find your preferred texture and color.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your waffle maker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Waffle Plates:** Use a soft, damp cloth or sponge to wipe the non-stick plates. For stubborn batter residue, dampen a cloth with a small amount of cooking oil and gently rub the area, then wipe clean with a fresh damp cloth. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the waffle maker with a damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Storage:** Once clean and dry, store the waffle maker in a clean, dry place. The cord can be wrapped around the base for compact storage.

7. TROUBLESHOOTING

- **Waffle Maker Not Heating:** Ensure the appliance is properly plugged into a functioning 230V outlet. Check if the power indicator light is on. If not, check your household fuse or circuit breaker.
- **Waffles Sticking:** Ensure the non-stick plates are clean. For the first use, or if waffles consistently stick, lightly brush the plates with cooking oil or butter before adding batter. Do not use excessive batter.
- **Waffles Not Browning Evenly:** Ensure the waffle maker has fully preheated (ready indicator light is on) before adding batter. Adjust the temperature control dial to a higher setting for darker waffles.
- **Smoke or Odor During First Use:** It is normal for a slight smoke or odor to occur during the first use as manufacturing residues burn off. This should dissipate quickly. Ensure adequate ventilation.

If you experience issues not covered here, please contact OBH Nordica customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	OBH Nordica
Model Number	6969 (also 1130224)
Color	Black
Material	Stainless Steel
Power	1600 Watts
Voltage	230 Volts
Weight	2.79 Kilograms
Dimensions (L x W x H)	37.8 x 27.5 x 13.1 cm (approximate package dimensions)
Special Feature	Non-stick coating

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your product or visit the official OBH Nordica website. Keep your proof of purchase for any warranty claims.

If you require assistance or have questions about your OBH Nordica Select Double Waffle Maker, please contact OBH Nordica customer service through their official channels.

