



Manuals.plus /

› Pure Enrichment /

› Pure Enrichment PureSteam Pro Upright Clothes Steamer Instruction Manual

Pure Enrichment PESTMUP

Pure Enrichment PureSteam Pro Upright Clothes Steamer Instruction Manual

Model: PESTMUP | Brand: Pure Enrichment

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Pure Enrichment PureSteam Pro Upright Clothes Steamer. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

The PureSteam Pro is designed to efficiently remove wrinkles and refresh a variety of fabrics, offering a convenient alternative to traditional ironing. Its features include a quick heat-up time, multiple steam levels, and a large water tank for extended use.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Always unplug the steamer from the electrical outlet immediately after use and before cleaning or maintenance.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged.
- Keep the steam nozzle away from your body and hands during operation. Steam is hot and can cause burns.
- Never immerse the steamer base, cord, or plug in water or other liquids.
- Use only distilled or demineralized water in the water tank to prevent mineral buildup and extend the life of the appliance.
- Ensure the water tank is securely in place before operating.

- Do not leave the steamer unattended while it is operating.
- Keep the appliance out of reach of children.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Pure Enrichment PureSteam Pro Upright Clothes Steamer:



Image Description: A detailed diagram of the Pure Enrichment PureSteam Pro Upright Clothes Steamer, highlighting its key components. Labels point to the Steam Nozzle & Handle, Hanger, Fabric Brush, Adjustable Pole, Steam Control Knob, 2L Water Tank, and Pedal Switch.

- **Steam Nozzle & Handle:** Delivers steam to fabrics.
- **Hanger:** Integrated hanger for holding garments during steaming.
- **Fabric Brush:** Attachment for removing lint and smoothing fabrics.
- **Adjustable Pole:** Telescopic pole for height adjustment and compact storage.
- **Steam Control Knob:** Adjusts steam output to four different levels.
- **2L Water Tank:** Removable tank with a 2-liter capacity for continuous steaming.

- **Pedal Switch:** Foot-operated power switch for convenient on/off control.
- **Easy-to-Roll Wheels:** Located at the base for portability.

4. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Pole:** Insert the adjustable telescopic pole into the designated slot on the steamer base. Extend the pole to your desired height and secure it.
3. **Attach Hanger:** Place the garment hanger onto the top of the adjustable pole.
4. **Fill Water Tank:** Remove the 2-liter water tank from the base. Unscrew the cap, fill the tank with distilled or demineralized water, and securely replace the cap. Reinsert the filled water tank into the steamer base, ensuring it is seated correctly.
5. **Connect Power:** Plug the power cord into a standard 120V AC electrical outlet.



Image Description: The Pure Enrichment PureSteam Pro Upright Clothes Steamer fully assembled, showing the base unit with the water tank, the adjustable pole, and the steam nozzle with an attached hanger. A separate view of the base unit is also shown.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Heating

1. Ensure the water tank is filled and the steamer is plugged in.
2. Press the foot pedal switch located at the base of the steamer to turn it on. The steamer will begin to heat up.
3. The steamer heats in approximately 45 seconds. Once ready, steam will begin to emit from the nozzle.



Image Description: A person's bare foot pressing the large foot pedal switch on the base of the Pure Enrichment PureSteam Pro Steamer, demonstrating the hands-free operation.

5.2 Adjusting Steam Levels

The steamer offers four heat levels to accommodate various fabric types. Rotate the Steam Control Knob on the base to select the desired steam intensity:

- **Level 1 (Low):** Suitable for delicate fabrics like silk and synthetics.
- **Level 2 (Medium-Low):** Ideal for wool and blends.
- **Level 3 (Medium-High):** Best for cotton and linen.
- **Level 4 (High):** For heavy fabrics like denim and upholstery.



Image Description: A man in a suit standing next to the Pure Enrichment PureSteam Pro Steamer. The image highlights key features: 4 Steam Levels, 45 Seconds Heat Time, ETL Certified Safe, and 1 Hour Run Time.

5.3 Steaming Garments

1. Hang the garment on the integrated hanger. For best results, ensure the fabric is taut.
2. Hold the steam nozzle a few inches away from the fabric.
3. Move the nozzle slowly up and down the fabric, allowing the steam to penetrate and relax the fibers.
4. For stubborn wrinkles, gently press the fabric brush attachment against the garment while steaming.
5. After steaming, allow the garment to cool and dry completely before wearing or storing.



Linen



Cotton

Safe On All Fabrics

Works for casual and formal wear, upholstered furniture, curtains, linens, and more.



Silk



Denim

Image Description: A collage of four fabric swatches (Linen, Cotton, Silk, Denim) demonstrating that the Pure Enrichment PureSteam Pro Steamer is safe for use on all these fabric types, including casual wear, formal wear, upholstered furniture, curtains, and linens.

5.4 Powering Off

When finished steaming, press the foot pedal switch again to turn off the steamer. Unplug the appliance from the electrical outlet.

6. MAINTENANCE

6.1 Emptying the Water Tank

After each use, it is recommended to empty any remaining water from the tank. This prevents stagnant water buildup and reduces the chance of accidental leaks. Allow the steamer to cool completely before removing and emptying the tank.

6.2 Cleaning the Steamer

- Ensure the steamer is unplugged and completely cool before cleaning.
- Wipe the exterior of the steamer base and nozzle with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- If mineral buildup occurs in the water tank or steam nozzle, a solution of equal parts white vinegar and water can be used to descale. Run the solution through the steamer (without a garment) until clear steam is produced, then rinse thoroughly with fresh water.

6.3 Storage

For storage, ensure the water tank is empty and the steamer is cool and dry. The adjustable pole can be collapsed for a more compact size. Store the steamer in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

If you encounter issues with your Pure Enrichment PureSteam Pro, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or very little steam	Water tank is empty; Steamer not heated sufficiently; Mineral buildup in nozzle/hose.	Refill water tank; Allow 45 seconds for heating; Descale the steamer as per maintenance instructions.
Water leaking or spitting from nozzle	Overfilling water tank; Mineral buildup; Steamer not fully heated; Tilting the nozzle too much.	Do not overfill; Descale the steamer; Wait for full heat-up; Keep nozzle upright during use.
Steamer not turning on	Not plugged in; Power outlet issue; Foot pedal not pressed correctly.	Ensure plug is fully inserted; Test outlet with another appliance; Press foot pedal firmly.
Wrinkles not removing effectively	Incorrect steam level; Steaming too quickly; Fabric not taut.	Increase steam level; Move nozzle slower; Ensure garment is taut on hanger.

8. SPECIFICATIONS

Feature	Detail
Brand	Pure Enrichment
Model Number	PESTMUP
Color	White
Product Dimensions	13.7"L x 8.9"W x 54"H (34.8 cm L x 22.6 cm W x 137.2 cm H)
Item Weight	9.56 Pounds (4.34 kg)
Style	Portable, Standing
Wattage	1500 watts
Voltage	120 Volts
Heat Time	45 Seconds
Capacity	2 Liters
UPC	817387020466



Image Description: The Pure Enrichment PureSteam Pro Steamer shown with its key dimensions labeled: 5 ft 2 in (157.5 cm) height, 14.5 in (36.8 cm) depth, 10.7 in (27.2 cm) width, 9 in (22.9 cm) base width, and a 7 ft (213 cm) power cord.

9. WARRANTY AND CUSTOMER SUPPORT

Your Pure Enrichment PureSteam Pro Upright Clothes Steamer is backed by an industry-leading 5-Year Manufacturer's Warranty. This warranty covers defects in materials and workmanship under normal use. For any questions, concerns, or support needs, please contact Pure Enrichment customer support. Our dedicated team is available 7 days a week to assist you.

For more information, visit the official Pure Enrichment website or refer to the contact details provided with your product packaging.