

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GoWISE](#) /

› [GoWISE USA GW44800-O Deluxe 12.7-Quarts 15-in-1 Electric Air Fryer Oven User Manual](#)

GoWISE GW44800-O

GoWISE USA GW44800-O Deluxe 12.7-Quarts 15-in-1 Electric Air Fryer Oven User Manual

Model: GW44800-O | Brand: GoWISE

PRODUCT OVERVIEW

The GoWISE USA GW44800-O Deluxe Air Fryer Oven is a versatile 15-in-1 electric appliance designed for various cooking methods including air frying, roasting, baking, dehydrating, and rotisserie. It offers a spacious 12.7-quart capacity, making it suitable for family-sized meals. The unit features a user-friendly touch control display with 15 preset functions for simplified operation.

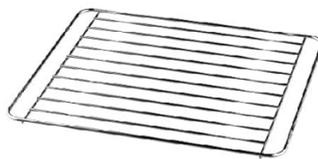
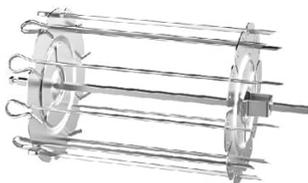
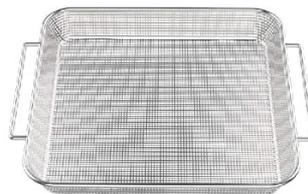
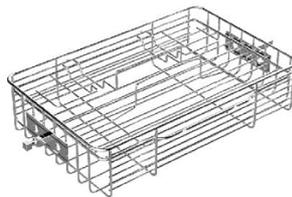
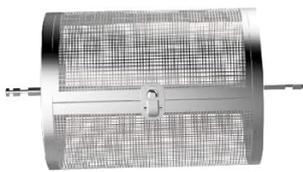
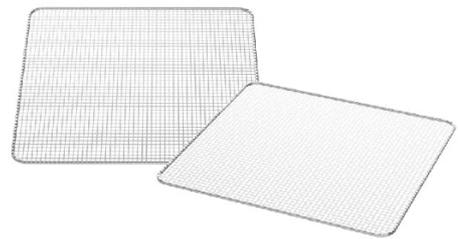


Image: Front view of the GoWISE USA GW44800-O Deluxe Air Fryer Oven.

SETUP AND INITIAL USE

Unboxing and Placement

Carefully remove all packaging materials and accessories from the air fryer oven. Place the unit on a stable, heat-resistant, and level surface, ensuring adequate clearance (at least 5 inches) from walls or other appliances for proper ventilation.

First Use Cleaning

Before first use, wipe down the exterior of the unit with a damp cloth. Wash all removable accessories (rotisserie tong, rotisserie rod, oven rack, drip pan, skewer rotisserie, rotisserie cage, rotisserie steak cage, shallow mesh basket, and two mesh trays) with warm, soapy water. Rinse thoroughly and dry completely.



Image: The GoWISE USA Air Fryer Oven displayed with its full set of accessories.

NOTE: rotisserie forks, rotisserie cage, and skewers share one (1) rod.



Image: A detailed view of the various accessories provided with the air fryer oven.

OPERATING INSTRUCTIONS

Control Panel Overview

The air fryer oven features an easy-to-read touch control display. Key controls include:

- **Temperature (TEMP):** Adjust cooking temperature.
- **Time (TIME):** Set cooking duration.
- **Menu (MENU):** Select from 15 preset cooking functions (e.g., Fries, Wings, Pizza, Steak, Chicken, Fish, Vegetables, Toast, Baked Potato, Rotisserie, Bake, Dehydrate, Keep Warm, Defrost, Manual).
- **Light:** Turn on/off the internal oven light.
- **Rotisserie:** Activate the rotisserie function.
- **On/Off:** Power the unit on or off.



Image: A user interacting with the touch control panel of the air fryer oven.

General Cooking Steps

1. Place food inside the air fryer oven, utilizing the appropriate accessories (mesh trays, rotisserie rod, etc.).
2. Close the oven door securely.
3. Press the "On/Off" button to activate the display.
4. Select a preset function using the "Menu" button, or manually set the desired temperature and time using the "Temp" and "Time" buttons.
5. Press the "On/Off" button again to begin cooking.
6. Monitor cooking progress using the internal light or by carefully opening the door.
7. The unit will automatically shut off when the timer expires and initiate a self-cool feature.

Using the Rotisserie Function

The built-in rotisserie is ideal for cooking whole roasts, chickens, or kebabs.

1. Assemble the rotisserie rod with the desired accessories (e.g., rotisserie forks for a whole chicken, skewer rotisserie for kebabs).
2. Securely attach the food to the rotisserie assembly.
3. Insert the rotisserie assembly into the designated slots inside the oven.
4. Select the "Rotisserie" preset from the menu or manually set temperature and time.

5. Press the "Rotisserie" button to activate the rotation.
6. Begin cooking by pressing the "On/Off" button.



Image: Preparing kebabs using the skewer rotisserie accessory.



Image: A user demonstrating the removal of the mesh basket with cooked fries.

Official Product Video: How to use the Air Fryer Oven Skewer Rack

Your browser does not support the video tag.

Video: This video demonstrates the proper assembly and use of the Skewer Rotisserie Rack with the GoWISE USA Air Fryer Oven for cooking various foods like kebabs.

MAINTENANCE AND CLEANING

Daily Cleaning

Always unplug the air fryer oven and allow it to cool completely before cleaning. Wipe the exterior with a damp cloth. The stainless-steel interior and removable non-stick drip pan are designed for easy clean-up.

Accessory Cleaning

All removable accessories should be washed with warm, soapy water. While some parts may be dishwasher safe, hand washing is recommended to prolong their lifespan. Ensure all components are completely dry before reassembling or storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Unit is not plugged in or power outlet is faulty.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Food is not cooked evenly.	Food is overcrowded or not rotated/shaken.	Cook food in smaller batches. For items on trays, rotate trays halfway through cooking. For basket items, shake the basket periodically.
White smoke coming from the appliance.	Excess oil/grease from food or residue from previous cooking.	Clean the drip pan and interior thoroughly. Reduce oil when cooking fatty foods.

SPECIFICATIONS

- **Model Name:** Deluxe
- **Model Number:** GW44800-O
- **Capacity:** 12.7 Quarts
- **Product Dimensions:** 11.5"D x 12"W x 14"H
- **Color:** Black/Silver
- **Material:** Stainless Steel (Inner), Heat-resistant plastic or similar synthetic material (Outer)
- **Wattage:** 1600 Watts
- **Voltage:** 120V
- **Control Method:** Touch
- **Special Feature:** Programmable
- **Item Weight:** 18 Pounds
- **Cable Length:** 4 Feet
- **UPC:** 819687022522, 819687022072, 819687022515



Image: Dimensional diagram of the GoWISE USA Air Fryer Oven.

WARRANTY AND SUPPORT

The GoWISE USA GW44800-O Deluxe Air Fryer Oven includes a 1-year purchase warranty and free lifetime support from GoWISE USA. For assistance, please refer to the official GoWISE USA website or contact their customer service.