

[Manuals.plus](#) /

> [MITSUBISHI](#) /

> Mitsubishi E12T16426 Genuine Remote Controller (KM15H) User Manual

MITSUBISHI E12T16426

Mitsubishi E12T16426 Genuine Remote Controller (KM15H) User Manual

Model: E12T16426

1. PRODUCT OVERVIEW

This manual provides instructions for the Mitsubishi E12T16426 Genuine Remote Controller, also known as KM15H. This remote is designed for specific Mitsubishi Electric indoor units, including MSZ-GL24NA-U1 and NTXWST24A112AA. It allows for convenient control of your air conditioning or heating system.





Figure 1: Front view of the Mitsubishi E12T16426 remote controller, showing the display, ON/OFF button, and temperature adjustment buttons.

1.1. Remote Control Components

- **Display Screen:** Shows current settings such as temperature, mode, and fan speed.
- **ON/OFF Button:** (Red button) Powers the unit on or off.
- **Temperature Adjustment Buttons:** (White "TOO WARM" and blue "TOO COOL" buttons with arrows) Adjusts the desired temperature setting.
- **Battery Compartment:** Located on the back of the remote.



Type:KM15H
00109925



Figure 2: Back view of the Mitsubishi E12T16426 remote controller, indicating "Type: KM15H" and a serial number.

2. SETUP

2.1. Battery Installation

The remote controller requires two (2) AAA batteries for operation. Ensure correct polarity when inserting batteries.

1. Slide the battery cover located on the back of the remote control downwards to open.
2. Insert two new AAA alkaline batteries, matching the (+) and (-) terminals as indicated inside the compartment.
3. Slide the battery cover back into place until it clicks securely.

Note: If the remote control is not used for an extended period, remove the batteries to prevent leakage and damage.

3. OPERATING INSTRUCTIONS

This section details the basic operation of your Mitsubishi remote controller.

3.1. Power On/Off

- Press the **ON/OFF** button (red button) once to turn the indoor unit on.
- Press the **ON/OFF** button again to turn the indoor unit off.

3.2. Adjusting Temperature

- To increase the temperature, press the **TOO WARM** button (white button with upward arrow).
- To decrease the temperature, press the **TOO COOL** button (blue button with downward arrow).
- The display screen will show the set temperature.

Note: The specific functions and modes (e.g., Cool, Heat, Fan, Dry) are typically controlled by the indoor unit itself or may be accessible via other buttons not present on this simplified remote (KM15H). This remote primarily offers ON/OFF and temperature adjustment.

4. MAINTENANCE

4.1. Battery Replacement

Replace batteries when the display becomes dim or the remote control range decreases. Follow the battery installation steps in Section 2.1.

- Always replace both batteries at the same time.
- Use new AAA alkaline batteries.
- Dispose of used batteries according to local regulations.

4.2. Cleaning the Remote Control

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, waxes, or solvents, as these may damage the finish or internal components.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not operate the unit.	- Batteries are dead or inserted incorrectly. - Remote control is too far from the indoor unit. - Obstruction between remote and unit. - Infrared sensor on unit is blocked.	- Replace batteries, ensuring correct polarity. - Move closer to the indoor unit (within 25 feet/7 meters). - Remove any objects blocking the signal path. - Ensure the indoor unit's sensor is clear.
Display on remote is dim or blank.	Low battery power.	Replace batteries.

6. SPECIFICATIONS

Feature	Detail
Model Number	E12T16426 (KM15H)
Compatible Units	Mitsubishi Electric MSZ-GL24NA-U1, NTXWST24A112AA
Power Supply	2 x AAA Batteries (required)
Dimensions (L x W x H)	6.31 x 2.31 x 0.75 inches (approx.)
Weight	3.2 ounces (approx.)
Color	White

7. WARRANTY AND SUPPORT

7.1. Warranty Information

Specific warranty details for this genuine replacement part are typically provided at the point of purchase or with the original indoor unit documentation. Please refer to your purchase receipt or contact the seller for warranty terms and conditions.

7.2. Customer Support

For further assistance or technical support regarding your Mitsubishi Electric remote controller or compatible indoor unit, please contact Mitsubishi Electric customer service or your authorized dealer. Contact information can usually be found on the manufacturer's official website or in the documentation provided with your main unit.

Disclaimer: This manual is for informational purposes only. Mitsubishi Electric reserves the right to make changes to specifications and product design without prior notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question