

[Manuals.plus](#) /

› [DreamSky](#) /

› DreamSky DS206 Alarm Clock Radio User Manual

DreamSky DS206

DreamSky DS206 Alarm Clock Radio User Manual

Model: DS206

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your DreamSky DS206 Alarm Clock Radio. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PACKAGE CONTENTS

- DreamSky DS206 Alarm Clock Radio
- DC Power Adapter
- User Manual

Note: 3 x AAA batteries for backup are not included and must be purchased separately.

PRODUCT OVERVIEW

The DreamSky DS206 features a large, easy-to-read display and intuitive controls for convenient use.

Front Display

The front display shows the current time, AM/PM indicator, indoor temperature, and icons for active alarms and radio status. The large orange digits ensure visibility.



Image: Front view of the DreamSky DS206 Alarm Clock Radio, showing the large orange digital display with time, temperature, and various status icons.

Top Control Buttons

The top panel houses all control buttons for setting time, alarms, radio functions, and display brightness.

- **SNOOZE:** Activates snooze function when alarm sounds.
- **TIME SET:** Enters time setting mode.
- **ALARM SET:** Enters alarm setting mode.
- **FM ON/OFF:** Turns FM radio on or off.
- **SLEEP:** Sets the radio sleep timer.
- **VOL +/-:** Adjusts volume for radio and alarm.
- **TUNE +/-:** Tunes FM radio frequency.
- **12/24H / °C/°F:** Toggles between 12/24 hour format and Celsius/Fahrenheit temperature display.
- **ALARM ON/OFF:** Activates or deactivates the alarm.

SETUP

1. Power Connection

1. Insert the DC power adapter into the DC IN jack on the back of the clock radio.
2. Plug the adapter into a standard wall outlet. The display will light up.

2. Battery Backup Installation

The battery backup feature ensures that time and alarm settings are retained during a power outage.

1. Open the battery compartment cover on the bottom of the unit.
2. Insert 3 new AAA batteries (not included) according to the polarity markings (+ and -).
3. Close the battery compartment cover securely.

3. Setting Time

1. Press and hold the **TIME SET** button until the hour digits flash.
2. Press **TUNE +** or **TUNE -** to adjust the hour. Observe the AM/PM indicator.
3. Press **TIME SET** again, and the minute digits will flash.
4. Press **TUNE +** or **TUNE -** to adjust the minutes.
5. Press **TIME SET** once more to confirm and exit time setting mode.

4. Setting 12/24 Hour Format and Temperature Unit

Press the **12/24H / °C/°F** button to toggle between:

- 12-hour format (with AM/PM indicator) or 24-hour format.
- Celsius (°C) or Fahrenheit (°F) for temperature display.

5. Adjusting Display Brightness

The display brightness is adjustable from 0% (off) to 100% (maximum brightness).



Image: Visual representation of the DreamSky DS206's adjustable display brightness, from completely off to full illumination.

Press the **SNOOZE** button repeatedly to cycle through brightness levels or hold it to smoothly adjust the brightness

from 0% to 100%.

OPERATING INSTRUCTIONS

1. Alarm Settings

Setting Alarm Time

1. Press and hold the **ALARM SET** button until the alarm hour digits flash.
2. Press **TUNE +** or **TUNE -** to adjust the alarm hour.
3. Press **ALARM SET** again, and the alarm minute digits will flash.
4. Press **TUNE +** or **TUNE -** to adjust the alarm minutes.
5. Press **ALARM SET** once more to confirm and exit alarm setting mode.

Selecting Alarm Source and Volume

After setting the alarm time, you can choose to wake up to a buzzer or FM radio.

Wake up to buzzer or radio

Buzzer – 3 level volume(high/medium/low) optional
Radio– 0–15 level volume optional



Image: The DreamSky DS206 Alarm Clock Radio on a nightstand next to a sleeping person, illustrating the option to wake up to either a buzzer or FM radio.

1. While the alarm time is flashing (or immediately after setting it), press **ALARM SET** again to select the alarm

source. The display will show either "BUZ" or the FM radio frequency.

2. If "BUZ" is selected, press **VOL +** or **VOL -** to choose one of 3 buzzer volume levels (low, medium, high).
3. If FM radio is selected, press **VOL +** or **VOL -** to set the radio alarm volume from L0 to L15.
4. Press **ALARM SET** to confirm your selection.

Activating/Deactivating Alarm

Press the **ALARM ON/OFF** button to toggle the alarm on or off. An alarm icon will appear on the display when the alarm is active.

2. Snooze Function

When the alarm sounds, press the **SNOOZE** button to temporarily silence the alarm for 8 minutes. The alarm will sound again after 8 minutes. This can be repeated for up to one hour.

To turn off the alarm completely for the day, press any other button (e.g. **ALARM ON/OFF**, **FM ON/OFF**) or let it sound for 60 minutes without intervention.

3. FM Radio Operation

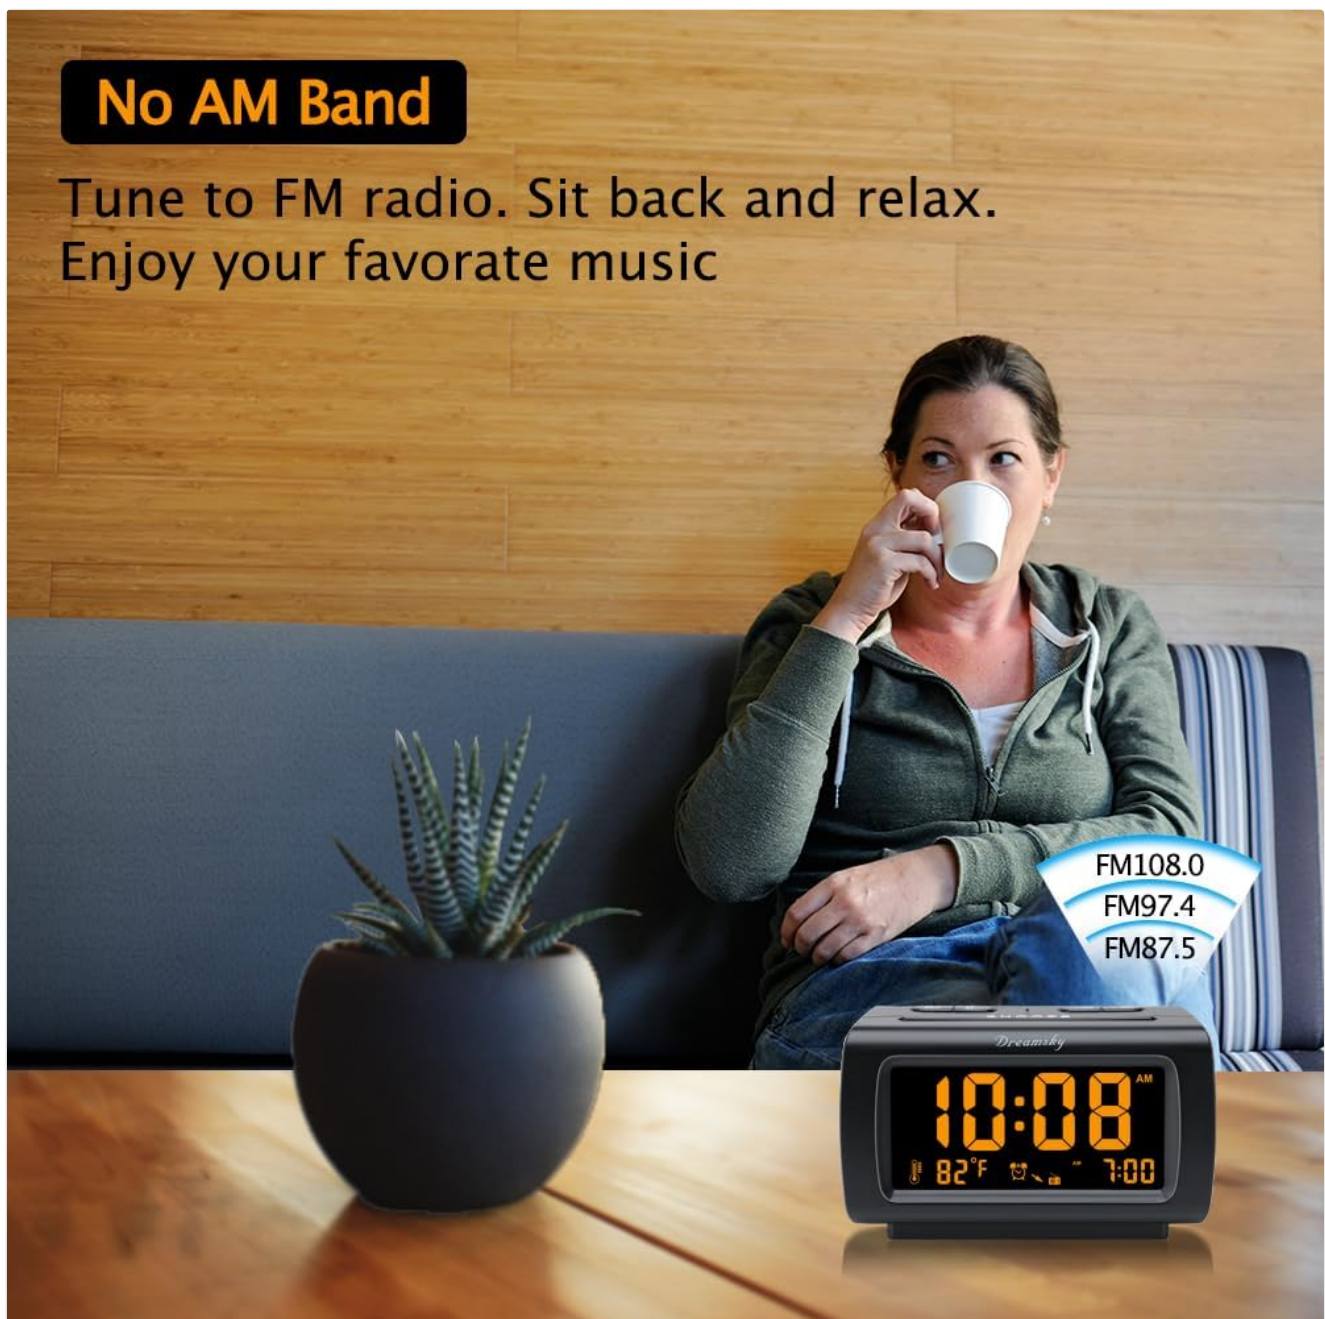


Image: The DreamSky DS206 Alarm Clock Radio displaying FM radio frequencies, highlighting its radio capabilities.

Turning Radio On/Off

Press the **FM ON/OFF** button to turn the FM radio on or off.

Tuning Stations

- **Manual Tuning:** Press **TUNE +** or **TUNE -** repeatedly to adjust the frequency step by step.
- **Auto Scan:** Press and hold **TUNE +** or **TUNE -** for 2 seconds to automatically scan for the next available station.

Adjusting Radio Volume

When the radio is on, press **VOL +** or **VOL -** to adjust the volume from L0 (minimum) to L15 (maximum).

Sleep Timer

The sleep timer allows the radio to play for a set duration before automatically turning off.

1. With the radio on, press the **SLEEP** button repeatedly to cycle through sleep timer options: 10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 110, 120 minutes, or OFF.
2. The radio will play for the selected duration and then turn off automatically.

4. USB Charging Port

USB port to charge your cellphone ,tablet or other smart device.(USB cable is not included)



USB charging Port



Image: The DreamSky DS206 Alarm Clock Radio with a smartphone connected to its side USB port, demonstrating its charging capability.

The clock radio features a USB port (5V/2.1A output) on the side for charging compatible electronic devices such as smartphones or tablets. Connect your device's USB charging cable to this port.

Note: The USB port is for charging only and does not support data transfer. Ensure your device's charging requirements do not exceed 2.1A.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace backup batteries annually or when the clock loses time during power interruptions.
- **Placement:** Place the unit on a stable, flat surface away from direct sunlight, heat sources, and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or flickering.	Power adapter not connected properly; power outage; brightness set to 0%.	Check power connection. If power outage, check backup batteries. Adjust brightness using SNOOZE button.
Alarm does not sound.	Alarm is not activated; alarm volume is too low; incorrect alarm time set.	Ensure alarm icon is visible. Adjust alarm volume. Verify alarm time.
Radio static or poor reception.	Weak signal; antenna not extended.	Adjust the position of the FM antenna wire on the back of the unit. Try repositioning the clock radio.
Temperature reading is inaccurate.	Internal heat affecting sensor; sensor obstruction.	Ensure the unit is not placed near heat sources. Allow time for the internal sensor to stabilize. Lowering display brightness may also help.
USB charging is slow or not working.	Device requires more than 2.1A; cable issue; device not compatible.	Check your device's charging specifications. Use a different USB cable. Ensure the clock radio is powered.

SPECIFICATIONS

Product Dimension



Image: A diagram illustrating the physical dimensions of the DreamSky DS206 Alarm Clock Radio.

- **Brand:** DreamSky
- **Model:** DS206
- **Display Type:** Digital LCD with Orange LED
- **Power Source:** Corded Electric (DC Adapter included)
- **Battery Backup:** 3 x AAA batteries (not included)
- **FM Frequency Range:** 87.5 - 108.0 MHz
- **USB Charging Output:** 5V / 2.1A
- **Product Dimensions:** 5" (W) x 2.7" (H) x 3.2" (D)
- **Material:** Plastic
- **Special Features:** 0-100% Dimmable Brightness, Adjustable Alarm Volume, Sleep Timer, Indoor Temperature Display (°C/°F), 12/24H Time Format

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question