

Tefal OTG024

Tefal Delicio OTG024 Oven Toaster Griller 24 Liters User Manual

Model: OTG024 | Capacity: 24 Liters

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Tefal Delicio OTG024. Retain this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies,

walls, and the like, when in operation.

- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar materials.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

2. PRODUCT OVERVIEW

The Tefal Delicio OTG024 is a versatile 24-liter Oven Toaster Griller designed for various cooking needs. It features multiple cooking modes, precise temperature control, and a convenient timer.



Image: Front view of the Tefal Delicio OTG024 Oven Toaster Griller.

Key Features:

- **Capacity:** 24 liters, suitable for 4-6 people.
- **Power:** 1400W for efficient cooking.
- **Cooking Modes:** 6 versatile modes including Broil, Bake, Toast, Roast, Grill, and Rotisserie.

- **Rotisserie:** 360-degree motorized rotisserie for uniform grilling.
- **Heating Elements:** 4 stainless steel heating elements.
- **Temperature Control:** Adjustable from 100 to 250 degrees Celsius.
- **Timer:** 0 to 60 minutes timer with auto shut-off function.
- **Illuminated Chamber:** For easy monitoring of cooking progress.
- **Door Style:** Dropdown Door.
- **Special Feature:** Removable Crumb Tray.

3. COMPONENTS AND ACCESSORIES

Your Tefal Delicio OTG024 comes with the following components and accessories:

- Oven Toaster Griller Unit
- Oven toaster grill rack
- Skew rods
- Rotisserie rod and fork
- Non-stick baking Tray
- Wire Rack
- Removable crumb Tray
- Rotisserie Tongs
- Grill & Bake Tray Tong



Image: Various accessories included with the OTG, such as racks, trays, and rotisserie components.

4. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the oven from its packaging.
2. Remove all packing materials, promotional labels, and tape from the oven.
3. Remove all accessories from the oven cavity.

Placement:

- Place the oven on a flat, stable, heat-resistant surface.
- Ensure there is adequate ventilation around the oven (at least 10 cm clearance on all sides).
- Do not place the oven near flammable materials like curtains or walls.

Before First Use:

1. Wipe the exterior of the oven with a damp cloth.

2. Wash all accessories (baking tray, wire rack, rotisserie parts, etc.) in warm, soapy water, rinse, and dry thoroughly.
3. Insert the crumb tray at the bottom of the oven.
4. Plug the power cord into a suitable electrical outlet (1400W, 220-240V).
5. It is recommended to run the oven empty for about 15 minutes at maximum temperature (250°C) with the function set to 'Bake' to burn off any manufacturing residues. A slight odor or smoke may be present during this process; ensure good ventilation.

WHY CHOOSE Tefal?

TEFAL
Thermosignal

FOR
20 YEARS

EXTRA RESISTANT COATING

TITANIUM NON-STICK
UP TO **2X** Longer

REINFORCED WITH TITANIUM PARTICLES

NON-STICK DURABILITY OVER TIME:
UP TO
8 YEARS
32,000 CYCLES

THE PERFECT SEARING TEMPERATURE FOR BETTER RESULTS

WAIT | START

HOMOGENEOUS HEAT DIFFUSION

ULTRA THICK BASE

UP TO **5mm**

SUPERIOR INDUCTION TECHNOLOGY

EXTRA LARGE **STAINLESS STEEL GRID**

INDUCTION TECHNOLOGY EXPERIENCE

QUALITY COOKWARE SINCE 1956

MADE IN FRANCE

27 YEARS

Tefal
COOKING PRECISION

Image: Rear view of the OTG, illustrating the power cord connection.

5. OPERATING INSTRUCTIONS

The Tefal Delicio OTG024 features three control knobs for temperature, cooking mode, and timer.



Tefal®

1400 Watt Powerful

Delivers delicious taste with optimally cooked dishes

1400W



Image: Close-up of the control panel with knobs for temperature, cooking mode, and timer.

Control Knobs:

- **Top Knob (TEMP/°C):** Adjusts the cooking temperature from 100°C to 250°C.
- **Middle Knob (SELECTED):** Selects the cooking mode.
- **Bottom Knob (TIMER/min):** Sets the cooking time from 0 to 60 minutes. Includes an 'ON' position for continuous operation.

Cooking Modes:

The OTG offers 6 cooking modes:

- **Bake:** Uses both upper and lower heating elements for even baking. Ideal for cakes, cookies, and casseroles.
- **Broil/Grill:** Uses only the upper heating elements for grilling and browning. Suitable for toasts, open sandwiches, and grilling vegetables.
- **Toast:** Similar to broil, often used for bread.
- **Roast:** Combines heating from both elements, often at a lower temperature for longer periods, suitable for roasting meats and vegetables.

- **Rotisserie:** Activates the rotisserie function along with heating elements (usually upper and lower) for uniform roasting of whole chicken or large meat pieces.
- **Combination Modes:** Specific settings might combine upper/lower elements or rotisserie with different heating patterns. Refer to the knob markings for precise selection.



Image: The rotisserie function in operation, grilling food evenly.

General Operation Steps:

1. **Prepare Food:** Place your food on the appropriate accessory (wire rack, baking tray, or rotisserie rod).
2. **Insert Food:** Carefully slide the accessory with food into the oven.
3. **Set Temperature:** Turn the **TEMP/°C** knob to the desired temperature.
4. **Select Mode:** Turn the **SELECTED** knob to the desired cooking mode.
5. **Set Timer:** Turn the **TIMER/min** knob to the desired cooking time. The oven will start heating. The indicator light will illuminate.
6. **Monitor Cooking:** Use the illuminated chamber to observe the cooking process.
7. **Completion:** The oven will automatically shut off and a bell will ring when the timer reaches zero. If you wish to stop cooking earlier, turn the timer knob to 'OFF'.

8. **Remove Food:** Using oven mitts and the provided tongs, carefully remove the cooked food and accessories from the oven.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Tefal Delicio OTG024.

General Cleaning:

1. Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. Do not immerse the oven body, cord, or plug in water or any other liquid.
3. **Exterior:** Wipe the exterior surfaces with a damp cloth and mild detergent. Dry thoroughly.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Avoid scratching the interior coating.
5. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth.
6. **Accessories:** Wash the wire rack, baking tray, rotisserie rod, and other accessories in warm, soapy water. Rinse and dry thoroughly. These are generally not dishwasher safe unless specified.

Removable Crumb Tray:

- The crumb tray should be cleaned regularly to prevent grease buildup and potential fire hazards.
- Slide out the crumb tray from the bottom of the oven.
- Discard any crumbs or food particles.
- Wash the tray in warm, soapy water, rinse, and dry completely before reinserting.

Storage:

- Ensure the oven is clean and dry before storing.
- Store the oven in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Tefal Delicio OTG024, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; faulty outlet; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker. Turn the timer knob past '0' to set a cooking time.
Food is not cooking evenly.	Incorrect rack position; uneven food placement; door opened too frequently.	Ensure food is placed centrally on the rack. Use the recommended rack position for the cooking mode. Avoid opening the door unnecessarily.
Excessive smoke or odor during cooking.	Food spills; grease buildup; first use residue.	Clean the interior and crumb tray thoroughly. Ensure no food is directly touching heating elements. A slight odor is normal during first use.

Problem	Possible Cause	Solution
Rotisserie is not turning.	Rotisserie rod not properly engaged; food too heavy or unbalanced.	Ensure the rotisserie rod is correctly inserted into the motor drive and support. Balance the food evenly on the rod.
Timer not working correctly.	Timer knob not set properly.	Ensure the timer knob is turned past the '0' mark to activate. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact Tefal customer support.

8. SPECIFICATIONS

Detailed specifications for the Tefal Delicio OTG024 Oven Toaster Griller:

Feature	Specification
Brand	Tefal
Model Name	Delicio 24L
Item Model Number	5200000896
Capacity	24 Liters
Power	1400W
Voltage	Standard (typically 220-240V for India)
Colour	Black/Silver
Control Type	Knob
Door Style	Dropdown Door
Finish Type	Stainless Steel, Glass
Door Material Type	Tempered Glass
Item Weight	6 kg 300 g
Item Dimensions LxWxH	3.52 x 5.06 x 4.22 Meters (Note: These dimensions seem unusually large for an OTG and might be an error in the source data. Please refer to product packaging for accurate dimensions.)

9. WARRANTY AND SUPPORT

Your Tefal Delicio OTG024 comes with a manufacturer's warranty and dedicated customer support.

Warranty Information:

- This product is covered by a **2-year warranty** from the date of purchase.
- The warranty covers manufacturing defects and malfunctions under normal use.
- Please retain your purchase receipt as proof of purchase for warranty claims.
- The warranty does not cover damage caused by misuse, accident, unauthorized repairs, or normal wear and tear.

Customer Support:

For any queries, service requests, or warranty claims, please contact Tefal customer support through their official channels. Refer to the product packaging or the official Tefal website for contact details specific to your region.