

[Manuals.plus](#) /

› [Amaz247](#) /

› Amaz247 Replacement Remote for Hitachi Roku TV - Instruction Manual

Amaz247 8541715521

Amaz247 Replacement Remote for Hitachi Roku TV - Instruction Manual

1. PRODUCT OVERVIEW

The Amaz247 Replacement Remote is designed to provide seamless control for your Hitachi Roku TV. This infrared (IR) remote features essential functions including volume control and TV power buttons, along with convenient shortcut buttons for popular streaming services.

Key Features:

- **Universal Compatibility:** Works with all Hitachi Roku TV models.
- **Instant Setup:** Requires no pairing or additional programming. Simply insert batteries and begin use.
- **Dedicated App Shortcuts:** Includes direct access buttons for Netflix, Sling, Showtime, and HBO/NOW.
- **Essential Controls:** Features TV power, volume control, and mute buttons.
- **Responsive Performance:** Offers a maximum operation distance of up to 25 ft and a TV response time of less than 0.1 second.
- **Durable Design:** Constructed from high-grade ABS and silicon for comfortable handling and longevity.

Important Compatibility Notes:

- **NOT Compatible With:** Roku Players (box), Roku Stick, Roku 1, 2, 3, 4, Roku Express, or standard Hitachi TVs (non-Roku models).
- **Battery Requirement:** Requires 2 AAA batteries (not included).



ROKU TV



YES



Any other Roku Players
Roku Stick
Roku 1,2,3,4
Roku Express
Roku Premiere
Roku Ultra

NO



Figure 1: Compatibility overview, indicating the remote works with Roku TVs but not standalone Roku streaming devices.

2. SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and - ends match the diagram inside the compartment).
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2: Rear view of the remote, highlighting the battery compartment.

Initial Use:

The Amaz247 Replacement Remote is designed for immediate use with compatible Hitachi Roku TVs. No pairing or programming steps are required. Once batteries are installed, point the remote towards your TV and begin operation.

Note: Ensure there are no obstructions between the remote's infrared emitter and the TV's IR receiver for optimal performance.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the remote's button layout for efficient navigation and control of your Hitachi Roku TV.





Figure 3: Front view of the remote control with all buttons visible.

Button Functions:

- **Power Button** (⏻): Turns the TV on or off.
- **Back Button** (⏮): Returns to the previous screen or menu.
- **Home Button** (🏠): Navigates to the Roku TV home screen.
- **Directional Pad (Blue Cross)**: Use the Up, Down, Left, and Right arrows to navigate menus and select items.
- **OK Button**: Confirms selections.
- **Volume Up/Down Buttons** (⏮/⏭): Located on the side of the remote, these control the TV's volume.
- **Mute Button** (🔇): Located on the side of the remote, mutes or unmutes the TV audio.
- **Instant Replay** (⏮): Jumps back a few seconds in video playback.
- **Sleep Timer** (⌚): Activates the sleep timer function (if supported by TV).
- **Asterisk/Options Button** (*): Accesses additional options or settings within an app or menu.
- **Rewind/Fast Forward/Play/Pause Buttons** (⏮/⏭/⏯/⏸): Standard media playback controls.
- **Dedicated App Shortcut Buttons**: Directly launch Netflix, Sling, Showtime, and HBO/NOW with a single press.



Figure 4: Side view of the remote, showing the volume and mute controls.

Video Demonstration:

Your browser does not support the video tag.

Video 1: A brief demonstration of the remote's functionality with a Hitachi Roku TV, showcasing button responses and app launching.

4. MAINTENANCE

Battery Replacement:

If the remote's performance degrades or it stops responding, replace the batteries. Follow the battery installation steps outlined in Section 2. Always use fresh AAA batteries.

Cleaning:

To clean the remote, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

5. TROUBLESHOOTING

Remote Not Responding:

- Ensure fresh AAA batteries are correctly installed.
- Check for any obstructions between the remote and the TV's infrared receiver.
- Verify that the remote is pointed directly at the TV.

App Shortcuts Not Working:

- Confirm that your TV is a Hitachi Roku TV model. This remote is specifically designed for these models.
- Ensure the respective streaming apps are installed and updated on your Roku TV.

Compatibility Issues:

- Re-verify that your device is a Hitachi Roku TV. This remote is not compatible with standalone Roku players (e.g., Roku Stick, Roku Express) or non-Roku Hitachi TVs.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	5 x 2 x 1 inches
Item Weight	1.44 ounces
Model Number	8541715521
Batteries Required	2 AAA batteries (not included)
Manufacturer	GEC
Special Feature	Ergonomic design

Color	Black
Max Supported Devices	1 (Television)
Date First Available	December 6, 2018

7. SUPPORT

For any questions or further assistance regarding your Amaz247 Replacement Remote, please contact the manufacturer, GEC, or refer to the product listing for additional support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07LCTYWCR>

More documents and user manuals: <https://manuals.plus/>