

[Manuals.plus](#) /

› [m-e](#) /

› M-e modern-electronics 41157 Wireless Doorbell Receiver User Manual

m-e 41157_SML

M-e modern-electronics 41157 Wireless Doorbell Receiver User Manual

INTRODUCTION

Thank you for choosing the M-e modern-electronics 41157 Wireless Doorbell Receiver. This manual provides essential information for the safe and efficient operation of your device. Please read these instructions carefully before use and retain them for future reference.

SAFETY INSTRUCTIONS

- Ensure the receiver is plugged into a readily accessible power outlet.
- Do not expose the device to water, moisture, or extreme temperatures.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep the device away from direct sunlight and heat sources.
- Clean the device only with a dry, soft cloth. Do not use liquid cleaners.

PACKAGE CONTENTS

- 1 x M-e modern-electronics 41157 Wireless Doorbell Receiver

PRODUCT OVERVIEW

The M-e modern-electronics 41157 is a compact wireless doorbell receiver designed to plug directly into a standard wall outlet. It features indicator lights for status and buttons for adjusting settings.



Figure 1: Front view of the M-e modern-electronics 41157 Wireless Doorbell Receiver. The device is white with a power plug on the back, indicator lights on the front (red for power, blue for signal strength, red for low battery), and a large circular button with the 'm-e' logo.



Figure 2: The receiver is shown being inserted into a standard electrical wall socket. An arrow indicates the direction of insertion for the foldable plug.



Figure 3: A close-up view of the side of the receiver, revealing small buttons labeled 'Mode', 'Volume', and 'Reset'. These buttons are used for adjusting the device's settings.

SETUP

1. **Power On:** Plug the M-e modern-electronics 41157 Wireless Doorbell Receiver into a standard electrical wall outlet. The power indicator light (red) on the front should illuminate.
2. **Pairing (if required):** If this is a new setup or if the receiver is not responding to your doorbell transmitter, you may need to pair it. Consult your doorbell transmitter's manual for specific pairing instructions. Typically, this involves pressing a pairing button on the receiver (often the central 'm-e' button or a dedicated 'Reset' button as shown in Figure 3) and then activating the doorbell transmitter within a short timeframe.
3. **Test:** Press your doorbell transmitter button to test the connection. The receiver should chime.

OPERATING

- **Receiving Signal:** When the doorbell transmitter is pressed, the receiver will play the selected chime and may flash its indicator lights.
- **Adjusting Volume:** Use the 'Volume' button (refer to Figure 3) on the side of the receiver to cycle through available volume levels.
- **Changing Chime Melody:** Use the 'Mode' button (refer to Figure 3) on the side of the receiver to cycle through different chime melodies.
- **Indicator Lights:**
 - **Red (Top):** Power indicator. Lit when the device is powered on.
 - **Blue (Middle):** Signal strength or activity indicator. May flash when a signal is received.
 - **Red (Bottom):** Low battery indicator for the transmitter (if supported and paired).

MAINTENANCE

- **Cleaning:** Disconnect the receiver from the power outlet before cleaning. Wipe the exterior with a dry, soft cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the device for an extended period, unplug it from the wall outlet and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Receiver does not chime.	No power; not paired; out of range; transmitter battery low.	Check power outlet; re-pair receiver and transmitter; move receiver closer to transmitter; replace transmitter battery.
Chime is too quiet/loud.	Volume setting is incorrect.	Press the 'Volume' button to adjust the sound level.
Receiver makes unexpected sounds.	Interference; faulty unit.	Move receiver away from other electronic devices; contact support if problem persists.

SPECIFICATIONS

- **Model Number:** 41157_SML
- **Product Dimensions:** 1.57 x 2.52 x 4.69 inches
- **Item Weight:** 8.7 ounces
- **ASIN:** B07LCXZ3J6
- **Manufacturer:** m-e modern-electronics
- **Date First Available:** July 14, 2022

WARRANTY AND SUPPORT

This product is covered by the manufacturer's standard warranty. For warranty claims, technical support, or service inquiries, please contact m-e modern-electronics directly through their official website or customer service channels. Please have your model number (41157_SML) and purchase information ready.

© 2023 m-e modern-electronics. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question